




Folding Tonneau Cover

Installation Instructions, Operating Instructions, Product Use and Care

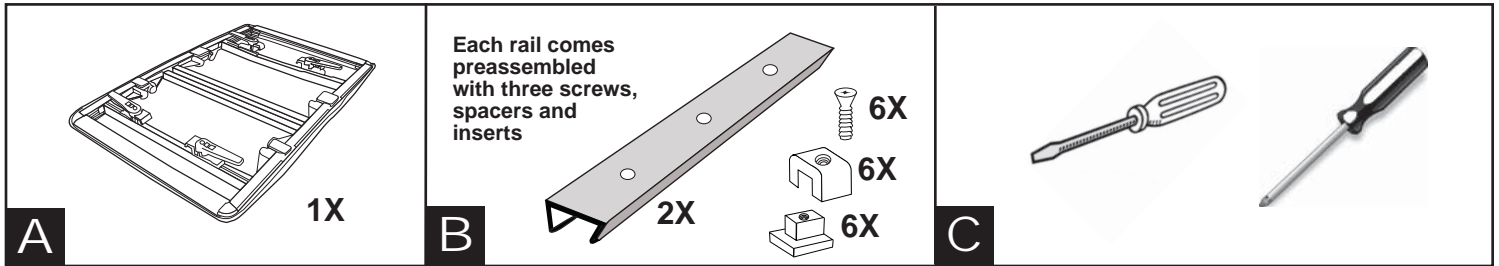

PREVENTIVE MAINTENANCE AND CUSTOMER CARE

After a setting period (500 mile maximum), it may be necessary to re-adjust the clamp load after foam isolators take a set to maintain the uniform gap between the Tonneau Cover and bed rails to prevent the lids from scratching them.

Check the bracket clamp loads every 3 months or 5,000 miles. The cover may need to be periodically adjusted to fit the box bed.

- Wash only with mild soap & dry with a clean cloth.
- Avoid the use of automatic "brush-styleroller-type" car washes; only use 'soft-wipe' type systems
- Do not use cleaning solvents of any kind.
- Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- We recommend the same quality products normally used for vinyl tops to keep your cover clean. When using a protectant, be sure that it is water based.



WARNING AND CAUTION

The Tonneau Cover must be totally closed and secured with clamps, or if folded into stowed position, it must be secured with straps provided. Do not load any measurable weight onto to the top of the Tonneau Cover. This will damage the Tonneau Cover frame.

- Serious personal injury and property damage can occur if vehicle is driven without both black buckles at the front of cover fastened.
- Prior to vehicle operation, clamps must be secured such that the clamps' lips tightly grip the inner bedwall structure.
- Do not use any part of this tonneau cover as a tie down.

MANTENIMIENTO PREVENTIVO

Luego de un período (de 500 millas como máximo), es posible que se deba reajustar la carga de abrazadera después de que los aisladores de esponja se ajusten para mantener una separación uniforme entre la Cubierta Tonneau y los largueros de la caja para evitar que las tapas los raspen.

Inspeccione las cargas de abrazaderas cada 3 meses o 5000 millas. Es posible que se deba ajustar la cubierta de vez en cuando para que se quepa con la caja.

- Lave solamente con el jabón suave y seque con un paño limpio.
- Evite el uso auto-lavados automáticos con cepillos.
- No utilice los disolventes limpiadores de ningún tipo.
- Los auto-lavados de la presión son aceptables mientras usted sostenga la varita no más cerca de dos pies de la cubierta.
- Se recomienda usar los productos de la misma calidad que se usan normalmente para las tapas del vinilo para mantener su cubierta limpia. Al usar un producto protector, sea seguro que es a base de agua.



USO Y CUIDADO


La Cubierta Tonneau debe estar cerrada o atada con correas cuando el vehículo está en movimiento.

No cargue ningún peso significativo sobre la Cubierta Tonneau. Podría torcer el bastidor.

No utilice auto-lavados con cepillos: utilice sólo auto-lavados con limpiadores suaves.

- Heridas graves a las personas o el daño a las propiedades se pueden ocurrir si se maneje el vehículo sin que las dos hebillas negras de la parte delantera de la cubierta se abrochen.
- Antes de manejar el vehículo, se debe asegurar que las bordes de las abrazaderas se sujeten fijamente con la parte interior de la caja.
- No use ninguna parte de esta Cubierta Tonneau para atar cosas a la caja.
- Desabroche las hebillas sólo cuando se instala o se quita la cubierta.



**Remove End Cap Assembly from Utility Track.
Save for re-use.
Repeat for other side.**

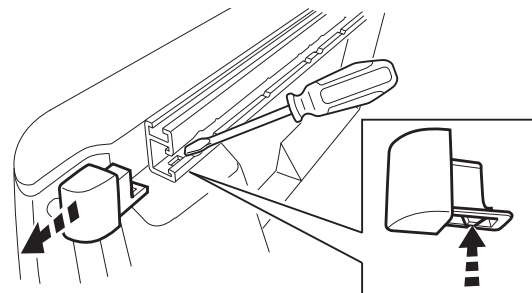

1

Position tie downs toward bed center. Insert Item B into the Utility Track as shown. Repeat for other side.


Slide black track to a position about 1-3mm from front of truck

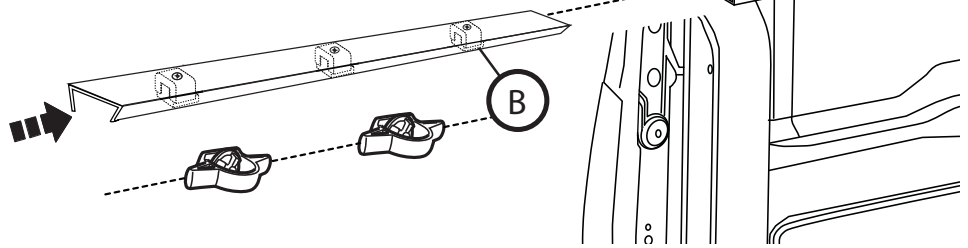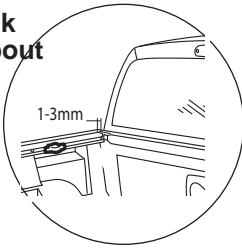


If the track assembly can not be slid into the utility track easily (due to metal burrs in the track), disassemble Item B by removing the screws and the 3 sets of nylon adaptors and spacers per side and proceed to Steps 2B, 2C, 2D.

2A

Slide lower adaptors into utility tracks.

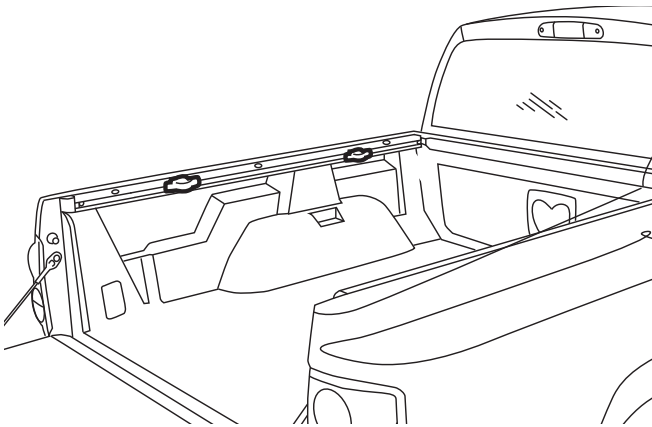


3x

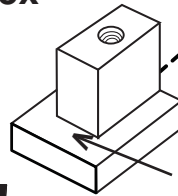

This end must face the tailgate on all 3 pieces, both sides


2B

Reposition black metal rail over lower utility track with the three inserts in line with the holes in the black metal rail. Insert screws and tighten.

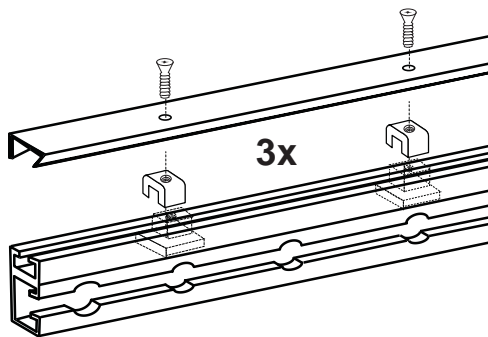



2C

Replace end caps, both sides.

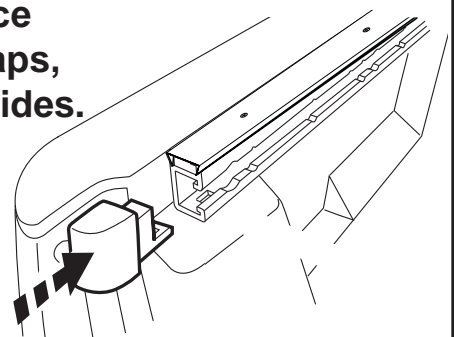

2D



Installing the tonneau cover on the vehicle
Attach the front clamps to the cargo rail

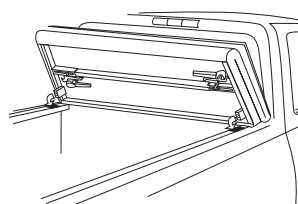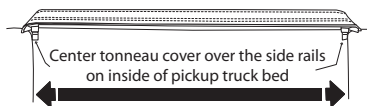

1. Position tonneau cover onto the top of the pickup box. See Figure at left.
2. Align the front edge of the cover even with the front edge of the front bed rail and evenly position the cover so that it is centered on the truck bed from side to side
3. Lower the front clamp from its storage position.
4. Proceed to 3B for the correct way to latch tonneau to cargo rails.

3A


Installing the tonneau cover on the vehicle (continued)

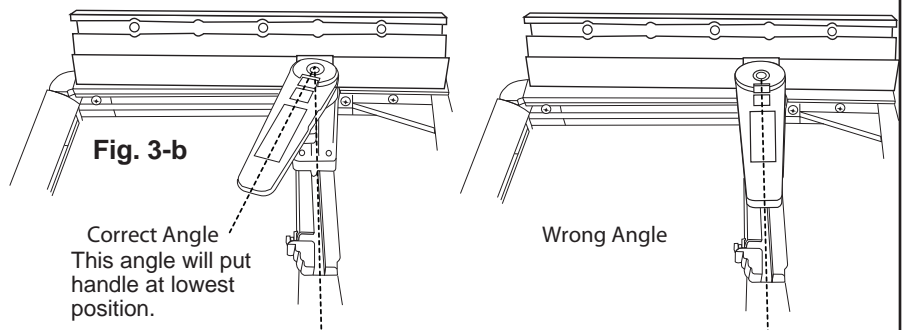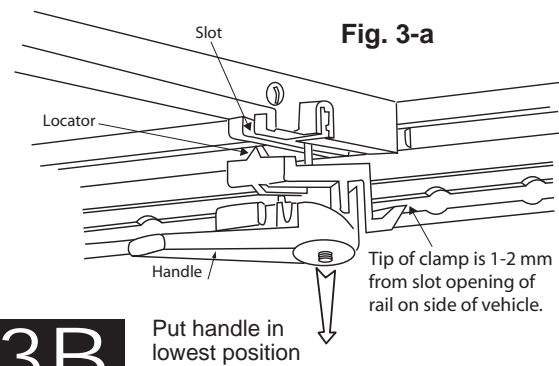

Handle must be at lowest position when inserting clamp into rail. Be sure the handle is approximately 15° from center.

3B

Securing the FRONT clamps to cargo rail and clamp adjustment procedure

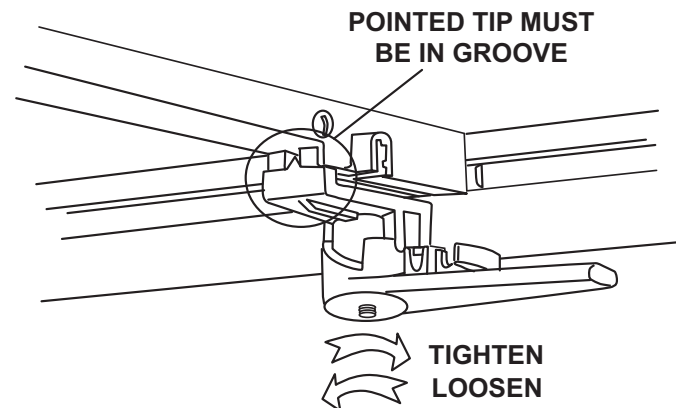

Double check that the locator is in the slot and that the tonneau has compressed the side seals to the bedrail covers. If the handle seems loose or the tonneau can be moved/shifted easily, follow procedure below.


- 1a. If clamp is too loose
 1. Push handle forward to release from clamped position.
 2. Disengage clamp from inner lip of bed rail and slide assembly inboard.
 3. Adjust clamp height on bolt by rotating the entire clamp/handle assembly **CLOCKWISE** (as viewed from the top).
 4. Re-attach clamps as indicated in steps 3 and 4.
- 1b. If the handle can't be fully pulled rearward (as shown):
 1. Return handle to the fully disengaged position.
 2. Disengage clamp from inner lip of bed rail and slide assembly inboard.
 3. Adjust the clamp height by rotating the entire clamp/handle assembly **COUNTER-CLOCKWISE**.
 4. Re-attach clamps as indicated in steps 3 and 4.

1. Properly adjust handle assembly so the clamp is 1-2 mm beneath the cargo rail opening (Fig. 3-a and Fig. 3-b).
2. Tilt the handle slightly to insert the locator into the slot of the bow support (Fig 3-a).
3. Secure the clamp to the cargo rail by pulling the handle rearward (Fig. 5-a).

4

Tonneau locking feature (front clamps only)


1. There are locking features on front clamps only. With the handle engaged (clamped position), push the locking tab on the handle to engage lock. See Fig. 5-a.

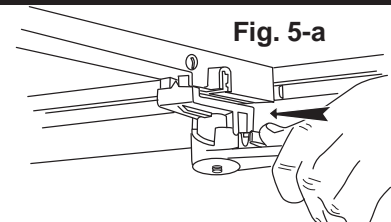

2. Repeat clamp attachment steps 3B thru 5 for the opposite side.

5

Unfolding tonneau and completing the installation Attach the rear clamps to the cargo rail

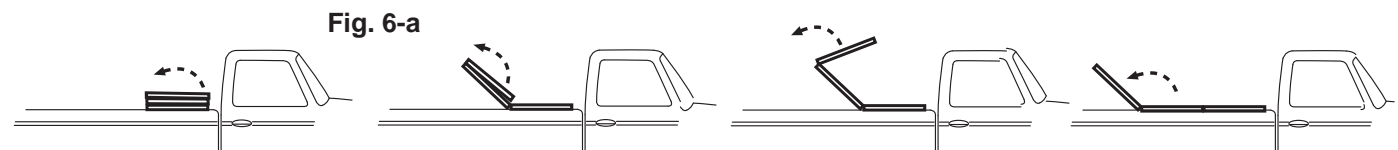

1. Unfold cover (Fig. 6-a).
2. Repeat Steps 3B and 4 for rear clamps.

6

Folding tonneau to the stowed position

1. Unlatch rear clamps and place in stowed position. See Fig 7-a.
2. Fold cover forward. See Fig. 7-b.

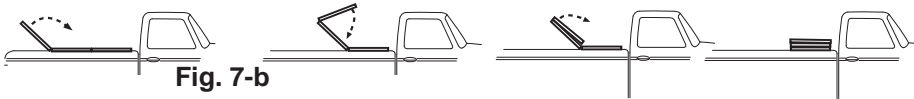


Fig. 7-b

3. Unsnap the retaining strap from the front bow and insert the male end into the female end of the front retention buckle. See Fig. 7-c
4. Verify both buckles are attached by pulling on the strap.

WARNING: Damage to personal property and possible injury may occur, if; vehicle is operated without both retaining straps fastened securely when the cover is in open position, or if the attachment clamps are not firmly secured to the box lip, or if the clamps are not properly stowed using the retention feature. See Fig. 7-a.

USO Y CUIDADO: La cubierta de la capota posterior debe estar cerrado o sujetado con cinturón el vehículo está en movimiento. No cargue ningún peso significativo sobre la cubierta de la capota posterior. Podría torcer el bastidor.

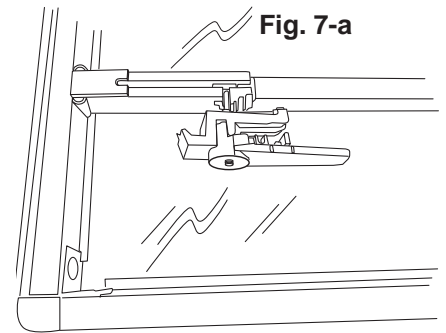


Fig. 7-a

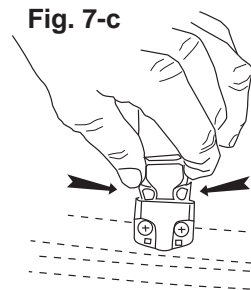


Fig. 7-c

NOTE : If stowing cover completely, failure to do this step **WILL** result in damage to the cover surface, from handle to cover outer surface contact !!!

7

How to remove the tonneau cover

1. Follow the procedure in Step 7, Folding tonneau to the stowed position.
2. Before rotating the front handles, disengage the locking tabs by pulling them rearward on both front handles. See Fig. 8-a
3. Rotate handles inboard release compression.
4. Pull clamp down and rotate assembly to disengage it from the lip of the truck box.
5. Rotate cover to expose handles.
6. Align the clamp assembly bolt (shaft of the handle) with the retention feature and rotate handle assembly flat onto the panel and press firmly to secure. See Figure 7-a.
7. Remove the tonneau cover off the vehicle.
8. Exercise caution when lifting due to the cover's weight.
9. It is suggested that two people lift cover to avoid damage to cover and truck.

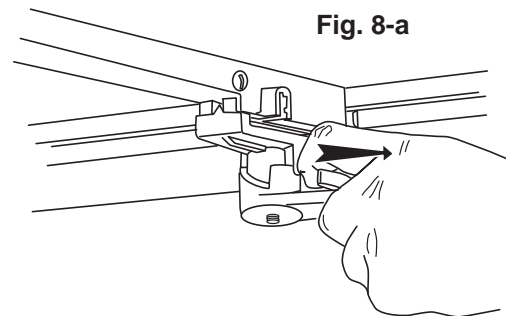


Fig. 8-a

8

Other items

SECURITY- CARGO PROTECTION

If extra cargo security is desired and your vehicle does not have a locking endgate. See your truck accessory reseller for endgate lock options.

COVER SECURITY

For additional theft prevention of the tonneau cover, the front handle is equipped with an eyelet that will accept a 1/4" pad lock. See Fig. 9.

NOTE: Prior to operating vehicle, check all four clamps to make sure they are engaged.

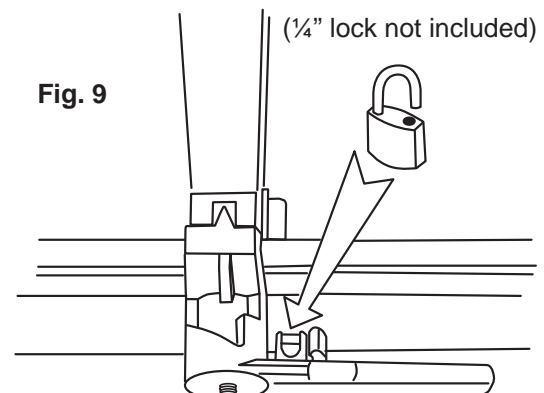


Fig. 9

9