

2004 DODGE DAKOTA PICK-UP (AN)

PARTS CATALOG

ILLUSTRATION AND TEXT
(CHASSIS - BODY - TRIM)

September 2003

SUPERSEDES
August 2003
ENGLISH



Jeep

CHRYSLER • PLYMOUTH • DODGE • JEEP

THE MOPAR DIFFERENCE

INDEX TO INFORMATION PAGES

The use of this Parts Catalog and the arrangement of information herein is explained in the General Information Section as indexed below.

Abbreviations	INF-13
Alphabetic Index	INF-10
Body Code Plate Interpretation	INF-12
Catalog Groups - Titles & Contents	INF-2
How to Use This Catalog and Locate Parts	INF-8
Illustration Index	INF-10
Illustration Numbering Index	INF-9
Index.....	INF-1
Logical Illustration Index.....	INF-3
Logical Illustrations	INF-9
Numerical Index	INF-10
Page Numbering.....	INF-9
Part Packages	INF-10
Standard Parts.....	INF-10
Symbols Used in this Catalog.....	INF-9
VIN Plate Decoding Information	INF-11

CATALOG GROUPS - TITLES & CONTENT

Group	Content
001	Component Parts for Mopar Accessories
002	Front Suspension & Drive
003	Rear Axle
004	Parking Brake
005	Service Brakes
006	Clutch
007	Cooling
008	Electrical
009	Engine Mounting
011	Exhaust
013	Frames and Bumpers
014	Fuel
016	Propeller Shafts and U-Joints
017	Rear Suspension
019	Steering
022	Wheels, Covers and Jacks
024	Air Conditioning & Heater
025	Emission Systems
08A	Instrument Panel and Radios and Consoles
233	Transfer Case Model 233
23D	Wiper/Lock Cylinder and Keys
244	Transfer Case Model 244
3.7L	Engine 3.7L Six Cylinder
3500	Manual Transmission 5 Speed
4.7L	Engine 4.7L Eight Cylinder
42RLE	Automatic Transaxle 4 Speed
45RFE	Automatic Transmission Multi-Speed
DAN	Doors and Related Parts
EAN	Exterior Ornamentation
IAN	Interior Trim
LBLS	Labels All Vehicle Locations
SAN	Body Sheet Metal Except Doors

LOGICAL ILLUSTRATION INDEX

Group	Logical Illustration	Logical Illustration Name
001	100	Audio & Electronics
001	1000	4 - Wheeling & Off Road
001	200	Carriers & Cargo Hauling
001	400	Exterior Appearance
001	500	Exterior Protection
001	600	Fog Lights & Electrical
001	900	Security
002	100	Front Suspension
002	200	Front Axle Drive Shafts
002	300	Front Axle Housing
002	400	Front Axle Assembly
002	600	Front Axle Differential
002	800	Front Axle Skid Plate
003	100	Rear Axle
003	200	Differential and Housing
003	300	Rear Axle Vent
004	100	Parking Brake Lever and Cables
005	100	Front Brakes
005	200	Rear Brakes
005	300	Power Brake Booster
005	400	Brake Master Cylinder
005	500	Brake Lines and Hoses
005	600	Brake Pedals
006	100	Clutch
006	200	Clutch Housing
006	300	Clutch Controls
006	400	Clutch Pedals
007	100	Radiator and Related Parts
007	200	Water Pump and Related Parts
007	300	Tank, Coolant Engine
007	400	Pulleys and Related Parts
007	500	Drive Belts
007	600	Lines, Transmission Oil Cooler

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

007	700	Grilles
008	100	Starters
008	1000	Battery Tray and Cables
008	1100	Lamps - Front, Rear and Courtesy
008	1200	Wiring-Engine & Related Parts
008	1300	Wiring-Headlamp to Dash
008	1400	Wiring-Instrument Panel
008	1500	Wiring-Body & Accessories
008	1600	Wiring Repair
008	1700	Air Bag Systems
008	1900	Spark Plugs-Cables-Coils
008	200	Alternators
008	400	Modules
008	500	Relays
008	600	Sensors
008	700	Single Board Engine Controllers
008	800	Switches
008	900	Horns
009	100	Engine Mounting
011	100	Exhaust System
011	200	Heat Shields
013	100	Frames
013	200	Front Bumper and Fascia
013	300	Rear Bumper and Fascia
013	500	Body Hold Down
013	600	Trailer Tow
014	100	Tank, Fuel
014	1000	Speed Control
014	1100	Accelerator Pedal
014	200	Fuel Tank Filler Tube
014	300	Fuel Lines
014	400	Fuel Rail
014	500	Fuel Pump and Sending Unit
014	600	Throttle Body
014	700	Throttle Controls
014	800	Air Cleaner

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

016	100	Propeller Shaft
017	100	Rear Suspension
017	200	Rear Stabilizer
019	100	Steering Wheel
019	200	Steering Column
019	300	Steering Gear
019	500	Power Steering Pump
019	700	Power Steering Hoses
022	100	Wheels and Hardware
022	200	Wheel Covers and Center Caps
022	300	Jack Stowage
022	400	Spare Tire Stowage
024	100	Air Conditioner and Heater Units
024	200	Air Conditioner and Heater Plumbing
024	300	Air Conditioner and Heater Controls
024	400	Air Conditioning Compressor
024	500	Air Conditioning Compressor Mounting
024	600	Air Ducts and Outlets
025	300	Vacuum Canister
025	400	Emission Harness
08A	100	Instrument Panel
08A	200	Instrument Panel Cluster
08A	300	Radio, Antenna, and Speakers
08A	400	Consoles
233	100	Transfer Case Assembly
233	1200	Gearshift Controls and Skid Plates
233	200	Case and Extension
233	400	Gear Train
233	900	Fork and Rails
23D	100	Lock Cylinders and Keys
23D	200	Windshield Wiper and Washer Systems
244	100	Transfer Case Assembly
244	1200	Gearshift Controls and Skid Plates
244	200	Case and Extension
244	400	Gear Train
244	900	Fork and Rails

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

3.7L	200	Cylinder Head
3.7L	300	Cylinder Block
3.7L	400	Crankshaft, Piston and Torque Converter
3.7L	500	Camshafts & Valves
3.7L	600	Timing Belt and Cover
3.7L	700	Engine Oiling
3.7L	800	Manifolds
3.7L	900	Crankcase Ventilation
3500	100	Transmission Assembly
3500	1200	Gearshift Controls
3500	200	Case and Extension
3500	400	Gear Train
3500	900	Fork and Rails
4.7L	200	Cylinder Head
4.7L	300	Cylinder Block
4.7L	400	Crankshaft, Pistons and Torque Converter
4.7L	500	Camshafts and Valves
4.7L	600	Timing Belt and Cover
4.7L	700	Engine Oiling
4.7L	800	Manifolds
4.7L	900	Crankcase Ventilation
42RLE	100	Transaxle Assembly
42RLE	1200	Gearshift Controls
42RLE	200	Case and Extension
42RLE	300	Oil Pump
42RLE	400	Gear Train
42RLE	700	Valve Body
45RFE	100	Transmission Assembly
45RFE	1200	Gearshift Controls
45RFE	1300	Seal and Shim Packages
45RFE	200	Case and Extension
45RFE	300	Oil Pump
45RFE	400	Gear Train
45RFE	700	Valve Body
DAN	100	Front Door
DAN	200	Rear Door

2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG

DAN	500	Exterior Mirror
DAN	600	Weatherstrips and Seals
EAN	100	Nameplates
EAN	200	Moldings and Ornamentation
EAN	300	Decals and Tapestripes
IAN	100	Headliner and Visor
IAN	200	Moldings, Scuff Plates
IAN	300	Carpet and Silencers
IAN	400	Door Trim Panels-Front and Sliding
IAN	500	Front Seats and Attaching Parts
IAN	600	Rear Seats- Folding and Quad
IAN	700	Seat Belts-Front and Rear
IAN	800	Adjusters, Covers, Shields, and Risers
LBSL	100	Interior
LBSL	200	Under Hood
LBSL	300	Doors
LBSL	400	Exterior
SAN	1100	Roof Panels
SAN	1300	Tailgate
SAN	1700	Tonneau Cover & Bed Liner
SAN	200	Floor Pans
SAN	300	Plugs
SAN	400	Front Fenders
SAN	500	Hood & Hood Release
SAN	600	Cowl and Dash Panel
SAN	700	Glass and Rear View Mirror
SAN	800	Aperture Panel
SAN	900	Quarter Panel and Pillar

HOW TO USE THIS CATALOG AND LOCATE PARTS

This Catalog is divided into Part Groups in which illustrations for parts of a similar function and/or location are published. The Group contents listing on the next page shows the type of parts contained in each group. Tabs are provided or available to separate each group.

Several methods may be used to locate a specific part:

- Option 1: From the Group Contents listing. Select the group which would most logically contain the part to be found. Open the catalog to the beginning of that group. The first page of the group will contain the part. Turn to the selected illustration and locate the part by reviewing the illustration item numbers and associated text information following the illustration.
- Option 2: If the “noun” name of the part you seek is known, an alphabetical index of Nouns and illustration titles is provided to assist in finding the part. Several keys may be found in this index.

RESERVOIR, Power Steering Oil Pump Group 19	Group Reference
ALTERNATOR All Engines 8-210	Illustration Reference
BELT, Front Seat Imdl/710/3	Illustration/Item Reference
Group by Model _____	
Illustration Number _____	
Item _____	

- Option 3: If the part number is known but the applications need to be determined, refer to the numerical index. This index shows the group, illustration number and each part listed in the catalog. Multiple references mean the part is listed more than once.
- Option 4: Other options such as group identifiers exist in these catalogs. For Example, Group 23 Body has been broken in sections, i.e. 23A Sheet Metal now is S(model code). Example: SGS for model GS. Group 23C Doors now is D(model code) ex. DGS. Group 23 Exterior Ornamentation now is E(model code). This same logic applies to the Interior Trim Section (ex. IGS).

The Group 9 Engine sections in prior parts catalogs had been numbered 9A, 9B, 9C, etc. There was no real meaning to this numbering scheme. In this new MACS produced catalog the group numbering scheme is as follows: 2.5LD means 2.5 Liter Diesel Engine; 2.0L means 2.0 Liter Four Cylinder Gas Engine; 3.3L6T means 3.3 Liter Six Cylinder Transverse Mounted Engine; and 3.8L means 3.8 Liter Six Cylinder Engine. Also note that Engine Mounting parts are located in Group 9.

PAGE NUMBERING

Two-part page numbers are used throughout this catalog. The first part of the page designation indicates one major group or section. The second part indicates the actual page number in the group. For example:

2-1 indicates Group 2, Front Suspension, Page 1

3-4 indicates Group 3, Axle Rear, Page 4

In the maintenance of the Loose Leaf Parts Catalog Revision Service, it may become necessary to add information beyond the capacity of the page. In this event, an "A" page will be used. For example, if it becomes necessary, because of change, to add several part numbers to page 2-1 and space does not permit the addition, you will be given Page 2-1A. Page 2-1A should be filed immediately following Page 2-1.

Figure and Item Numbers are also commonly used to identify locations in the Catalog, ie., 14-910/8 refers to Group 14, illustration 910, Item Number 8. Illustration Numbers are always ascending sequential within the Groups.

SYMBOLS USED IN THIS CATALOG

The Following symbols are commonly used with Part Number and Quantity information in this Catalog:

AR - Indicates the quantity required may vary or is to be determined by the user.

PAR - Indicates "Paint As Required"

BLANK - Indicates "All Condition

- = "Not Illustrated"

LOGICAL ILLUSTRATIONS

Refer to Illustration in front of each group. This will give assistance to as how each group is broken down and what Specific Illustration should be referenced.

ILLUSTRATION NUMBERING INDEX

Illustration numbers in this Catalog are Group standards. This indicates group and consistent content. EXAMPLE: 8-100 is a Logical Illustration for Starters. 8-101 to 8-199 are Specific Illustrations used for Starters for all Catalogs. 8-200 will contain Alternators for all Catalogs and so on. Always refer to group index in front of each group.

ILLUSTRATION INDEX

This index is a compilation of catalog parts description data with reference to illustrations, figures and key numbers as shown:

Fender ie; Model.....Group: S(Model)Illustration 410
(Fender is located in Sheet Metal Section (S) in Illustration 410)

The first page of each group contains a listing of all illustrations and group breakdown within that group. Also refer to illustrations alphabetically listed in information section.

ALPHABETIC INDEX

This index is a compilation of catalog parts description data with a reference to the location of the item by Group, Figure, and Key Number as shown in the following example:

Housing, w/Pump.....Group 7 Illustration 210 Item 10
(Housing, w/Pump.....7-210/10)

The index will be expanded progressively as data is added to computer files. To locate a part by name refer to the Alphabetical Index. This index indicates the group and illustration and item number where the part is located. Alphabetical Index can be found in INF section of this Catalog.

NUMERICAL INDEX

A listing of Part Numbers contained in the catalog. The numbers are in numerical sequence with reference to the group and Illustration and item number where the part is located.

PARTS PACKAGES

Service Parts Packages, containing all parts needed for specific service operation, are listed in their respective groups with related parts. The listing will show adaptability and model application.

STANDARD PARTS

Important attaching standard parts such as bolts, nuts, etc, are generally listed in the text of the respective major parts groups.

VIN PLATE DECODING INFORMATION

1	2	3	4	5	6	7	8	9	10	11	12 thru 17
Country	Make	Vehicle Type	Other	Line	Series	Body Style	Engine	Check Digit	Model Year	Assy. Plant	Sequence No.

The following table interprets the VIN Plate positions shown above.

Position	Interpretation	Codes = Description
1	Country of Origin	1 = Built in U.S by DaimlerChrysler Corporation.
2	Make	D = Dodge
3	Vehicle type	7 = Truck (CGS)
4	GVWR & Pass. Safety	D=0-1360 kg (1-3000 lbs) E=1361-1814 kg (3001-4000 lbs) F=1815-2267 kg (4001-5000 lbs) G=2268-2721 kg (5001-6000 lbs) H=2722-3175 kg (6001-7000 lbs) J=3176-3628 kg (7001-8000 lbs) K=3629-4082 kg (8001-9000 lbs) L=4083-4535 kg (9001-10000 lbs) M=4536-6350 kg (10001-14000 lbs)
5	Vehicle Line	G = Dakota 4x4 L = Dakota 4x2
6	Series	1 = Dakota SXT 3 = Dakota Sport 4 = Dakota SLT 7 = Dakota R/T
7	Body Style	2 = Club Cab (31) 6 = Regular Cab (61) 8 = Quad Club Cab (84)
8	Engine	K - 3.7L 6 Cyl. Gasoline (MPI) (EKG) N = 4.7L 8 Cyl Gasoline (MPI) (EVA)
9	Check Digit	
10	Model Year	4 = 2004
11	Assembly Plant	S = Warren Truck
12 thru 17	Vehicle Build Sequence	Model Year Assembly Sequence

BODY CODE PLATE INTERPRETATION

The Body Code Plate is located on the Left Front Side Shield or Wheel Housing or the Upper Radiator Support. The Plate contains 7 rows of data. The bottom 3 rows are reserved for the specific information as depicted below. Starting at the fourth row (following the reserved portion), other Sales Codes used to build a specific vehicle are listed in the ascending order by ALPHA sequence.

1	2	3	4	5	6	7	8	9	10	11	12		13	14	15		16	17	18	19	20	21
22	23	24		25	26	27	28		29	30	31	32		33	34	35	36		37	38	39	
40	41	42		43		44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

1-12	VEHICLE ORDER NUMBER
13-15	VINYL ROOF CODE/DOOR COMBO CODES
16-18	VEHICLE SHELL CAR LINE
19	PRICE CLASS
20-21	BODY TYPE
22-24	PAINT PROCEDURE
25-28	PRIMARY PAINT
29-32	SECONDARY PAINT
33-36	INTERIOR TRIM CODE
37-39	ENGINE CODES
40-42	TRANSMISSION CODES
43	MARKET CODES
44-46	VEHICLE IDENTIFICATION NUMBER (VIN) For definition of the Elements and the individual position see Vin Plate Defined.

ABBREVIATIONS

A/C	Air Conditioner
ABS	Anti-Lock Brakes System
AR	As Required
ATC	Automatic Temperature Control
AWD	All Wheel Drive
BUX	Built Up Export
CV	Constant Velocity
DOHC	Dual (or Double) OverHead Cam
EFI	Electronic Fuel Injection
EGR	Exhaust Gas Recirculation
ECU	Electronic Control Unit
FWD	Front Wheel Drive
HEX	HEXagon
HCU	Hydraulic Control Unit
I/D	Inside Diameter
L	Liter
LED	Light Emitting Diode
MAP	Manifold Absolute Pressure
MPH	Miles Per Hour
O/D	Outside Diameter
P/S	Power Steering
PSI	Pounds per Square Inch
PSF	Pounds per Square Foot
PRNODL	Park, Reverse, Neutral, Overdrive, Drive, Low
PRNDL	Park, Reverse, Neutral, Drive, Low
PTO	Power Take Off
RFI	Radio Frequency Interference
RPM	Revolutions Per Minute
RTV	Room Temperature Vulcanizer (sealant)
T/BODY	Throttle BODY
U/BODY	Under BODY
SOHC	Single OverHead Cam
PAR	Paint As Required

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

BEARING, First Gear	3500-410/38	BOLT, Differential Cover	002-310/11
BEARING, Idler	3500-410/33	BOLT, Drive Plate and Flywheel	3.7L-410/18
BEARING, Input Gear	244-410/5	BOLT, Drive Plate and Flywheel	4.7L-410/25
BEARING, Input Gear	233-410/30	BOLT, Drive Plate and Flywheel	42RLE-230/3
BEARING, Input Gear	45RFE-220/9	BOLT, Exhaust Manifold	3.7L-810/4
BEARING, Input Shaft	233-410/8	BOLT, Exhaust Manifold	4.7L-810/8
BEARING, Input Shaft	244-410/8	BOLT, Hex	3.7L-710/2
BEARING, Input Shaft	3500-210/22	BOLT, Hex	3500-210/8
BEARING, Needle	3500-410/21	BOLT, Hex	4.7L-710/9
BEARING, Output Shaft	233-410/6	BOLT, Hex	4.7L-620/15
BEARING, Output Shaft	233-410/20	BOLT, Hex Flange Head	233-210/9
BEARING, Output Shaft	244-410/36	BOLT, Hex Flange Head	244-210/9
BEARING, Output Shaft	244-410/41	BOLT, Hex Flange Head, M12x1.75x30	013-210/8
BEARING, Output Shaft	3500-410/24	BOLT, Hex Flange Head, M12x1.75x45	013-610/4
BEARING, Output Shaft	42RLE-225/7	BOLT, Hex Flange Head, M12x1.75x45	013-110/17
BEARING, Output Shaft	45RFE-220/7	BOLT, Hex Flange Head, M12x1.75x95.50	013-510/1
BEARING, Pilot	3.7L-410/12	BOLT, Hex Flange, M12x1.75x90	009-160/8
BEARING, Steering Column Shaft	019-210/39	BOLT, Hex Head	005-220/1
BEARING, Torsion Bar	002-140/12	BOLT, Hex Head	009-135/3
BEARING, Wheel	003-210/11	BOLT, Hex Head	009-155/7
BEARING, Wheel	003-220/10	BOLT, Hex Head	3500-210/6
BEDPLATE	4.7L-410/1	BOLT, Hex Head, .37-24x.55	IAN-715/6
BELT, Accessory Drive	007-510/1	BOLT, Hex Head, .375-16x.84	006-110/3
BELT, Accessory Drive	007-510/2	BOLT, Hex Head, .437-14x1.75	009-140/8
BELT, Accessory Drive	008-210/7	BOLT, Hex Head, 5/16x18x3/4	005-110/13
BELT, Accessory Drive	008-240/5	BOLT, Hex Head, M10x1.50 x 13.20	3.7L-410/20
BELTS, FRONT SEAT, 4 DOOR	IAN/715	BOLT, Hex Head, M12	016-110/4
BELTS, FRONT SEAT, STANDARD & CLUB CABS	IAN/710	BOLT, Hex Head, M12	016-130/5
BELTS, REAR SEAT AND TETHERS	IAN/720	BOLT, Hex Head, M12	016-130/8
BEZEL, Airbag Disable	08A-111/41	BOLT, Hex Head, M12	016-120/10
BEZEL, Armrest	IAN-510/7	BOLT, Hex Head, M6x1.00x25	3500-210/18
BEZEL, Instrument Cluster	08A-111/13	BOLT, Hex Head, M8x1.25x16	42RLE-210/5
BEZEL, Instrument Panel, Lower	08A-111/35	BOLT, Hex Head, M8x1.25x19	42RLE-310/4
BEZEL, Power Window Switch	008-815/10	BOLT, Hex Head, M8x1.25x37.50	3.7L-620/7
BEZEL, Power Window/Door Lock Switch	008-815/7	BOLT, Hex Head, M8x1.25x37.50	4.7L-620/9
BEZEL, Tailgate Handle	SAN-1310/4	BOLT, Hex Head, M8x1.25x50	3500-210/7
BIN, Storage	08A-111/11	BOLT, Hub	005-110/24
BIN, Storage	08A-111/12	BOLT, M10x1.50x25	013-110/14
BLADE, Wiper	23D-210/2	BOLT, M10x1.50x35	025-310/5
BLEED ORIFICE, Transmission	45RFE-440/5	BOLT, M6x1.00x20	SAN-830/16
BLEED ORIFICE, Transmission	45RFE-470/9	BOLT, M6x1.00x20	42RLE-210/8
BLEED ORIFICE, Transmission	45RFE-710/8	BOLT, M6x1.00x20	45RFE-210/11
BLOCK, Brake Line Union	005-520/4	BOLT, M8-1.25x70	3500-210/5
BLOCK, Brake Line Union	005-520/6	BOLT, Retainer	244-410/1
BLOCK, Brake Line Union	005-530/5	BOLT, Retainer	233-210/23
BLOCK, Brake Line Union	005-510/10	BOLT, Retainer	233-410/29
BLOCK, Brake Line Union	005-510/16	BOLT, Ring Gear	003-220/24
BLOCK, CYLINDER,[EVA]	4.7L/310	BOLT, Seat	IAN-530/5
BLOCK, Short	3.7L-310/2	BOLT, Seat	IAN-540/5
BLOCK, Short	4.7L-310/1	BOLT, Seat	IAN-510/20
BODY HOLD DOWN	013/510	BOLT, Seat	IAN-510/21
BODY, Air Cleaner	014-820/4	BOLT, Seat	IAN-810/13
BODY, Oil Pump Valve	45RFE-310/3	BOLT, Seat Belt	IAN-720/9
BOLSTER, Cab Back Panel	IAN-610/1	BOLT, Seat Belt Anchor	IAN-710/9
BOLT	005-110/4	BOLT, Seat Belt Anchor	IAN-715/9
BOLT	IAN-610/6	BOLT, Shoulder	IAN-510/17
BOLT	005-110/26	BOLT, Shoulder	IAN-620/13
BOLT	233-1220/2	BOLT, Shoulder	SAN-1310/11
BOLT	244-1220/2	BOLT, Step Head, .437-14x1.125	019-210/2
BOLT	IAN-720/10	BOLT, Transfer Case	233-210/7
BOLT AND CONED WASHER, Hex Head, M8x25x20	011-120/4	BOLT, Transfer Case	244-210/18
BOLT AND CONED WASHER, Hex Head, M8x25x20	011-120/9	BOLT, Transfer Case	244-210/29
BOLT AND RETAINER, Hex Head	002-110/26	BOLT, m12x1.75x35.00	013-310/11
BOLT AND RETAINER, M10X1.50X34.50	013-110/9	BOOSTER, Power Brake	005-310/5
BOLT AND RETAINER, M12X1.75X35.00	013-210/7	BOOSTER,POWER BRAKE	005/310
BOLT AND RETAINER, M12X1.75X35.00	013-310/6	BOOT KIT, Half Shaft, Inner	002-210/2
BOLT AND RETAINER, Pilot Point, M63.2X11.2X2.0	013-310/7	BOOT KIT, Half Shaft, Outer	002-210/3
BOLT AND WASHER	016-130/6	BOOT, Brake Booster Push Rod	005-310/6
BOLT AND WASHER, Hex Head, M12x1.75x80	009-140/6	BOOT, Brake Piston	005-110/7
BOLT AND WASHER, Hex Head, M12x1.75x80	009-160/6	BOOT, Brake Piston	005-210/9
BOLT AND WASHER, Hex Head, M12x1.75x80	009-165/4	BOOT, Driveshaft	016-120/7
BOLT AND WASHER, Implement Attaching	23D-210/6	BOOT, Gear Shift Lever	3500-1210/7
BOLT AND WASHER, Implement Attaching	IAN-610/9	BOOT, Gearshift	019-210/21
BOLT, Adjuster to Seat Frame	IAN-810/16	BOOT, Gearshift	3500-1210/4
BOLT, Banjo	005-520/9	BOOT, Parking Brake Lever	004-130/12
BOLT, Banjo	005-540/3	BOOT, Steering Gear	019-310/2
BOLT, Connecting Rod	3.7L-410/2	BOOT, Steering Gear	019-310/5
BOLT, Connecting Rod	4.7L-410/23		
BOLT, Differential	002-310/15		

BOOT, Steering Gear	019-320/2	BRACKET, Shift Mode	244-910/13
BOOT, Steering Gear	019-320/6	BRACKET, Shift Mode	244-910/14
BOW, Roof	SAN-1110/5	BRACKET, Side	013-210/12
BOW, Tonneau Cover	SAN-1710/5	BRACKET, Spring	013-110/21
BOW, Tonneau Cover	SAN-1710/11	BRACKET, Stabilizer Bar	017-210/3
BOX KIT / STORAGE BOX EXTERIOR	001/280	BRACKET, Steering Column	005-610/1
BOX KIT, Storage-Exterior	001-280/1	BRACKET, Steering Column	019-210/4
BOX, Pickup	SAN-910/16	BRACKET, Steering Column	019-210/18
BRACE, Radiator Closure Panel	007-115/4	BRACKET, Tail Lamp	SAN-910/17
BRACKET	014-310/2	BRACKET, Tailgate Pivot	SAN-1310/14
BRACKET	233-910/4	BRACKET, Transmission Control Unit	008-405/5
BRACKET	SAN-225/9	BRACKET, Transmission Mount	009-145/3
BRACKET	005-110/25	BRACKET, Transmission Mount	009-145/6
BRACKET	SAN-225/19	BRACKET, Transmission Mount	009-155/1
BRACKET AND INSULATOR, Transmission Support	009-135/2	BRACKET, Transmission Mount	009-165/2
BRACKET AND INSULATOR, Transmission Support	009-145/1	BRACKET, Transmission Mount	009-160/10
BRACKET AND INSULATOR, Transmission Support	009-155/4	BRACKET, Vacuum Solenoid	025-410/2
BRACKET AND INSULATOR, Transmission Support	009-165/3	BRACKET, Vapor Canister	025-310/2
BRACKET KIT, Trailer Tow	001-250/4	BRACKET, Winch	SAN-230/8
BRACKET, Accumulator	024-230/18	BRAKES, DRUM, REAR, 11 INCHES X 2.25 INCHES	005/220
BRACKET, Anti-Lock Brake Module	005-510/7	BRAKES, FRONT	005/110
BRACKET, Anti-Lock Brake Module	005-510/13	BRAKES, REAR, DISC	005/210
BRACKET, Aperture to Fender	SAN-810/5	BREAKER, Circuit	008-510/3
BRACKET, Aperture to Fender	SAN-820/6	BREATHER, Crankcase	3.7L-910/5
BRACKET, Aperture to Fender	SAN-830/11	BREATHER, Crankcase	4.7L-910/4
BRACKET, Battery Tray	008-1011/10	BRUSH GUARD	001/420
BRACKET, Box	013-110/6	BULB	008-1196/8
BRACKET, Brake Hose	005-540/8	BULB	008-1131/18
BRACKET, Brake Lamp Switch	008-805/12	BULB AND SOCKET, Heater and A/C Control	008-1196/7
BRACKET, Bumper	013-210/3	BULB AND SOCKET, Indicator Lamp	008-1196/5
BRACKET, Bumper Face Support	013-210/14	BULB, 168	008-1131/5
BRACKET, Bumper to Frame Rail	013-210/1	BULB, 168	008-1196/2
BRACKET, Cargo Tie Down	001-240/4	BULB, 192	08A-430/4
BRACKET, Child Tether Anchor	IAN-610/12	BULB, 192	008-1196/9
BRACKET, Child Tether Anchor	IAN-610/13	BULB, 194	08A-420/20
BRACKET, Cruise Control Servo	014-720/5	BULB, 3157	008-1196/1
BRACKET, Cruise Control Servo	014-1010/2	BULB, 578	008-1151/2
BRACKET, Drive Shaft Bearing	016-120/15	BULB, 578	008-1151/7
BRACKET, Electronic Control Unit	SAN-210/6	BULB, 578	008-1196/6
BRACKET, Electronic Control Unit	SAN-220/5	BULB, 921	008-1196/3
BRACKET, Electronic Control Unit	SAN-225/13	BULB, 921	008-1141/11
BRACKET, Engine Mount	009-140/2	BULB, Headlamp	008-1131/13
BRACKET, Engine Mount	009-140/9	BULBS & SOCKETS	008/1196
BRACKET, Engine Mount	009-160/2	BUMPER, FRONT	013/210
BRACKET, Engine Mount	009-160/3	BUMPER, Front	013-210/4
BRACKET, Fender Mounting	SAN-410/13	BUMPER, Fuel Door	SAN-910/7
BRACKET, Floor Pan Outer	SAN-220/9	BUMPER, Glove Box Door	08A-111/22
BRACKET, Fog Lamp	008-1131/17	BUMPER, Hood	SAN-510/14
BRACKET, Frame Rail	013-110/25	BUMPER, Hood to Fender	SAN-510/13
BRACKET, Front Bumper	013-210/2	BUMPER, Jounce	017-110/3
BRACKET, Fuel Tank Skid Plate	014-110/3	BUMPER, Jounce	017-120/3
BRACKET, Fuel Tank Skid Plate	001-1030/3	BUMPER, Jounce	002-110/30
BRACKET, Gearshift	019-210/19	BUMPER, Jounce	002-130/10
BRACKET, Grille	007-705/2	BUMPER, Jounce	002-130/25
BRACKET, Hood Lock	08A-111/18	BUMPER, Parking Brake Lever	08A-111/19
BRACKET, Idler Pulley	008-210/4	BUMPER, REAR	013/310
BRACKET, Inside Handle	DAN-120/1	BUMPER, Rubber	SAN-1310/15
BRACKET, Inside Handle	DAN-230/12	BUMPER, Rubber	SAN-1310/16
BRACKET, Instrument Panel	008-1411/2	BUMPER, Step	013-310/1
BRACKET, Insulator	009-135/5	BUMPER, Suspension Jounce	002-110/6
BRACKET, Insulator	009-155/2	BUNDLE, Fuel Line	014-310/1
BRACKET, Jack	022-310/5	BUSHING, Axle Shaft	002-310/4
BRACKET, Jack	022-310/8	BUSHING, Balance Shaft	3.7L-310/7
BRACKET, Module	008-710/2	BUSHING, Clutch and Brake Pedal	005-610/3
BRACKET, Mounting	019-210/17	BUSHING, Clutch and Brake Pedal	006-410/3
BRACKET, Natural Valve Leak Detector	025-430/5	BUSHING, Control Arm	002-110/1
BRACKET, Overhead Console	08A-430/5	BUSHING, Disc Brake Caliper	005-210/5
BRACKET, Oxygen Sensor	008-610/6	BUSHING, Dowel	42RLE-210/10
BRACKET, Parking Brake	004-120/17	BUSHING, Front Pump	42RLE-310/9
BRACKET, Parking Sprag	42RLE-730/1	BUSHING, Isolator	025-410/3
BRACKET, Pivot	IAN-510/23	BUSHING, Isolator Mounting Leg	014-820/15
BRACKET, Rear Bumper	013-310/10	BUSHING, Lower Control Arm	002-110/19
BRACKET, Rear Bumper	013-310/12	BUSHING, Lower Control Arm	002-110/21
BRACKET, Seat Support	SAN-225/10	BUSHING, Pivot	IAN-530/6
BRACKET, Shift Cable	42RLE-1210/2	BUSHING, Pivot	IAN-540/6
BRACKET, Shift Cable	45RFE-1210/2	BUSHING, Pivot	IAN-510/22
		BUSHING, Seat Inertia Latch	IAN-510/13

CLAMP, Stabilizer Shaft Bushing	002-140/7	CLUTCH PACKAGE, Automatic Transmission, 2/4	45RFE-1360/1
CLAMP, Tonneau	001-265/2	CLUTCH PACKAGE, Automatic Transmission, Input	45RFE-1340/1
CLAMP, Tonneau	SAN-1710/14	CLUTCH PACKAGE, Automatic Transmission, Low/Reverse	45RFE-470/2
CLIP	005-610/6	CLUTCH PACKAGE, Automatic Transmission, Low/Reverse	45RFE-1310/1
CLIP	006-410/4	CLUTCH, INPUT SHAFT [42RLE] [DG6]	42RLE/410
CLIP	08A-321/5	CLUTCH, L/R Clutch	45RFE-470/1
CLIP	008-1141/7	CLUTCH, L/R Clutch	45RFE-410/24
CLIP	233-210/28	CLUTCH, Overrunning	45RFE-470/4
CLIP	233-210/29	CLUTCH, Overrunning	45RFE-410/25
CLIP	244-210/19	COIL, Ignition	008-1905/3
CLIP	3500-210/27	COLUMN, Steering, Tilt	019-210/15
CLIP	42RLE-420/73	COLUMN, steering, non tilt	019-210/14
CLIP, 3 Way	014-315/5	COLUMN, STEERING, UPPER AND LOWER	019/210
CLIP, 3 Way	005-540/16	COMPRESSOR, AIR CONDITIONING	024/405
CLIP, A/C Quick Disconnect	024-230/15	COMPRESSOR, AIR CONDITIONING	024/510
CLIP, A/C Quick Disconnect	024-230/16	COMPRESSOR, Air Conditioning	024-405/1
CLIP, Anti Rattle	DAN-120/2	COMPRESSOR, Air Conditioning	024-510/1
CLIP, Anti Rattle	DAN-230/6	COMPRESSOR, Air Conditioning	024-520/4
CLIP, Balancing	024-120/37	CONDENSER, Air Conditioning	024-230/30
CLIP, Brake Attaching Tube, 3 Way	005-530/9	CONE, Synchronizer	3500-410/37
CLIP, Brake Attaching Tube, 3 Way	005-520/17	CONNECTOR, 7 Way	001-255/4
CLIP, Brake Cable, 23x45x.76	004-120/2	CONNECTOR, 7 Way	008-1511/9
CLIP, Brake Line	005-510/4	CONNECTOR, Oil Cooler Line, .375	007-610/3
CLIP, Brake Line	005-510/15	CONNECTOR, Oil Filter	4.7L-710/7
CLIP, Brake Line	005-520/15	CONNECTOR, Oil Filter	3.7L-710/17
CLIP, Brake Line	005-540/15	CONNECTOR, Oil Tube Pickup	233-210/18
CLIP, Brake Line	005-540/17	CONNECTOR, Oil Tube Pickup	244-210/27
CLIP, Brake Line	005-540/20	CONNECTOR, Parking Brake Cable	004-120/8
CLIP, Cable to Servo Attach	014-1010/5	CONSOLE, Base	08A-420/1
CLIP, Clutch Tube	006-310/14	CONSOLE, Floor	08A-420/22
CLIP, Conduit Convolved	003-310/2	CONSOLE, Overhead Mini, Less Electronics	08A-430/1
CLIP, Console	08A-430/8	CONTROL UNIT, Anti-Lock Brake	005-510/6
CLIP, Cooler Lines	007-610/4	CONTROL UNIT, Anti-Lock Brake	005-510/11
CLIP, Cruise Control	014-1010/9	CONTROL, AIR CONDITIONING	024/310
CLIP, Cruise Control	23D-210/18	CONTROL, Air Conditioning	024-310/1
CLIP, Fuel Injector	014-410/3	CONTROL, Speed	014-1010/10
CLIP, Fuel Line	014-310/3	CONTROLLER, Audio	001-620/5
CLIP, Fuel Line	014-310/6	CONTROLS, HYDRAULIC CLUTCH	006/310
CLIP, Fuel Line	014-315/3	CONVERTER PACKAGE, Torque	42RLE-110/2
CLIP, Fuel Line	005-540/21	COOLANT TANK	007/305
CLIP, Handle to Latch Rod	08A-111/16	COOLER KIT - TRANSMISSION OIL, WITHOUT HEAVY DUTY COOLING	001/260
CLIP, Hood	08A-111/34	COOLER PACKAGE, Transmission Oil	001-260/1
CLIP, Latch	23D-110/23	COOLER, Auxiliary Oil	001-260/2
CLIP, Latch Link	SAN-1310/8	COOLER, Auxiliary Oil	007-107/4
CLIP, M6.3x11.2	SAN-510/6	COOLER, Auxiliary Oil	007-115/10
CLIP, Molding	IAN-210/7	CORD, Engine Block Heater	4.7L-310/6
CLIP, Oil Cooler Tube	007-610/6	COVER ASSY, Tonneau	SAN-1710/1
CLIP, Park Brake Strut	005-220/11	COVER ASSY, Tonneau	SAN-1710/7
CLIP, Parking Brake Cable	004-110/8	COVER KIT - FOLDING	001/270
CLIP, Parking Brake Hold Down	004-130/7	COVER KIT - TONNEAU	001/265
CLIP, Pinch Top	IAN-110/3	COVER KIT - TONNEAU HARD, ONE PIECE	001/275
CLIP, Sensor	005-540/6	COVER KIT - TONNEAU, GULL WING STYLE	001/276
CLIP, Side Molding	08A-111/15	COVER KIT, Tonneau	001-265/1
CLIP, Speaker	08A-316/5	COVER KIT, Tonneau-Folding	001-270/1
CLIP, Spring	017-110/5	COVER KIT, Tonneau-Hard	001-275/1
CLIP, Spring	017-120/5	COVER KIT, Tonneau-Hard	001-276/1
CLIP, Trim	IAN-220/3	COVER, Accumulator	42RLE-720/4
CLIP, Trim Panel	IAN-210/2	COVER, Adjustable Turning Loop	IAN-710/2
CLIP, Trim Panel	IAN-210/8	COVER, Adjustable Turning Loop	IAN-715/2
CLIP, Trim Panel	IAN-210/10	COVER, Adjustable Turning Loop	IAN-720/3
CLIP, Tube	004-120/13	COVER, Air Bag Module	019-110/4
CLIP, Wiring	002-310/9	COVER, Air Cleaner	014-820/2
CLIP, Wiring	008-1011/9	COVER, Battery	008-1011/5
CLIP, Wiring	008-1211/2	COVER, Bedplate	006-210/1
CLIP, Wiring	008-1605/2	COVER, Bracket	IAN-510/10
CLIP, Wiring	024-120/38	COVER, Bumper	013-310/2
CLIP, Wiring	45RFE-1210/7	COVER, Converter	42RLE-230/7
CLIP, Wrap Around	014-310/4	COVER, Converter	45RFE-210/20
CLIP, Z-Axis	08A-430/9	COVER, Cylinder Head	4.7L-210/2
CLOCKSPRING	019-110/7	COVER, Cylinder Head, Left	3.7L-210/9
CLOCKSPRING	008-805/14		
CLOSURE, Radiator	007-115/2		
CLOSURE, Radiator	007-115/3		
CLUSTER	08A-211/1		
CLUTCH	006/110		
CLUTCH PACKAGE	006-110/2		

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

COVER, Cylinder Head, Right.....	3.7L-210/10
COVER, Differential.....	002-310/13
COVER, Differential.....	003-210/17
COVER, Differential.....	003-220/16
COVER, Engine.....	3.7L-310/11
COVER, Engine.....	42RLE-230/6
COVER, Front Seat Cushion.....	IAN-510/3
COVER, Front Seat Cushion.....	IAN-510/6
COVER, Front Seat Cushion.....	IAN-530/4
COVER, Front Seat Cushion.....	IAN-540/4
COVER, Fuse Access.....	08A-111/6
COVER, Glove Box Lamp Hole.....	08A-111/23
COVER, Hinge.....	IAN-510/19
COVER, Oil Pump.....	45RFE-310/6
COVER, Power Distribution Center.....	008-505/11
COVER, Rear Seat Cushion.....	IAN-610/3
COVER, Rear Seat Cushion.....	IAN-610/5
COVER, Rear Seat Cushion.....	IAN-620/6
COVER, Rear Seat Cushion.....	IAN-620/8
COVER, Seat Back.....	IAN-510/2
COVER, Seat Back.....	IAN-530/2
COVER, Seat Back.....	IAN-540/2
COVER, Seat Back.....	IAN-620/2
COVER, Seat Back.....	IAN-620/4
COVER, Seat latch.....	IAN-510/11
COVER, Seat latch.....	IAN-510/12
COVER, Steering Column Gap.....	019-210/16
COVER, Steering Column Opening.....	08A-111/14
COVER, Switch.....	008-805/9
COVER, Switch.....	006-310/13
COVER, TIMING,[EVA].....	4.7L/610
COVER, Timing Belt.....	3.7L-610/1
COVER, Timing Belt.....	4.7L-610/1
COVER, Tonneau.....	SAN-1710/2
COVER, Tonneau.....	SAN-1710/8
COVER, Transmission Case.....	006-210/7
COWL SCREEN AND SHIELD.....	SAN/610
CRANKCASE VENTILATION 3.7L [EKG].....	3.7L/910
CRANKCASE VENTILATION,[EVA].....	4.7L/910
CRANKSHAFT.....	3.7L-410/7
CRANKSHAFT.....	4.7L-410/8
CRANKSHAFT PISTON AND FLYWHEEL [EKG].....	3.7L/410
CRANKSHAFTPISTON&TORQUECONVERTER,[EVA].....	4.7L/410
CROSSMEMBER, Center Bearing Mount.....	013-110/8
CROSSMEMBER, Front Floor.....	SAN-210/8
CROSSMEMBER, Front Floor.....	SAN-210/9
CROSSMEMBER, Front Floor.....	SAN-220/6
CROSSMEMBER, Front Floor.....	SAN-220/7
CROSSMEMBER, Front Floor.....	SAN-230/4
CROSSMEMBER, Front Floor.....	SAN-230/6
CROSSMEMBER, Front Floor.....	SAN-225/14
CROSSMEMBER, Front Floor.....	SAN-230/10
CROSSMEMBER, Front Support.....	013-110/2
CROSSMEMBER, Fuel Tank.....	013-110/11
CROSSMEMBER, Fuel Tank.....	013-110/23
CROSSMEMBER, Rear Floor.....	SAN-210/7
CROSSMEMBER, Transmission.....	013-110/3
CROSSMEMBER, Transmission.....	013-110/4
CROSSMEMBER, Underbody.....	013-110/24
CROSSTUBE, Grille Guard.....	001-425/5
CUP, Differential Side Bearing.....	002-610/10
CUP, Differential Side Bearing.....	003-210/23
CUP, Differential Side Bearing.....	003-220/22
CUP, Drive Pinion Bearing.....	002-610/5
CUP, Drive Pinion Bearing.....	002-610/8
CUP, Drive Pinion Bearing.....	003-210/6
CUP, Drive Pinion Bearing.....	003-210/31
CUP, Jounce Bumper.....	002-110/31
CUP, Parking Brake Sprag.....	42RLE-730/7
CUP, Shift Fork Spring.....	244-910/16
CUPHOLDER.....	IAN-620/12
CUSHION, Front Seat.....	IAN-510/5
CUSHION, Rear Seat.....	IAN-620/5
CUSHION, Rear Seat.....	IAN-620/7
CUSHION, Rear Seat, 40%.....	IAN-610/4
CUSHION, Rear Seat, 60%.....	IAN-610/2
CYLINDER BLOCK, 3.7L [EKG].....	3.7L/310
CYLINDER HEAD 3.7L [EKG].....	3.7L/210
CYLINDER, Ignition Lock.....	23D-110/1

CYLINDER, Wheel.....	005-220/19
-D-	
DAMPER, Crankshaft.....	3.7L-410/6
DAMPER, Crankshaft.....	4.7L-410/18
DAMPER, Mass.....	013-310/9
DAMPER, Mass.....	013-110/22
DAMPER, Vibration.....	024-120/36
DECAL.....	EAN-310/1
DECAL, 4 x 4.....	EAN-310/3
DECAL, Dodge.....	EAN-310/2
DECALS.....	EAN/310
DEFLECTOR, Radiator.....	007-115/7
DEFLECTOR, Radiator.....	007-115/8
DEFLECTOR, Radiator.....	007-705/3
DEMISTER SYSTEM.....	024/605
DETECTOR, Natural Vacuum Leak Detection.....	025-430/1
DETENT, Valve Body.....	45RFE-710/7
DETENT, Valve Body.....	42RLE-710/20
DIAPHRAGM, Clutch Reservoir.....	006-310/3
DIFFERENTIAL, Transfer Case.....	244-410/21
DIFFERENTIAL,FRONT AXLE.....	002/610
DISC, Clutch.....	006-110/1
DISC, Clutch.....	45RFE-420/6
DISC, Clutch.....	45RFE-430/9
DISC, Clutch.....	42RLE-410/11
DISC, Clutch.....	42RLE-410/15
DISC, Clutch.....	42RLE-410/27
DISC, Clutch.....	42RLE-420/46
DISC, Clutch.....	42RLE-420/68
DISC, Clutch.....	45RFE-410/23
DISC, Clutch.....	45RFE-440/14
DISC, Clutch.....	45RFE-440/19
DOOR, Blend Air.....	024-120/28
DOOR, Blend Air.....	024-120/29
DOOR, Defroster.....	024-120/10
DOOR, FRONT GLASS, REGULATORS.....	DAN/120
DOOR, FRONT LOCK AND CONTROLS.....	DAN/130
DOOR, FRONT SHELL AND HINGES.....	DAN/110
DOOR, FRONT WEATHERSTRIPS AND SEALS.....	DAN/610
DOOR, Fender Side Shield, Bulb Access.....	007-115/9
DOOR, Floor.....	024-120/14
DOOR, Front.....	DAN-110/1
DOOR, Front Console.....	08A-420/11
DOOR, Fuel Fill.....	SAN-910/5
DOOR, Panel.....	024-120/5
DOOR, Panel.....	024-120/6
DOOR, REAR GLASS, REGULATORS.....	DAN/220
DOOR, REAR LOCK AND CONTROLS.....	DAN/230
DOOR, REAR SHELL AND HINGES.....	DAN/210
DOOR, REAR WEATHERSTRIPS AND SEALS.....	DAN/620
DOOR, Rear.....	DAN-210/1
DOOR, Recirculation.....	024-120/18
DOORS AND PILLARS.....	LBLS/310
DOWEL.....	244-210/30
DOWEL.....	3.7L-310/8
DOWEL.....	4.7L-310/8
DOWEL, Block To Clutch Housing.....	3.7L-210/7
DOWEL, Block To Clutch Housing.....	3.7L-310/9
DOWEL, Block To Clutch Housing.....	4.7L-310/10
DOWEL, Block To Clutch Housing.....	42RLE-230/5
DOWEL, M6x14.....	3.7L-510/6
DOWEL, M6x16.....	42RLE-710/22
DOWEL, Transfer Case.....	244-210/16
DRAINCOCK, Radiator.....	007-107/3
DRIVE BELTS.....	007/510
DRIVE PULLEYS.....	007/407

DRIVE, Fan 007-107/11
 DRIVER, Jack Handle 022-310/4
 DRIVER, Jack Handle 022-320/4
 DRUM, Brake 005-220/5
 DUCT, Air Cleaner 014-820/17
 DUCT, Air Cleaner to Resonator 014-820/11
 DUCT, Defroster 08A-111/46
 DUCT, Demister 024-605/1
 DUCT, Heater And A/C 024-605/3
 DVD, Geographic Database 001-140/4

-E-

ELBOW, Emission Vapor Harness 025-410/10
 EMISSION CONTROL VACUUM HARNESS, 025/410
 END CAP, Grille Guard 001-425/4
 END CAP, Instrument Panel 08A-111/5
 ENGINE COMPARTMENT LBS/210
 ENGINE MOUNTING, FRONT, N1, 4.7L [EVA] 009/150
 ENGINE MOUNTING, FRONT, N1, 3.7L [EKG] 009/130
 ENGINE MOUNTING, FRONT, N5, 3.7L [EKG] 009/140
 ENGINE MOUNTING, FRONT, N5, 4.7L [EVA] 009/160
 ENGINE MOUNTING, REAR, N1, 3.7L [EKG] 009/135
 ENGINE MOUNTING, REAR, N1, 4.7L [EVA] 009/155
 ENGINE MOUNTING, REAR, N5, 3.7L [EKG] 009/145
 ENGINE MOUNTING, REAR, N5, 4.7L [EVA] 009/165
 ENGINE OILING 3.7L [EKG] 3.7L/710
 ENGINE, Complete 009-130/1
 EVAPORATOR KIT, A/C 024-120/40
 EVAPORATOR, Air Conditioning 024-120/41
 EXHAUST SYSTEM 011/120
 EXHAUSTER, Quarter Panel IAN-610/11
 EXHAUSTER, Quarter Panel SAN-810/13
 EXHAUSTER, Quarter Panel SAN-820/13
 EXTENDER, Seat Belt IAN-720/8
 EXTENDER, Seat Belt IAN-710/10
 EXTENDER, Seat Belt IAN-715/10
 EXTENSION HOUSING [42RLE] [DG6] 42RLE/225
 EXTENSION, Door Glass Channel DAN-210/2
 EXTENSION, Fan Shroud 007-305/5
 EXTENSION, Jack Handle T Bar 022-310/3
 EXTENSION, Jack Handle T Bar 022-320/1
 EXTENSION, Side Sill SAN-225/17
 EXTENSION, Spare Tire Winch 022-410/5
 EXTENSION, Transfer Case 233-410/3
 EXTENSION, Transfer Case 244-410/3
 EXTENSION, Transfer Case 233-210/12
 EXTENSION, Transfer Case 244-210/14

-F-

FAN MODULE, Radiator Cooling 007-107/6
 FAN MODULE, Radiator Cooling 008-405/9
 FAN, Cooling 007-107/10
 FASCIA KIT, Air Dam EAN-220/2
 FASCIA, Front 013-210/5
 FASCIA, Front, Primed 001-420/2
 FASCIA, Front, Primed 001-425/3
 FASTENER, Christmas Tree 007-305/6
 FASTENER, Mounting Post 014-820/12
 FASTENER, Push Pin 005-530/8
 FASTENER, Push Pin 005-520/13
 FASTENER, Trim Panel Attaching IAN-210/13
 FENDER SAN-410/1
 FENDER FRONT SAN/410
 FILTER KIT, Fuel 014-510/5
 FILTER PACKAGE, Fuel 014-510/6
 FILTER PACKAGE, Transmission Oil 45RFE-210/14

FILTER, Air 014-820/3
 FILTER, Engine Oil 3.7L-310/3
 FILTER, Engine Oil 4.7L-710/6
 FILTER, Engine Oil 3.7L-710/18
 FILTER, Fuel Pressure Regulator 014-510/7
 FILTER, Fuel Vapor Vent 025-430/4
 FILTER, Reverse And O/D Clutch 42RLE-410/49

FILTER, Reverse And O/D Clutch 45RFE-410/14
 FILTER, Transfer Case Oil 233-210/6

FILTER, Transfer Case Oil 244-210/28
 FILTER, Transmission Oil 42RLE-710/11

FILTER, Transmission Oil 45RFE-210/16

FITTING, Y-Style 007-207/3
 FITTING, Y-Style 3.7L-610/2
 FITTING, Y-Style 3.7L-910/6
 FITTING, Y-Style 4.7L-610/4
 FLANGE, Drive Shaft 016-110/5
 FLANGE, Drive Shaft 016-130/4
 FLANGE, Drive Shaft 016-120/11
 FLANGE, Driveshaft Yoke 002-610/2
 FLANGE, Driveshaft Yoke 003-210/3
 FLANGE, Driveshaft Yoke 003-220/3
 FLANGE, Driveshaft Yoke 233-410/26
 FLANGE, Driveshaft Yoke 244-410/33
 FLASHER 008-1411/7

FLOOR BOX AND PANEL SAN/230
 FLOOR CONSOLE 08A/420
 FLOOR PAN STANDARD CAB SAN/220
 FLOOR PAN, 4 DOOR SAN/225
 FLOOR PAN, CLUB CAB SAN/210
 FLYWHEEL 3.7L-410/15
 FOAM, Air Block DAN-620/10
 FOAM, Seat Cushion IAN-510/4
 FOAM, Seat Cushion IAN-530/3
 FOAM, Seat Cushion IAN-540/3
 FOOTMAN LOOP, Hold Down SAN-830/9
 FORK & RAIL SHIFT [DHT] 233/910
 FORK AND RAIL [DDC] 3500/910
 FORK AND RAIL SHIFT ON THE FLY (DHFV) 244/910
 FORK, Clutch Release 006-310/6
 FORK, First and Second 3500-910/11
 FORK, Range 233-910/1
 FORK, Range 244-910/3
 FORK, Third and Fourth 3500-910/7
 FORK, Transfer Case Mode Shift 233-910/7
 FORK, Transfer Case Mode Shift 244-910/10
 FORK, Transmission 3500-910/10
 FRAME 013/110
 FRAME, Chassis 013-110/1
 FRAME, Front Seat Cushion IAN-530/7
 FRAME, Front Seat Cushion IAN-530/8
 FRAME, Front Seat Cushion IAN-540/7
 FRAME, Front Seat Cushion IAN-540/8
 FRAME, Front Seat Cushion IAN-510/25
 FRAME, Front Seat Cushion IAN-510/26

FRONT DOOR TRIM PANELS IAN/410
 FUEL FILLER TUBE, ALL ENGINES 014/210
 FUEL LINES, FRONT 014/310
 FUEL LINES, REAR 014/315
 FUEL MODULE, ALL ENGINES 014/510
 FUEL RAIL 014/410
 FUEL TANK, ALL ENGINES 014/110
 FUSE CARTRIDGE, 50 Amp 008-510/8
 FUSE, Mini, 10 AMP, Red 008-505/2
 FUSE, Mini, 10 AMP, Red 008-510/5
 FUSE, Mini, 15 AMP, Light Blue 008-510/6
 FUSE, Mini, 20 AMP, Yellow 008-505/3
 FUSE, Mini, 20 AMP, Yellow 008-510/7
 FUSE, Mini, 25 Amp, Natural 008-505/4
 FUSE, Mini, 5 Amp, Tan 008-510/4
 FUSIBLE LINK 008-505/12

-G-

GAS PROP KIT, tonneau-hard 001-275/2
 GAS PROP KIT, tonneau-hard 001-276/2
 GAS PROP KIT, tonneau-hard 001-276/3
 GASKET 005-310/7
 GASKET AND SEAL PACKAGE, Valve Body 42RLE-710/1
 GASKET PACKAGE, Engine Lower 3.7L-310/1
 GASKET PACKAGE, Engine Upper 3.7L-210/1
 GASKET PACKAGE, Engine Upper 4.7L-210/1
 GASKET, Chain Case Cover 3.7L-610/4
 GASKET, Chain Case Cover 4.7L-610/6
 GASKET, Clutch Retainer 42RLE-420/8
 GASKET, Cylinder Head 3.7L-210/6

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

GASKET, Cylinder Head	4.7L-210/7
GASKET, Exhaust Manifold	3.7L-810/2
GASKET, Exhaust Manifold	4.7L-810/7
GASKET, Hinge To Glass	SAN-710/12
GASKET, Oil Fill Housing	3.7L-710/8
GASKET, Oil Fill Housing	4.7L-710/11
GASKET, Oil Pan	3.7L-710/19
GASKET, Oil Pan	4.7L-710/17
GASKET, Thermostat	007-207/6
GASKET, Throttle Body	014-610/6
GASKET, Throttle Body To Intake	014-610/3
GASKET, Transfer Case	233-210/8
GASKET, Transmission Oil Pump	42RLE-310/6
GASKET, Valve Cover	3.7L-210/8
GASKET, Valve Cover	4.7L-210/3
GASKET, Water Pump	007-207/2
GASKET, Water Pump	3.7L-610/8
GEAR KIT, Ring And Pinion	002-610/16
GEAR KIT, Ring And Pinion	003-210/52
GEAR KIT, Ring And Pinion	003-220/50
GEAR MOTOR, Transfer Case	233-1220/1
GEAR MOTOR, Transfer Case	244-1220/1
GEAR PACKAGE, Differential	002-610/15
GEAR PACKAGE, Differential	003-210/58
GEAR PACKAGE, Differential	003-220/56
GEAR TRAIN SHIFT ON THE FLY (DHV)	244/410
GEAR TRAIN [42RLE] [DG6]	42RLE/420
GEAR TRAIN [DDC]	3500/410
GEAR TRAIN [DHT]	233/410
GEAR, Annulus	45RFE-460/3
GEAR, Annulus	42RLE-420/
	56
GEAR, Differential	003-210/55
GEAR, Differential	003-220/53
GEAR, Differential Drive	244-410/26
GEAR, Fifth	3500-410/22
GEAR, First	3500-410/13
GEAR, Input	233-410/19
GEAR, Input	244-410/20
GEAR, Input Sun	45RFE-460/7
GEAR, Planetary	244-410/9
GEAR, Planetary	244-410/27
GEAR, Power Steering	019-310/3
GEAR, Power Steering	019-320/5
GEAR, Reaction Sun	45RFE-460/5
GEAR, Reverse	3500-410/17
GEAR, Reverse Idler	3500-410/32
GEAR, Second	3500-410/11
GEAR, Sun	42RLE-420/
	44
GEAR, Third	3500-410/6
GEAR,RACK & PINION POWER STEERING	019/310
GEAR,RACK & PINION POWER STEERING	019/320
GEARMOTOR CONTROL	233/1220
GEARMOTOR CONTROL	244/1220
GEARSHIFT [42RLE] [DG6]	42RLE/1210
GEARSHIFT CONTROLS [45RFE] [DGQ]	45RFE/1210
GLASS, Backlite, Sliding	SAN-710/8
GLASS, Door	DAN-120/11
GLASS, Front Door	DAN-120/10
GLASS, Quarter Window	SAN-710/11
GLASS, Rear Door	DAN-220/5
GLASS, Rear Door	DAN-220/6
GLOVE BOX, Instrument Panel	08A-111/20
GRILL GUARD	001/425
GRILLE AND RELATED PARTS	007/705
GRILLE, Defroster	08A-111/8
GRILLE, Demister	08A-111/30
GRILLE, Radiator	007-705/1
GRILLE, Speaker	IAN-410/5
GROMMET	45RFE-210/2
GROMMET	42RLE-230/
	14
GROMMET, Air Cleaner Bracket	014-820/13
GROMMET, Air Cleaner Bracket	014-820/16
GROMMET, Body Wiring	IAN-320/7
GROMMET, Body Wiring	008-1511/10
GROMMET, Brake Booster Check Valve	005-310/4

GROMMET, Front Door	008-1511/7
GROMMET, Link	002-120/3
GROMMET, Master Cylinder Reservoir	005-410/6
GROMMET, Rollover Valve	014-110/14
GROMMET, Shock Absorber	002-110/14
GROMMET, Shock Absorber	002-110/29
GROMMET, Shock Absorber	002-130/19
GROMMET, Shock Absorber	002-130/22
GROMMET, Spare Tire Winch Tube	022-410/6
GROMMET, Washer Reservoir	007-305/7
GROMMET, Washer Reservoir	23D-210/10
GROMMET, Windshield Washer Pump	007-305/8
GUARD KIT, Brush	001-420/1
GUARD KIT, Grille	001-425/1
GUARD KIT, Grille	001-425/2
GUIDE, Brake Adjusting Cable	005-220/16
GUIDE, Intake/Exhaust Valve, Standard Size	4.7L-510/11
GUIDE, Parking Brake Cable	004-120/5
GUIDE, Parking Sprag Pawl	45RFE-720/8
GUIDE, Timing Chain	4.7L-620/2

-H-

HANDLE, Door Interior	DAN-120/13
HANDLE, Exterior Door	DAN-130/1
HANDLE, Exterior Door	DAN-230/1
HANDLE, Lumbar	IAN-820/5
HANDLE, Parking Brake	08A-111/17
HANDLE, Roof Grab	IAN-210/3
HANDLE, Roof Grab	IAN-210/15
HANDLE, Seat Recliner	IAN-820/4
HANDLE, Seat Release	IAN-820/1
HANDLE, Seat Release	IAN-820/2
HANDLE, Tailgate	SAN-1310/2
HANDLE, Window Regulator	DAN-120/9
HANDLE, Window Regulator	DAN-220/1
HANDLES, LOCK BAR AND ATTACHING PARTS	IAN/820
HANDS FREE KIT, Cellular Phone	001-620/1
HANDS-FREE KIT/ CELLULAR PHONE-BLUE TOOT	001/620
HANGER, Exhaust	011-120/3
HANGER, Exhaust	011-120/7
HANGER, Exhaust	011-120/11
HARDWARE KIT	001-230/3
HARDWARE KIT	EAN-220/8
HARDWARE KIT	IAN-530/11
HARDWARE KIT, Accessory	001-210/2
HARDWARE KIT, Accessory	001-215/2
HARDWARE KIT, Accessory	001-220/2
HARDWARE KIT, Accessory	001-240/2
HARDWARE KIT, Accessory	001-245/2
HARDWARE KIT, Storage Exterior	001-280/3
HARDWARE KIT, Tonneau - Folding	001-270/4
HARDWARE KIT, bed tray	001-510/2
HARNESS, Canister Purge	025-410/5
HARNESS, Proportional Purge Solenoid	025-410/11
HARNESS, Speed Control Vacuum	014-1010/6
HARNESS, Vacuum	014-720/4
HARNESS, Vacuum	025-410/6
HARNESS, Vacuum	014-1010/7
HEAD, CYLINDER,[EVA]	4.7L/210
HEAD, Cylinder, Left	3.7L-210/2
HEAD, Cylinder, Left	4.7L-210/4
HEAD, Cylinder, Left	3.7L-510/10
HEAD, Cylinder, Right	3.7L-210/3
HEAD, Cylinder, Right	4.7L-210/5
HEAD, Cylinder, Right	3.7L-510/11
HEADER, Roof Front	SAN-1110/2
HEADER, Roof Rear	SAN-1110/1
HEADLAMP	008-1131/11
HEADLINER	IAN-110/1
HEADLINER AND VISOR	IAN/110
HEAT SHIELDS, ALL ENGINES	011/210
HEATER AND AIR CONDITIONING UNIT	024/120
HEATER KIT, Heater Core Assembly	024-120/58
HEATER PACKAGE, Engine Block	4.7L-310/5
HEATER PACKAGE, Engine Block	3.7L-310/10
HINGE, Armrest Pad	08A-420/18
HINGE, Front Door Lower	DAN-110/5
HINGE, Front Door Upper	DAN-110/4
HINGE, Hood	SAN-510/10

HINGE, Rear Door Lower	DAN-210/5
HINGE, Rear Door Upper	DAN-210/4
HOOD	SAN-510/1
HOOD AND RELEASE	SAN/510
HOOK, Coat	IAN-110/2
HORN & MOUNTING	008/911
HORN AND BRACKET, Dual	008-911/1
HOSE	014-210/4
HOSE	025-410/8
HOSE 1FT, Windshield Washer, 5/32"	23D-210/15
HOSE 1FT, Windshield Washer, 7/64"	23D-210/16
HOSE AND COOLER, Power Steering	019-720/3
HOSE AND TUBE, Brake	005-540/2
HOSE AND TUBE, Brake	005-540/9
HOSE, Air Cleaner	014-820/6
HOSE, Axle Vent	003-310/3
HOSE, Axle Vent	002-310/10
HOSE, Brake	004-120/3
HOSE, Brake	005-520/8
HOSE, Brake	005-530/1
HOSE, Brake	005-540/5
HOSE, Brake Vacuum	005-310/2
HOSE, Canister to NVLD	025-430/3
HOSE, Clean Air	014-820/5
HOSE, Crankcase Vent	3.7L-910/4
HOSE, Demister	024-605/2
HOSE, Fuel	014-210/6
HOSE, Fuel And Vapor, 25 Foot Roll 5/16"	233-210/24
HOSE, Fuel And Vapor, 25 Foot Roll 5/16"	244-210/21
HOSE, Fuel Filler	014-210/3
HOSE, Heater Return	024-230/27
HOSE, Heater Supply	024-230/26
HOSE, Overflow, Roll Stock	007-305/3
HOSE, Power Steering Pressure	019-720/1
HOSE, Power Steering Pressure	019-720/6
HOSE, Power Steering Return	019-720/2
HOSE, Power Steering Return	019-720/5
HOSE, Radiator Inlet	007-107/7
HOSE, Radiator Outlet	007-107/8
HOSE, Washer Reservoir	23D-210/17
HOSE, Windshield Washer	23D-210/14
HOSES, POWER STEERING	019/720
HOUSING AND STUD, Heater	024-120/13
HOUSING PAN, CLUTCH	006/210
HOUSING, A/C And Heater	024-120/12
HOUSING, A/C And Heater	024-120/26
HOUSING, A/C Upper	024-120/4
HOUSING, Air Inlet	024-120/16
HOUSING, Air Recirculating	024-120/17
HOUSING, Axle	002-310/7
HOUSING, Axle	003-210/7
HOUSING, Axle	003-220/6
HOUSING, Blower Motor	024-120/34
HOUSING, Evaporator Upper	024-120/2
HOUSING, Fuel Filler	014-210/1
HOUSING, Oil Fill	3.7L-710/5
HOUSING, Oil Fill	4.7L-710/10
HOUSING, Pump	45RFE-310/2
HOUSING, Thermostat	007-207/5
HOUSING, Thermostat	3.7L-610/12
HOUSING, Transmission Rear Extension	42RLE-225/1
HOUSING, Transmission Rear Extension	45RFE-220/5
HOUSING, FRONT AXLE	002/310
HUB AND BEARING, Brake	005-110/21
HUB AND GEAR, Second And Fourth Clutch	42RLE-420/
	66
HUB AND SHAFT PACKAGE, Underdrive Clutch	42RLE-410/8
HUB AND SHAFT, Overdrive Clutch	45RFE-430/2
HUB AND SHAFT, Overdrive Clutch	42RLE-410/
	24
HUB AND SHAFT, Reverse Clutch	45RFE-430/7
HUB AND SHAFT, Underdrive Clutch	45RFE-420/2
HUB PACKAGE, Input Clutch	42RLE-410/
	13
HUB PACKAGE, Input Clutch	42RLE-410/
	47
HUB, Input Clutch	45RFE-410/6

HUB, Input Clutch	42RLE-410/
	39
HUB, Synchronizer Mode	233-410/28
HYDRAULIC CONTROL PACKAGE, clutch master and slave cylinder	006-310/1
	-I-
IDLER SHAFT, Transmission	3500-410/34
INDICATOR	007-305/1
INDICATOR, Engine Oil Level	4.7L-710/2
INDICATOR, Engine Oil Level	3.7L-710/11
INDICATOR, PRNDL	08A-211/8
INDICATOR, Transmission Fluid Level	45RFE-210/7
INDICATOR, Transmission Fluid Level	42RLE-230/
	10
INDICATOR, Valet Status	001-910/6
INDICATOR, Valet Status	001-914/5
INJECTOR, Fuel	014-410/2
INPUT CLUTCH [45RFE] [DGQ]	45RFE/410
INPUT CLUTCH [45RFE] [DGQ]	45RFE/1340
INPUT CLUTCH PLATE [45RFE] [DGQ]	45RFE/1320
INPUT SHAFT PACKAGE, Transaxle	42RLE-410/
	38
INPUT/REVERSE PLANETARY [45RFE] [DGQ]	45RFE/450
INSERT, Exhaust Valve	4.7L-510/13
INSERT, Intake Valve	4.7L-510/12
INSERT, Transmission Shift Knob	3500-1210/1
INSERT, Valve Guide	3.7L-510/15
INSTALL KIT SATELLITE RECEIVER- WITHOUT CD CHANGER	001/125
INSTALL KIT, Satellite Receiver	001-125/1
INSTRUCTION SHEET	024-120/68
INSTRUMENT CLUSTER	08A/211
INSTRUMENT PANEL	08A/111
INSTRUMENT PANEL, VISOR AND TRIM	LBL5/110
INSULATOR, 4 Way	008-1605/9
INSULATOR, 4 Way Female	008-1311/6
INSULATOR, Engine Mount	009-130/2
INSULATOR, Engine Mount	009-130/3
INSULATOR, Engine Mount	009-135/1
INSULATOR, Engine Mount	009-140/1
INSULATOR, Engine Mount	009-150/1
INSULATOR, Engine Mount	009-150/2
INSULATOR, Engine Mount	009-160/4
INSULATOR, Engine Mount	009-160/5
INSULATOR, Exhaust	011-120/5
INSULATOR, Exhaust	011-120/10
ISOLATOR	007-115/1
ISOLATOR	013-510/3
ISOLATOR	013-510/4
ISOLATOR, Air Cleaner Mounting Leg	014-820/14
ISOLATOR, Cab Underbody Rebound	013-510/2
ISOLATOR, Front Cab Compression	013-510/5
ISOLATOR, Radiator	007-107/2
ISOLATOR, Shift Lever	3500-910/12
ISOLATOR, Spring	002-110/8
ISOLATOR, Tube	024-120/43
	-J-
JACK	022-310/1
JACK	022-320/2
JACK AND STORAGE CLUB, QUAD CAB	022/320
JACK AND STORAGE STANDARD CAB	022/310
JUNCTION BLOCK RELAYS AND FUSES	008/510
JUNCTION BLOCK, Relay	008-510/1
	-K-
KEY, Blank	23D-110/12
KEY, Master	001-270/3
KEY, Master	001-275/4
KEY, Master	001-276/5
KEY, Woodruff	3.7L-620/2
KEY, Woodruff	4.7L-620/10
KNOB, A/C And Heater Control - Rotary	024-310/2
KNOB, Gearshift	3500-1210/3
KNOB, Odometer Reset	08A-211/5
KNOB, Seat Belt Adjuster	IAN-710/5
KNOB, Seat Belt Adjuster	IAN-715/4

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

KNOB, TILT LEVER RELEASE.....	019-210/25
KNUCKLE, Front.....	002-130/4
KNUCKLE, Front.....	002-110/12
-L-	
LABEL.....	LBLS-110/2
LABEL.....	LBLS-110/3
LABEL.....	LBLS-110/4
LABEL, Air Bag Warning.....	08A-111/39
LABEL, Air Bag Warning.....	IAN-110/10
LABEL, Air Bag Warning.....	LBLS-110/5
LABEL, Air Bag Warning.....	LBLS-110/6
LABEL, Air Conditioning System.....	024-230/24
LABEL, Air Conditioning System.....	LBLS-210/1
LABEL, Airbag.....	IAN-110/8
LABEL, Belt Routing.....	007-510/3
LABEL, Belt Routing.....	LBLS-210/2
LABEL, Child Protection Lock, English.....	DAN-230/19
LABEL, Child Protection Lock, English.....	LBLS-310/1
LABEL, Coolant Reserve Cap, French.....	LBLS-210/3
LABEL, Emission.....	LBLS-210/4
LABEL, Equipment Identification.....	SAN-510/3
LABEL, Equipment Identification.....	LBLS-110/1
LABEL, Fuel.....	LBLS-410/2
LABEL, Jack Instructions.....	022-310/6
LABEL, TONNEAU.....	LBLS-410/1
LABEL, Unleaded Fuel Only.....	014-110/1
LABEL, Warning.....	LBLS-210/5
LABEL, Warning.....	LBLS-210/6
LAMP - DOME - COURTESY - READING.....	008/1151
LAMP - FRONT END.....	008/1131
LAMP - REAR END.....	008/1141
LAMP, Bulb And Socket.....	08A-211/6
LAMP, Dome.....	008-1151/1
LAMP, Dome And Reading.....	008-1151/5
LAMP, Fog.....	008-1131/16
LAMP, Front Combination.....	008-1131/10
LAMP, Headlamp Park And Turn.....	008-1131/1
LAMP, High Mounted Stop.....	008-1141/8
LAMP, Licence Plate.....	008-1141/12
LAMP, Tail Stop Backup.....	008-1141/1
LATCH.....	IAN-510/24
LATCH, Air Cleaner.....	014-820/18
LATCH, Body Side Glass.....	SAN-710/14
LATCH, Front Door.....	DAN-130/6
LATCH, Glovebox Door.....	08A-111/21
LATCH, Hood.....	SAN-510/2
LATCH, Rear Door.....	DAN-230/7
LATCH, Seat.....	IAN-620/11
LATCH, Tailgate.....	SAN-1310/7
LEAK DETECTION PUMP, ALL ENGINES.....	025/430
LENS, Cluster.....	08A-211/4
LENS, Dome Lamp.....	008-1151/4
LENS, Message Center.....	08A-430/3
LENS, Reading Lamp.....	008-1151/6
LEVEL UNIT, Fuel.....	014-510/8
LEVER.....	024-120/54
LEVER ASSY, with bracket and cable.....	019-210/22
LEVER, Defroster Door.....	024-120/11
LEVER, Defroster Door.....	024-120/69
LEVER, Floor Door.....	024-120/15
LEVER, Front Door Cylinder.....	23D-110/6
LEVER, Gearshift.....	019-210/10
LEVER, Gearshift.....	3500-210/4
LEVER, Gearshift.....	3500-1210/5
LEVER, Manual Control.....	42RLE-1210/ 5
LEVER, Manual Control.....	45RFE-1210/ 4
LEVER, Manual Valve.....	42RLE-710/4
LEVER, Panel Door.....	024-120/7
LEVER, Park Brake.....	004-110/1
LEVER, Park Brake.....	004-130/4
LEVER, Park Brake Adjusting.....	004-130/3
LEVER, Park Brake Adjusting.....	005-220/27
LEVER, Rear Wheel Brake Adjust.....	005-220/21
LEVER, Shift Shaft.....	3500-910/2

LEVER, Shift Shaft.....	45RFE-720/ 12
LICENSE PLATE KIT.....	EAN-220/7
LICENSE PLATE KIT.....	013-210/11
LID, Armrest Bin.....	IAN-510/15
LINE, A/C Liquid.....	024-230/7
LINE, A/C Suction & Discharge.....	024-230/1
LINER, Evaporator.....	024-120/42
LINER, Front Fender.....	SAN-410/9
LINES AND HOSES,FRONT-AN 1.....	005/520
LINES AND HOSES,FRONT-AN 5.....	005/530
LINES AND HOSES,REAR AND CHASSIS.....	005/540
LINES,BRAKE,FROM EHCU OR RWAL II TO FRAME-AN 1,AN 5.....	005/510
LINK AND SLEEVE, Rear Door Inside Remote to Latch.....	DAN-230/5
LINK ROD, Defrost Door.....	024-120/52
LINK ROD, Panel Door.....	024-120/8
LINK, Door Latch.....	DAN-130/3
LINK, Door Latch.....	DAN-130/4
LINK, Door Latch.....	DAN-130/7
LINK, Door Latch.....	DAN-130/8
LINK, Door Latch.....	DAN-230/3
LINK, Door Latch.....	DAN-230/11
LINK, Heater and Defroster Door.....	024-120/30
LINK, Outside Handle To Latch, Rear Door.....	DAN-230/4
LINK, Sway Eliminator.....	002-120/5
LINK, Sway Eliminator.....	017-210/4
LOCK CYLINDER.....	23D-110/15
LOCK CYLINDER.....	23D-110/16
LOCK CYLINDERS & COMPONENTS.....	23D/110
LOCK KIT, folding-tonneau.....	001-270/2
LOCK KIT, hard-tonneau.....	001-275/3
LOCK KIT, hard-tonneau.....	001-276/4
LOCK NUT, M6x1.0x6.....	014-1010/3
LOCK, Brake Hose.....	005-540/13
LOCK, Differential Bearing.....	003-210/21
LOCK, Differential Bearing.....	003-220/20
LOCK, Drive Shaft.....	003-220/57
LOCK, Valve Spring Retainer.....	4.7L-510/7
LOCK, Valve Spring Retainer.....	3.7L-510/12
LOW/ REVERSE CLUTCH [45RFE] [DGQ].....	45RFE/470
LR CLUTCH [45RFE] [DGQ].....	45RFE/1310

-M-

MAGAZINE, CD Changer.....	001-110/2
MAGNET, Transmission.....	233-210/21
MAGNET, Transmission.....	244-210/12
MAGNET, Transmission.....	42RLE-210/4
MAGNET, Transmission.....	45RFE-210/ 17
MAINSHAFT, Transfer Case.....	233-410/1
MAINSHAFT, Transfer Case.....	244-410/18
MANIFOLD, Exhaust.....	3.7L-810/3
MANIFOLD, Exhaust.....	4.7L-810/6
MANIFOLD, INTAKE & EXHAUST,[EVA].....	4.7L/810
MANIFOLD, Intake.....	4.7L-810/1
MANIFOLDS, INTAKE AND EXHAUST 3.7L [EKQ].....	3.7L/810
MANUAL, Connector Repair.....	008-1605/3
MASK, Instrument Cluster.....	08A-211/3
MAST, Antenna.....	08A-321/4
MASTER CYLINDER, Brake.....	005-410/1
MASTER CYLINDER,BRAKE.....	005/410
MAT KIT, Floor - Front.....	IAN-310/3
MAT, Floor.....	IAN-310/2
MAT, Floor Console.....	08A-420/5
MAT, Floor Console.....	08A-420/6
MAT, Floor Console.....	08A-420/7
MAT, Floor Console.....	08A-420/8
MAT, Floor Console.....	08A-420/9
MAT, Floor Console.....	08A-420/23
MAT, Single Cup.....	08A-420/10
MEDALLION, Hood, Rams Head.....	EAN-110/1
MICROPHONE, Audio.....	001-620/4
MIRROR, Inside Rear View.....	SAN-710/4
MIRROR, Outside Rearview.....	DAN-510/1
MIRROR, Outside Rearview.....	DAN-510/2
MIRROR, Outside Rearview.....	DAN-510/3
MIRRORS, EXTERIOR.....	DAN/510

MODULE KIT, Alarm without Keyless	001-910/1
MODULE KIT, Fuel Pump/Level Unit	014-510/2
MODULE PACKAGE, Fuel Pump/Level Unit	014-510/1
MODULE, Air Bag Control	008-405/3
MODULE, Anti-lock Brakes	005-510/5
MODULE, Anti-lock Brakes	008-405/6
MODULE, Anti-lock Brakes	005-510/12
MODULE, Blend Air	024-120/24
MODULE, Blend Air	024-120/25
MODULE, Compass Temperature	008-405/2
MODULE, Compass Temperature	08A-430/7
MODULE, Immobilizer	008-405/7
MODULE, Powertrain Control	008-710/1
MODULE, Security Alarm	001-910/5
MODULE, Security Alarm	001-914/1
MODULE, Security Alarm	001-914/2
MODULE, Time and Alarm	008-405/1
MODULE, Time and Alarm	23D-110/14
MODULE, Transfer Case Control	008-405/8
MODULE, Transmission Control	008-405/4
MODULE, U Connect	001-620/2
MODULES	008/405
MOLDED CARGO TRAY-BED	001/510
MOLDING, A-PILLAR	IAN-210/1
MOLDING, Cab	EAN-210/3
MOLDING, Cab	EAN-210/5
MOLDING, Cab	EAN-210/11
MOLDING, Front Door	EAN-210/4
MOLDING, Rear Door	EAN-210/6
MOLDING, Rear Door	IAN-420/2
MOLDING, Roof Joint	EAN-210/9
MOLDING, Roof Joint	EAN-210/10
MOLDING, Wheel Opening Flare	EAN-210/1
MOLDING, Wheel Opening Flare	EAN-210/7
MOLDING, Windshield	EAN-210/14
MOLDING, Windshield Reveal	EAN-210/13
MOLDINGS	EAN/210
MOTOR, Blower	024-120/33
MOTOR, Blower with Wheel	024-120/32
MOTOR, Wiper	23D-210/4
MOUNTING, COMPRESSOR	024/520
MOUNTING, TRANSMISSION [42RLE] [DG6]	42RLE/230

-N-

NAMEPLATES	EAN/110
NAVIGATION KIT	001/140
NEEDLE BEARING, Input Shaft	3500-410/3
NEEDLE BEARING, Roller Cage, None	244-410/23
NEEDLE BEARING, Second Gear	3500-410/8
NEEDLE BEARING, Third Gear	3500-410/7
NEEDLE BEARING, Transmission	3500-410/14
NEEDLE BEARING, Transmission	3500-410/16
NOZZLE, Washer, Windshield	23D-210/3
NUT	002-110/4
NUT	005-410/8
NUT	011-210/5
NUT	013-110/7
NUT	013-610/3
NUT	014-720/3
NUT	DAN-120/3
NUT	002-130/18
NUT	008-1905/6
NUT	013-110/18
NUT	3.7L-810/6
NUT	4.7L-710/4
NUT	IAN-210/16
NUT	IAN-610/10
NUT	SAN-810/18
NUT	SAN-820/18
NUT	SAN-830/15
NUT	4.7L-810/11
NUT AND WASHER, Hex, M6x1	019-210/3
NUT AND RETAINER, Hex Flange Locking, M12x1.75	017-210/11
NUT AND WASHER	019-310/1
NUT AND WASHER	019-320/7
NUT AND WASHER PACKAGE, Front Hub	002-210/6
NUT AND WASHER, Hex	019-320/3
NUT AND WASHER, Hex Nut-Coned Washer, M10x1.5	009-135/7
NUT AND WASHER, Hex Nut-Coned Washer, M10x1.5	009-155/6

NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	009-135/4
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	009-140/7
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	009-155/3
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	013-310/8
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	013-610/2
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	013-110/20
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	013-210/10
NUT AND WASHER, Hex Nut-Coned Washer, M12x1.75	IAN-620/15
NUT AND WASHER, Hex Nut-Coned Washer, M5x0.80	DAN-510/5
NUT AND WASHER, Hex Nut-Coned Washer, M6x1.00	014-1110/2
NUT AND WASHER, Hex Nut-Coned Washer, M8x1.25	IAN-610/7
NUT AND WASHER, Hex Nut-Coned Washer, M8x1.25	SAN-510/8
NUT AND WASHER, Hex Nut-Coned Washer, M8x1.25	024-230/19
NUT AND WASHER, Hex Nut-Coned Washer, M8x1.25	024-230/25
NUT AND WASHER, Hex Nut-Sealing Washer, M6x1.00	014-820/1
NUT AND WASHER, Hex, .375-.24	233-210/4
NUT AND WASHER, Hex, .375-.24	244-210/4
NUT AND WASHER, Hex, M10x1.5	025-310/6
NUT AND WASHER, Hex, M10x1.5	013-110/12
NUT AND WASHER, Hex, M5x.80	007-705/4
NUT AND WASHER, Hex, M5x.80	DAN-130/2
NUT AND WASHER, Hex, M5x.80	DAN-230/2
NUT AND WASHER, Hex, M8x1.25	008-1311/3
NUT AND WASHER, Hex, M8x1.25	019-210/28
NUT AND WASHER, M10x1.5	002-110/27
NUT AND WASHER, M10x1.5	002-130/21
NUT AND WASHER, M6x1.00	008-1311/5
NUT AND WASHER, M6x1.00	008-1411/3
NUT AND WASHER, M6x1.00	019-210/31
NUT, Axle Hub	005-110/19
NUT, Castle, M14x1.5	002-130/6
NUT, Castle, M14x1.5	002-110/11
NUT, Coned Washer, M10 x 1.50	009-140/5
NUT, Flange Lock, M10x1.50	009-155/5
NUT, Flange Lock, M10x1.50	019-210/29
NUT, Fuel Pump Module	014-510/3
NUT, Hex	002-110/7
NUT, Hex	002-130/8
NUT, Hex	002-110/13
NUT, Hex Flange	233-410/23
NUT, Hex Flange Lock	002-140/3
NUT, Hex Flange Lock	011-120/1
NUT, Hex Flange Lock	017-110/1
NUT, Hex Flange Lock	017-110/7
NUT, Hex Flange Lock	017-120/1
NUT, Hex Flange Lock	002-110/24
NUT, Hex Flange Lock	002-130/12
NUT, Hex Flange Lock	005-220/28
NUT, Hex Flange Lock	017-120/10
NUT, Hex Flange Lock, .312-18	004-120/1
NUT, Hex Flange Lock, .312-18	005-540/10
NUT, Hex Flange Lock, .312-18	006-310/10
NUT, Hex Flange Lock, M10x1.5	002-120/6
NUT, Hex Flange Lock, M10x1.5	017-210/2
NUT, Hex Flange Lock, M10x1.5	017-210/9
NUT, Hex Flange Lock, M10x1.5	016-120/16
NUT, Hex Flange Lock, M12x1.75	002-140/2
NUT, Hex Flange Lock, M12x1.75	009-160/9
NUT, Hex Flange Lock, M12x1.75	002-110/22
NUT, Hex Flange Lock, M12x1.75	002-130/17
NUT, Hex Flange Lock, M12x1.75	017-210/13
NUT, Hex Flange Lock, M8x1.25	008-110/6
NUT, Hex Flange, .25-7	IAN-320/8
NUT, Hex Flange, .25-7	SAN-610/20
NUT, Hex Flange, M22x1.25	002-210/5
NUT, Hex Flange, M22x1.25	005-110/16
NUT, Hex Flange, M8x1.25	004-110/3
NUT, Hex Flange, M8x1.25	009-145/5
NUT, Hex Flange, M8x1.25	009-165/5
NUT, Hex Flange, M8x1.25	025-310/3
NUT, Hex Lock	002-110/2
NUT, Hex Lock, M10x1.5	002-120/1
NUT, Hex Lock, M14 x 2.00	002-130/3
NUT, Hex Lock, M8x1.25	SAN-510/9
NUT, Hex Lock, M8x1.25	3.7L-710/23
NUT, Hex Lock, M8x1.25	4.7L-710/21
NUT, Hex Weld, M8x1.25	DAN-210/3

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

NUT, Hex, .250-20	45RFE-1210/ 6
NUT, Hex, .375-24	003-220/9
NUT, Hex, .375-24	003-210/10
NUT, Hex, .42-20	008-110/3
NUT, Hex, .50-20	022-110/5
NUT, Hex, .875-14	002-610/1
NUT, Hex, M10-1.5	005-310/8
NUT, Hex, M10-1.5	005-610/9
NUT, Hex, M10-1.5	006-310/5
NUT, Hex, M10-1.5	3500-1210/2
NUT, Hex, M10-1.5	42RLE-1210/ 4
NUT, Hex, M10-1.5	45RFE-1210/ 10
NUT, Hex, M10X1.25	23D-210/5
NUT, Hex, M6x1	008-1011/13
NUT, M10x1.5	001-1030/4
NUT, M10x1.5	014-110/11
NUT, M10x1.50	009-135/6
NUT, M12x1.75	009-130/5
NUT, M12x1.75	009-140/4
NUT, M12x1.75	009-150/5
NUT, M12x1.75	009-160/7
NUT, M6x1	08A-321/6
NUT, Pinion Yoke	003-210/1
NUT, Pinion Yoke	003-220/1
NUT, Plastic	DAN-510/6
NUT, Plastic	SAN-610/4
NUT, Plastic Snap-in	08A-420/3
NUT, Plastic Snap-in	DAN-230/13
NUT, Push	005-220/9
NUT, Push	005-110/18
NUT, Push In	IAN-210/11
NUT, Push On, M6	IAN-820/3
NUT, Push-On Spring, 3	SAN-610/17
NUT, Rear Brake Auto Adjust Pivot	005-220/31
NUT, Rear Carrier, M36 x 1.50	42RLE-420/ 42
NUT, Spring, .19-16	008-1141/5
NUT, Transfer Case Yoke	244-410/31
NUT, Transmission Case	007-610/5
NUT, Transmission Case	45RFE-210/ 21
NUT, U Multi Thread	013-210/9
NUT, U Multi-Thread, .19-24	SAN-910/8
NUT, U, M6x1	005-610/12
NUT, U, M6x1	019-210/35
NUT, U, M6x1	024-120/23
NUT, Wheel, .50x20	022-110/4
NUT/SPRING, Push In, For M6 Stud	08A-420/2

-O-

O / H [45RFE] [DGQ]	45RFE/1330
O RING	3.7L-610/5
O RING	3.7L-710/7
O RING	3.7L-910/3
O RING	4.7L-610/7
O RING	4.7L-910/3
O RING	3.7L-210/17
O RING	4.7L-210/15
O RING KIT, Linear Solenoid	014-610/9
O RING KIT, Quick Connect	024-230/8
O RING KIT, Quick Connect	024-230/23
O RING, A/C Line	024-230/2
O RING, A/C Line	024-230/13
O RING, A/C Suction Line	024-230/5
O RING, A/C Suction Line	024-230/6
O RING, Engine Oil Indicator	4.7L-710/5
O RING, Engine Oil Indicator	3.7L-710/13
O RING, Oil Pump	45RFE-310/ 13
ORING, Reverse & O/Drive Clutch Piston, Transmission	42RLE-410/ 46
ORING, Reverse & O/Drive Clutch Piston, Transmission	45RFE-410/ 13
O RING, Shaft Disconnect	002-310/6

O RING, Throttle Body	014-610/2
O RING, Trans Oil Filter	42RLE-710/ 12
O RING, Transmission Clutch	45RFE-410/7
O RING, Transmission Clutch	45RFE-410/8
O RING, Transmission Clutch	42RLE-410/ 40
O RING, Transmission Clutch	42RLE-410/ 41
OIL COOLER LINES	007/610
OIL PUMP [42RLE] [DG6]	42RLE/310
OIL PUMP [45RFE] [DGQ]	45RFE/310
OILING, ENGINE,[EVA]	4.7L/710
ORIFICE, Liquid Line	024-230/9
OUTLET, Air	08A-111/25
OUTPUT SHAFT, Transfer Case	233-410/22
OUTPUT SHAFT, Transfer Case	244-410/37
OVERDRIVE [45RFE] [DGQ]	45RFE/430
OVERHAUL PACKAGE, Transmission	42RLE-110/3
OVERHAUL PACKAGE, Transmission	45RFE-210/1
OVERHAUL PACKAGE, Transmission	42RLE-410/ 32
OVERHAUL PACKAGE, Transmission	45RFE-1330/ 1
OVERHEAD CONSOLE	08A/430
OVERLAY, Vehicle Certification	LBLS-310/2

-P-

PAD KIT, Disc Brake	005-110/9
PAD KIT, Front Disc Brake	005-110/10
PAD KIT, Rear Disc Brake	005-210/7
PAD, Armrest	08A-420/14
PAD, Parking Brake Pedal	004-110/6
PAD, Pedal	005-610/7
PAD, Pedal	006-410/2
PAD, Shift Fork	233-910/2
PAD, Shift Fork	233-910/3
PAD, Shift Fork	233-910/8
PAD, Shift Fork	244-910/4
PAD, Shift Fork	244-910/5
PAD, Shift Fork	244-910/11
PAD, Shift Fork	244-910/12
PAN, Center Floor	SAN-210/1
PAN, Center Floor	SAN-220/1
PAN, Engine Oil	3.7L-710/24
PAN, Engine Oil	4.7L-710/14
PAN, Floor	SAN-210/2
PAN, Floor	SAN-220/2
PAN, Front Floor	SAN-225/1
PAN, Rear Floor	SAN-225/2
PAN, Transmission Oil	42RLE-210/3
PAN, Transmission Oil	45RFE-210/ 18
PANEL, B Pillar	IAN-220/7
PANEL, B Pillar Lower Trim	IAN-220/2
PANEL, B Pillar Upper Trim	IAN-220/1
PANEL, B Pillar Upper Trim	IAN-220/6
PANEL, Body Side Aperture	SAN-810/1
PANEL, Body Side Aperture	SAN-820/1
PANEL, Body Side Aperture Center	SAN-830/2
PANEL, Body Side Aperture Front	SAN-830/1
PANEL, Body Side Aperture Rear	SAN-830/3
PANEL, Body Side Front	SAN-810/4
PANEL, Body Side Front	SAN-820/4
PANEL, Box Floor	SAN-230/1
PANEL, Box Side	SAN-910/2
PANEL, Box Side Outer	SAN-910/1
PANEL, C Pillar	IAN-220/9
PANEL, C Pillar	IAN-220/10
PANEL, Cab Back	SAN-810/9
PANEL, Cab Back	SAN-820/8
PANEL, Cab Back	SAN-820/9
PANEL, Cab Back	SAN-830/5
PANEL, Cowl	SAN-610/1
PANEL, Cowl	SAN-610/8
PANEL, Cowl Plenum Lower	SAN-610/5
PANEL, Cowl Side	SAN-610/9
PANEL, Cowl Side Trim	IAN-210/6

PANEL, Dash	SAN-610/12	PIPE FITTING, Chain Case Cover, .375-18x2	007-207/9
PANEL, Door Outer	DAN-110/2	PIPE FITTING, Chain Case Cover, .375-18x2	4.7L-610/2
PANEL, Fender Side Shield	SAN-410/10	PIPE, Exhaust Extension	011-120/12
PANEL, Front Box	SAN-230/7	PIPE, Exhaust, To Manifold	011-120/2
PANEL, Front Door Trim	IAN-410/1	PISTON PIN AND ROD, STD	3.7L-410/1
PANEL, Front Facsia	013-210/6	PISTON PIN AND ROD, STD	4.7L-410/20
PANEL, Instrument	08A-111/3	PISTON, 2nd and 4th Accumulator	42RLE-710/7
PANEL, Instrument Upper	08A-111/1	PISTON, 2nd and 4th Accumulator	42RLE-720/3
PANEL, License Plate	013-310/5	PISTON, 2nd and 4th Accumulator	45RFE-710/11
PANEL, Plenum End	SAN-610/7	PISTON, Brake	005-110/5
PANEL, Quarter	SAN-810/3	PISTON, Brake	005-210/4
PANEL, Quarter Extension	SAN-820/3	PISTON, Low and Reverse Clutch	42RLE-420/5
PANEL, Quarter Extension	SAN-830/7	PISTON, Reverse and Overdrive	42RLE-410/48
PANEL, Quarter Inner	SAN-810/14	PISTON, Reverse and Overdrive	45RFE-410/15
PANEL, Quarter Inner	SAN-820/14	PISTON, Underdrive	42RLE-410/53
PANEL, Quarter Trim	IAN-220/4	PISTON, Underdrive	45RFE-410/18
PANEL, Quarter Trim	IAN-220/5	PISTON, Underdrive	45RFE-410/20
PANEL, Rear Door Trim	IAN-420/1	PIVOT, Clutch Release	006-310/8
PANEL, Roof	SAN-1110/4	PLANETARY PLATE [45RFE] [DGQ]	45RFE/1350
PANEL, Sill	SAN-225/3	PLANETARY, Transfer Case	233-410/10
PANEL, Sill	SAN-225/20	PLANETARY, Transfer Case	244-410/10
PANEL, Underbody Front	SAN-210/3	PLATE	024-120/27
PANEL, Underbody Front	SAN-210/4	PLATE	233-410/16
PANEL, Underbody Front	SAN-220/3	PLATE	45RFE-420/7
PANEL, Underbody Front	SAN-220/8	PLATE	45RFE-430/8
PANEL, Underbody Front	SAN-225/4	PLATE	45RFE-410/22
PANEL, Underbody Front	SAN-225/11	PLATE	45RFE-440/18
PANEL, Underbody Front	SAN-225/15	PLATE	45RFE-440/20
PANEL, Underbody Front	SAN-225/16	PLATE AND WASHER PACKAGE, Thrust	42RLE-410/9
PARKING BRAKE ASSEMBLY, REAR, DISC	004/130	PLATE AND WASHER PACKAGE, Thrust	42RLE-410/23
PARKING BRAKE CABLES	004/120	PLATE PACKAGE - SKID, FRONT	001/1020
PARKING BRAKE LEVER	004/110	PLATE PACKAGE - SKID, TRANSFER CASE	001/1025
PARKING SPRAG [45RFE] [DGQ]	45RFE/720	PLATE PACKAGE, Input Clutch Thrust	45RFE-1320/1
PARKING SPRAG [42RLE] [DG6]	42RLE/730	PLATE PACKAGE, Low/Reverse Clutch, 5.753/6.012	42RLE-420/50
PAWL, Parking Sprag	45RFE-720/5	PLATE PACKAGE, Low/Reverse Clutch, 6.013/6.272	42RLE-420/51
PEDAL, Accelerator	014-1110/1	PLATE PACKAGE, Low/Reverse Clutch, 6.273/6.532	42RLE-420/52
PEDAL, Brake	005-610/5	PLATE PACKAGE, Low/Reverse Clutch, 6.533/6.792	42RLE-420/53
PEDAL, CLUTCH	006/410	PLATE PACKAGE, Low/Reverse Clutch, 6.793/7.052	42RLE-420/54
PEDAL, Clutch	005-610/8	PLATE PACKAGE, Planetary Thrust	45RFE-1350/1
PEDAL, Clutch	006-410/5	PLATE PACKAGE, Skid - Front	001-1020/1
PEDALS, BRAKE AND CLUTCH	005/610	PLATE PACKAGE, Skid - Fuel Tank	001-1030/1
PIN	007-115/6	PLATE PACKAGE, Skid - Transfer Case	001-1025/1
PIN	4.7L-310/3	PLATE PACKAGE, Underdrive Reaction, 5.72/5.82	42RLE-410/2
PIN	45RFE-720/3	PLATE PACKAGE, Underdrive Reaction, 6.21/6.31	42RLE-410/3
PIN, Armrest Lid Hinge	IAN-510/28	PLATE PACKAGE, Underdrive Reaction, 6.70/6.80	42RLE-410/4
PIN, Brake Shoe Hold Down	004-130/6	PLATE PACKAGE - SKID, FUEL TANK	001/1030
PIN, Brake Shoe Hold Down	005-220/2	PLATE, Armrest	DAN-230/9
PIN, Caliper	005-110/2	PLATE, Brake Backing	005-220/4
PIN, Caliper	005-210/1	PLATE, Brake Shoe Guide	005-220/17
PIN, Cotter	002-130/5	PLATE, Clutch Hub Thrust	45RFE-440/2
PIN, Cotter	002-130/7	PLATE, Clutch Pressure	45RFE-430/4
PIN, Cotter	022-410/7	PLATE, Clutch Separator	45RFE-440/15
PIN, Cotter	002-110/10	PLATE, Floor Console	08A-420/12
PIN, Cotter	002-110/18	PLATE, Front Door Striker	DAN-130/9
PIN, Cotter, M5x36.00	002-210/7	PLATE, Front Door Striker	DAN-230/15
PIN, Cotter, M5x36.00	005-110/17	PLATE, Fuel Tank Skid	001-1030/2
PIN, Detent	3500-210/14	PLATE, Manual Valve Cam	45RFE-710/3
PIN, Differential Shaft	002-610/19		
PIN, Locating	3500-210/9		
PIN, M5x50.00	019-210/11		
PIN, Master Cylinder Reservoir	005-410/5		
PIN, Push	45RFE-1210/8		
PIN, Push In, M6.3x15 LG	IAN-320/11		
PIN, Retainer	SAN-610/2		
PIN, Retainer	SAN-1110/6		
PIN, Retainer	SAN-1110/7		
PIN, Retainer	SAN-410/12		
PIN, Retainer	SAN-810/12		
PIN, Retainer	SAN-820/12		
PIN, Retainer	SAN-830/19		
PIN, Roll	IAN-820/7		
PIN, Shift Shaft	3500-910/6		
PIN, Shift Shaft	3500-910/8		
PIN, Splash Shield	013-310/3		
PIN, Spring, .250 x 1.00	002-130/14		
PINION, Differential	003-210/56		
PINION, Differential	003-220/54		

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

PLATE, Rear Spring Clip	017-110/8
PLATE, Rear Spring Clip	017-120/9
PLATE, Scuff	IAN-210/9
PLATE, Scuff	IAN-210/14
PLATE, Shift	45RFE-1210/9
PLATE, Sway Bar	017-210/12
PLATE, Torque Converter Drive	3.7L-410/17
PLATE, Torque Converter Drive	4.7L-410/24
PLATE, Torque Converter Drive	42RLE-230/2
PLATE, Transmission Clutch Reaction	45RFE-420/4
PLATE, Transmission Clutch Reaction	45RFE-470/5
PLATE, Transmission Clutch Reaction	42RLE-410/17
PLATE, Transmission Clutch Reaction	42RLE-420/47
PLATE, Transmission Clutch Reaction	42RLE-420/49
PLATE, Transmission Clutch Reaction	42RLE-420/67
PLATE, Transmission Clutch Reaction	45RFE-430/10
PLATE, Transmission Clutch Reaction	45RFE-440/16
PLATE, Transmission O/Drive Clutch	42RLE-410/12
PLATE, Transmission O/Drive Clutch	42RLE-410/16
PLATE, Transmission O/Drive Clutch	42RLE-410/18
PLATE, Transmission O/Drive Clutch	42RLE-410/25
PLATE, Transmission O/Drive Clutch	42RLE-410/28
PLAYER KIT - CD CHANGER - 6 DISC	001/110
PLAYER KIT, CD Changer - 6 Disc	001-110/1
PLUG	SAN-310/1
PLUG	SAN-310/4
PLUG	SAN-310/5
PLUG	SAN-320/1
PLUG	SAN-320/2
PLUG	SAN-320/7
PLUG	SAN-320/8
PLUG	007-207/11
PLUG	007-207/12
PLUG	3.7L-610/3
PLUG	4.7L-210/6
PLUG	3.7L-210/14
PLUG	3.7L-210/15
PLUG	3500-210/28
PLUG, Access Hole	SAN-320/9
PLUG, Access Hole	3.7L-210/16
PLUG, Access Hole	4.7L-210/10
PLUG, Antenna Hole	08A-321/7
PLUG, Anti-Rattle	022-410/8
PLUG, Anti-Rattle	SAN-320/6
PLUG, Armrest	IAN-530/10
PLUG, Assist and Grab Handle	IAN-210/4
PLUG, Body	SAN-910/18
PLUG, Body, 19.05mm x 31.75mm	SAN-320/4
PLUG, Brake Adjusting Hole	005-220/3
PLUG, Brake Adjusting Hole	004-130/10
PLUG, Camshaft	4.7L-510/3
PLUG, Core, 1.25 Diameter	3.7L-510/9
PLUG, Core, 1.25 Diameter	3.7L-210/13
PLUG, Core, 1.25 Diameter	4.7L-210/13
PLUG, Core, 1.39 Diameter	4.7L-310/2
PLUG, Core, 1.50 Diameter	3.7L-310/6
PLUG, Differential Cover	002-310/12
PLUG, Differential Cover	003-210/19
PLUG, Differential Cover	003-220/18
PLUG, Door	SAN-320/3
PLUG, Door	DAN-610/13
PLUG, Floor	SAN-320/5
PLUG, Floor Pan	SAN-310/2
PLUG, Floor Pan	SAN-310/3
PLUG, Hex Socket, 3/8-18NPTx.475	4.7L-610/3

PLUG, Hex Socket, 3/8-18NPTx.475	4.7L-210/14
PLUG, Oil Drain	3.7L-710/26
PLUG, Oil Drain	3500-210/13
PLUG, Oil Drain	4.7L-710/24
PLUG, Oil Fill	244-210/3
PLUG, Oil Fill	233-210/19
PLUG, Oil Fill	3500-210/12
PLUG, Pipe	3.7L-310/4
PLUG, Pipe	4.7L-310/4
PLUG, Pipe	3.7L-710/10
PLUG, Pressure Check	45RFE-210/22
PLUG, Timing Belt Cover	DAN-510/4
PLUG, Transaxle Case	42RLE-210/2
PLUG, Water Pump Reservoir	3.7L-610/10
PLUG, Wiring	008-1605/4
PLUG, Wiring	008-1511/16
PLUGS FLOOR PAN	SAN/310
PLUGS MISCELLANEOUS	SAN/320
PLUMBING, HEATER AND AIR CONDITIONING	024/230
PLUNGER	244-210/8
PLUNGER	233-210/15
PLUNGER	3500-910/4
PLUNGER	3500-210/17
PORT, Emission Testing	025-410/12
POWER DISTRIBUTION CENTER	008-505/1
POWER DISTRIBUTION CENTER RELAYS AND FUSES	008/505
POWER OUTLET	08A-111/31
POWER OUTLET	08A-111/38
POWER OUTLET	08A-420/16
PROBE, Air Conditioning	024-120/56
PULLER, Fuse	008-510/9
PULLER, Fuse	08A-111/7
PULLEY, Idler	008-210/5
PULLEY, Power Steering Pump	019-510/4
PUMP PACKAGE, Transmission	45RFE-310/1
PUMP, Engine Oil	3.7L-710/1
PUMP, Engine Oil	4.7L-710/8
PUMP, Power Steering	019-510/2
PUMP, Transfer Case Gear Rotor	244-410/28
PUMP, Transfer Case Oil	233-410/5
PUMP, Transmission Oil	42RLE-310/2
PUMP, Washer, Windshield	007-305/11
PUMP, Washer, Windshield	23D-210/12
PUMP, Water	007-207/1
PUMP, Water	3.7L-610/7
PUMP, MOUNTING AND PULLEY	019/510
PUSH PIN	IAN-110/11
PUSH PIN, M5x13	SAN-610/18

-R-

RADIATOR AND RELATED PARTS	007/107
RADIATOR CLOSURE AND AIR DEFLECTOR	007/115
RADIATOR, Engine Cooling	007-107/1
RADIO	08A/311
RADIO, AM/FM CD W/NAV/DVD & CD-CTRL	001-140/1
RADIO, AM/FM CD W/NAV/DVD & CD-CTRL	001-140/2
RADIO, AM/FM with CD and Cassette	08A-311/1
RADIO, AM/FM with CD and Equalizer	08A-311/4
RADIO, AM/FM with CD and Equalizer	08A-311/5
RADIO, AM/FM/Cassette With CD	08A-311/2
RADIO, AM/FM/Cassette With CD	08A-311/3
RAIL ASSY, tonneau w/frame	SAN-1710/6
RAIL ASSY, tonneau w/frame	SAN-1710/12
RAIL ASSY, tonneau w/frame	SAN-1710/13
RAIL, Fuel	014-410/1
RAIL, Roof	SAN-810/2
RAIL, Roof	SAN-820/2
RAIL, Roof	SAN-1110/3
RAIL, Tonneau Cover	SAN-1710/3
RAIL, Tonneau Cover	SAN-1710/4
RAIL, Tonneau Cover	SAN-1710/9
RAIL, Tonneau Cover	SAN-1710/10
RAIL, Transfer Case	244-910/17
REACTION ANNULUS / SUN GEAR [45RFE] [DGQ]	45RFE/460
REAR DOOR TRIM PANELS	IAN/420
REAR HITCH	013/610
REAR SEAT, CLUB CAB	IAN/610
REAR SEAT, QUAD CAB	IAN/620

RECEIVER KIT, Trailer Tow	013-610/1
RECEIVER KIT, Trailer Tow	013-110/19
RECEIVER, Satellite	001-120/1
RECEIVER, Satellite	001-120/3
REGULATOR, Front Door Window	DAN-120/5
REGULATOR, Rear Door Window	DAN-220/3
REINFORCEMENT AND NUT	013-210/13
REINFORCEMENT, Body Side Aperture	SAN-830/21
REINFORCEMENT, Box Crossmember	SAN-910/15
REINFORCEMENT, Box Side	SAN-910/12
REINFORCEMENT, Box Side	SAN-910/14
REINFORCEMENT, Cab Back	SAN-810/8
REINFORCEMENT, Cab Back	SAN-830/6
REINFORCEMENT, Cowl Side	SAN-810/7
REINFORCEMENT, Cowl Side	SAN-820/5
REINFORCEMENT, Cowl Side	SAN-830/10
REINFORCEMENT, Door Inner	DAN-120/15
REINFORCEMENT, Hood Hinge	SAN-610/6
REINFORCEMENT, Instrument Panel	08A-111/2
REINFORCEMENT, Seat Belt	SAN-225/18
REINFORCEMENT, Seat Belt	SAN-810/11
REINFORCEMENT, Seat Belt	SAN-820/10
REINFORCEMENT, Seat Belt	SAN-830/18
RELATED PARTS [45RFE] [DGQ]	45RFE/210
RELAY PACKAGE, Electrical	008-505/10
RELAY, Electrical	001-255/5
RELAY, Mini	008-505/9
RELAY, Mini	008-510/2
RELEASE, Hood Latch	SAN-510/5
REPAIR KIT, Wheel Cylinder	005-220/8
REPAIR KIT, armrest latch	IAN-510/8
RESERVOIR, Brake Master Cylinder	005-410/3
RESERVOIR, Vacuum	014-1010/8
RESISTOR, A/C Heater	024-120/51
RESONATOR, Air Cleaner	014-820/9
RETAINER	014-510/9
RETAINER	SAN-910/19
RETAINER AND SEAL, Transmission U/Drive Spring	42RLE-410/30
RETAINER PACKAGE, 2nd & 4th Clutch Piston	42RLE-410/52
RETAINER PACKAGE, 2nd & 4th Clutch Piston	42RLE-420/62
RETAINER PACKAGE, 2nd & 4th Clutch Piston	42RLE-420/63
RETAINER PACKAGE, Vent and Stationary Glass	SAN-710/13
RETAINER, Axle Shaft	003-210/59
RETAINER, Clutch	45RFE-470/8
RETAINER, Control Arm Bushing	002-130/2
RETAINER, Door Lock Striker	SAN-810/6
RETAINER, Door Lock Striker	SAN-820/7
RETAINER, Door Lock Striker	SAN-830/8
RETAINER, Door Lock Striker	SAN-830/12
RETAINER, Headlamp Bulb	008-1131/12
RETAINER, Headlamp Receptical	008-1131/9
RETAINER, Headlamp Welt	008-1131/7
RETAINER, Parking Brake Lever	005-220/25
RETAINER, Shaft	005-610/4
RETAINER, Shaft	006-410/1
RETAINER, Shaft	3500-210/3
RETAINER, Shock Absorber	002-110/15
RETAINER, Shock Absorber	002-110/28
RETAINER, Shock Absorber	002-130/20
RETAINER, Shock Absorber	002-130/23
RETAINER, Sway Bar	002-120/2
RETAINER, Sway Bar	002-120/4
RETAINER, Sway Bar	002-120/8
RETAINER, Sway Bar	002-140/6
RETAINER, Sway Bar	017-210/7
RETAINER, Tonneau Cover Hook	SAN-1710/15
RETAINER, Transfer Case Rear	233-210/10
RETAINER, Transfer Case Rear	244-210/10
RETAINER, Transmission 2nd and 4th Accumulator Piston	42RLE-710/19
RETAINER, Transmission 2nd and 4th Clutch Piston	45RFE-440/4
RETAINER, Transmission Input Clutch	42RLE-410/35

RETAINER, Transmission Input Clutch	45RFE-410/16
RETAINER, Transmission Low and Reverse Clutch Piston	42RLE-420/6
RETAINER, Transmission Output Shaft Bearing	3500-410/23
RETAINER, Valve Spring	4.7L-510/8
RETAINER, Valve Spring	3.7L-510/13
RETAINER, Weatherstrip	DAN-620/11
RETAINING RING, Idler	3.7L-620/17
RING	233-410/9
RING	244-410/7
RING	3500-410/39
RING	45RFE-440/7
RING	45RFE-440/10
RING	45RFE-440/11
RING PACKAGE, Piston, Standard Size	3.7L-410/3
RING PACKAGE, Piston, Standard Size	4.7L-410/21
RING, Synchronizer Blocker	3500-410/36
RING, Third and Fourth, Snap	3500-210/23
RING, Tone	3.7L-410/10
RING, Transmission	3500-410/20
RING, Transmission	45RFE-310/12
RING, U Joint	016-130/10
RIVET, M6.25x28 Black	SAN-410/11
ROCKER ARM, Valve	3.7L-510/7
ROCKER ARM, Valve	4.7L-510/17
ROD, Brake Cylinder Piston	005-220/6
ROD, Parking Brake Release	004-110/5
ROD, Parking Sprag	42RLE-730/6
ROD, Parking Sprag	45RFE-720/9
ROD, Tailgate Handle to Latch	SAN-1310/6
ROLLER, Front and Rear Pinion	42RLE-420/71
ROOF PANELS	SAN/1110
ROTOR, Brake	005-110/14
ROTOR, Brake	005-210/10

-S-

SATELLITE RECEIVER KIT	001/120
SCREEN, Transmission Regulator Valve	42RLE-710/15
SCREW	006-310/4
SCREW	007-207/4
SCREW	014-210/7
SCREW	014-410/5
SCREW	014-410/6
SCREW	014-820/8
SCREW	022-410/1
SCREW	022-410/2
SCREW	024-510/2
SCREW	08A-316/2
SCREW	08A-316/4
SCREW	08A-316/7
SCREW	08A-321/9
SCREW	08A-420/4
SCREW	08A-430/6
SCREW	233-210/5
SCREW	23D-210/7
SCREW	244-210/5
SCREW	DAN-230/8
SCREW	EAN-210/2
SCREW	EAN-210/8
SCREW	IAN-410/3
SCREW	IAN-410/4
SCREW	IAN-720/4
SCREW	SAN-710/6
SCREW	008-1131/6
SCREW	008-805/21
SCREW	017-210/10
SCREW	019-210/20
SCREW	019-210/34
SCREW	024-120/57
SCREW	08A-111/45
SCREW	244-410/29
SCREW	3.7L-620/8
SCREW	3.7L-710/9

2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG

Alphabetic
Index

SCREW.....	4.7L-310/9	SCREW AND WASHER, Hex Head, M10x1.5x25.	009-140/11
SCREW.....	4.7L-410/4	SCREW AND WASHER, Hex Head, M10x1.5x28.	009-130/4
SCREW.....	4.7L-620/8	SCREW AND WASHER, Hex Head, M10x1.5x28.	009-150/3
SCREW.....	DAN-120/12	SCREW AND WASHER, Hex Head, M10x1.5x28.	009-160/1
SCREW.....	EAN-210/15	SCREW AND WASHER, Hex Head, M10x1.5x28.	009-140/10
SCREW.....	IAN-510/16	SCREW AND WASHER, Hex Head, M10x1.5x30.	016-120/14
SCREW.....	SAN-1310/9	SCREW AND WASHER, Hex Head, M10x1.5x37.	42RLE-220/5
SCREW.....	SAN-230/11	SCREW AND WASHER, Hex Head, M10x1.5x37.	45RFE-220/3
SCREW.....	3.7L-210/11	SCREW AND WASHER, Hex Head, M10x1.5x40.	009-160/11
SCREW.....	3.7L-410/16	SCREW AND WASHER, Hex Head, M10x1.5x45.	002-810/2
SCREW.....	3.7L-610/11	SCREW AND WASHER, Hex Head, M10x1.5x45.	002-810/4
SCREW.....	3.7L-620/12	SCREW AND WASHER, Hex Head, M10x1.5x45.	013-510/6
SCREW.....	3500-1210/6	SCREW AND WASHER, Hex Head, M10x1.5x45.	233-1210/3
SCREW.....	4.7L-210/11	SCREW AND WASHER, Hex Head, M10x1.5x45.	244-1210/3
SCREW.....	4.7L-710/22	SCREW AND WASHER, Hex Head, M10x1.5x70.	007-407/2
SCREW.....	42RLE-710/5	SCREW AND WASHER, Hex Head, M10x1.5x70.	008-240/4
SCREW.....	45RFE-210/9	SCREW AND WASHER, Hex Head, M12x1.75x155	009-130/6
SCREW.....	45RFE-210/19	SCREW AND WASHER, Hex Head, M12x1.75x155	009-140/3
SCREW AND WASHER.....	002-130/9	SCREW AND WASHER, Hex Head, M12x1.75x155	009-150/4
SCREW AND WASHER.....	024-520/5	SCREW AND WASHER, Hex Head, M12x1.75x60	009-160/12
SCREW AND WASHER.....	3.7L-410/5	SCREW AND WASHER, Hex Head, M6x1x17 ...	014-310/5
SCREW AND WASHER.....	4.7L-410/7	SCREW AND WASHER, Hex Head, M6x1x17 ...	45RFE-210/5
SCREW AND WASHER.....	4.7L-620/7	SCREW AND WASHER, Hex Head, M6x1x17 ...	42RLE-230/12
SCREW AND WASHER.....	SAN-1310/3	SCREW AND WASHER, Hex Head, M6x1x20 ...	DAN-220/4
SCREW AND WASHER.....	3.7L-620/11	SCREW AND WASHER, Hex Head, M6x1x20 ...	SAN-510/4
SCREW AND WASHER.....	3.7L-710/22	SCREW AND WASHER, Hex Head, M6x1x25 ...	SAN-810/10
SCREW AND WASHER.....	4.7L-410/19	SCREW AND WASHER, Hex Head, M6x1x25 ...	SAN-820/11
SCREW AND WASHER.....	4.7L-710/19	SCREW AND WASHER, Hex Head, M6x1x25 ...	SAN-830/13
SCREW AND WASHER, Button Head Torx.....	DAN-230/18	SCREW AND WASHER, Hex Head, M8-1.25x22.00	005-510/8
SCREWANDWASHER,HexHeadLock,M8-1.25x30.00.....	DAN-210/6	SCREW AND WASHER, Hex Head, M8-1.25x32.00	002-110/17
SCREW AND WASHER, Hex.....	008-210/8	SCREW AND WASHER, Hex Head, M8-1.25x40 ...	45RFE-1210/5
SCREW AND WASHER, Hex.....	008-240/2	SCREW AND WASHER, Hex Head, M8x1.25x20.	006-110/4
SCREW AND WASHER, Hex.....	3.7L-620/5	SCREW AND WASHER, Hex Head, M8x1.25x20.	022-410/4
SCREW AND WASHER, Hex.....	4.7L-620/3	SCREW AND WASHER, Hex Head, M8x1.25x20.	3.7L-620/6
SCREW AND WASHER, Hex.....	4.7L-620/6	SCREW AND WASHER, Hex Head, M8x1.25x25.	SAN-410/3
SCREW AND WASHER, Hex.....	4.7L-710/3	SCREW AND WASHER, Hex Head, M8x1.25x25.	SAN-410/6
SCREW AND WASHER, Hex.....	3.7L-620/18	SCREW AND WASHER, Hex Head, M8x1.25x25.	SAN-410/8
SCREW AND WASHER, Hex.....	3.7L-710/15	SCREW AND WASHER, Hex Head, M8x1.25x25.	SAN-510/11
SCREW AND WASHER, Hex.....	3.7L-710/25	SCREW AND WASHER, Hex Head, M8x1.25x30.	DAN-110/3
SCREW AND WASHER, Hex.....	4.7L-710/15	SCREW AND WASHER, Hex Head, M8x1.25x35.	IAN-810/2
SCREWANDWASHER,HexFlangeHead,.312-18x.562.....	003-210/18	SCREW AND WASHER, Hex Head, M8x1.25x45.	002-140/8
SCREWANDWASHER,HexFlangeHead,.312-18x.562.....	003-220/17	SCREW AND WASHER, Hex Head, M8x1.25x50.	008-210/3
SCREWANDWASHER,HexFlangeHead,M8x1.25x25.....	42RLE-310/7	SCREW AND WASHER, Hex Head, M8x1.25x50.	008-240/3
SCREWANDWASHER,HexFlangeHead,M8x1.25x55.....	019-210/6	SCREW AND WASHER, Hex Head, M10x1.50x35.....	017-210/8
SCREW AND WASHER, Hex Head.....	007-705/5	SCREW AND WASHER, M10x1.50x35.....	004-120/15
SCREW AND WASHER, Hex Head.....	008-110/5	SCREW AND WASHER, M10x1.50x45.00.....	006-210/2
SCREW AND WASHER, Hex Head.....	008-210/2	SCREW AND WASHER, M10x1.50x45.00.....	006-210/5
SCREW AND WASHER, Hex Head.....	009-145/7	SCREW AND WASHER, M10x1.50x45.00.....	42RLE-230/4
SCREW AND WASHER, Hex Head.....	019-310/4	SCREW AND WASHER, M10x1.50x45.00.....	42RLE-230/9
SCREW AND WASHER, Hex Head.....	019-320/8	SCREW AND WASHER, M10x1.5x45.....	016-120/5
SCREW AND WASHER, Hex Head.....	019-510/3	SCREW AND WASHER, M10x1.5x45.....	024-520/2
SCREW AND WASHER, Hex Head.....	024-520/1	SCREW AND WASHER, M10x1.5x45.....	016-120/12
SCREW AND WASHER, Hex Head.....	IAN-810/1	SCREW AND WASHER, M6x1x25.....	019-210/36
SCREW AND WASHER, Hex Head.....	001-1020/3	SCREW AND WASHER, M6x1x25.....	019-210/38
SCREW AND WASHER, Hex Head.....	001-1025/4	SCREW AND WASHER, M8x1.25x25.....	019-210/7
SCREW AND WASHER, Hex Head.....	3.7L-210/4	SCREW AND WASHER, Oval Head, M6x1x25. ...	005-610/11
SCREW AND WASHER, Hex Head.....	3.7L-210/5	SCREW AND WASHER, Pan Head, M5x.8x25. ...	42RLE-710/8
SCREW AND WASHER, Hex Head.....	4.7L-210/8	SCREW AND WASHER, Pan Head, M5x.8x25. ...	45RFE-310/8
SCREW AND WASHER, Hex Head.....	4.7L-210/9	SCREW AND WASHER, Pan Head, M5x.8x25. ...	42RLE-710/10
SCREW AND WASHER, Hex Head.....	IAN-620/10	SCREW AND WASHER, Pan Head, M5x.8x25. ...	42RLE-710/17
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	006-210/4	SCREW AND WASHER, Pan Head, M5x0.8x11.00	42RLE-420/7
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	009-135/8	SCREW AND WASHER, Park Sprag Shaft, M5X0.8X12	42RLE-730/4
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	009-145/2	SCREW AND WASHER, Round Head, .164-15x.625	DAN-230/10
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	009-145/4	SCREW AND WASHER, Self Tapping, M6x1x22 .	SAN-710/15
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	009-155/8	SCREW AND WASHER, Shoulder, .375-16x1.575	SAN-1310/12
SCREWANDWASHER,HexHeadLocking,.437-14x1.25.....	009-165/1	SCREW PACKAGE, Axle Drive Gear.....	002-610/13
SCREWANDWASHER,HexHeadTapping,M8x1.25x26.....	008-1011/8	SCREW PACKAGE, Axle Drive Gear.....	003-210/25
SCREWANDWASHER,HexHeadTapping,M8x1.25x36.....	008-1311/4	SCREW, .164-18x.625.....	001-255/3
SCREW AND WASHER, Hex Head, .19-24x1.....	SAN-910/9	SCREW, .164-18x.75.....	IAN-110/4
SCREW AND WASHER, Hex Head, .25-20x.50.....	006-210/6	SCREW, .164-32x1.00.....	019-110/6
SCREW AND WASHER, Hex Head, .25-20x.50.....	003-210/22	SCREW, .190-16 X .750.....	IAN-420/4
SCREW AND WASHER, Hex Head, .25-20x.50.....	003-220/21	SCREW, .190-16x.500.....	SAN-1310/17
SCREW AND WASHER, Hex Head, .312-18x.75.....	008-610/5	SCREW, .190-16x1.00.....	IAN-110/9
SCREW AND WASHER, Hex Head, .312-18x.75.....	007-107/12	SCREW, .250-14x.875.....	IAN-420/3
SCREW AND WASHER, Hex Head, .312-18x2.38.....	014-610/4		
SCREW AND WASHER, Hex Head, .437-14x2.00.....	42RLE-230/1		
SCREW AND WASHER, Hex Head, M10x1.50x35.....	002-120/7		

SCREW, 6 Lobed	019-210/26	SCREW, Pan Head	IAN-710/4
SCREW, Arm Rest Bracket	IAN-510/9	SCREW, Pan Head	IAN-710/7
SCREW, Bleeder	005-220/7	SCREW, Pan Head	IAN-720/2
SCREW, Brake Adjusting	005-220/32	SCREW, Pan Head	IAN-720/7
SCREW, Button Head	45RFE-310/11	SCREW, Pan Head	008-1905/4
SCREW, Filister Head, #8-16x.25	019-210/27	SCREW, Pan Head Tapping, M6.3x1.8x22.23	DAN-120/4
SCREW, Hex Flange Head	002-110/23	SCREW, Pan Head Tapping, M6.3x1.8x22.23	IAN-410/2
SCREW, Hex Flange Head	3.7L-610/9	SCREW, Pan Head Tapping, M6.3x1.8x22.23	DAN-230/14
SCREW, Hex Flange Head	4.7L-610/9	SCREW, Pan Head, .164-32x.50	019-210/23
SCREW, Hex Flange Head	4.7L-810/4	SCREW, Pan Head, M5 x 0.8 x 12.60	45RFE-310/9
SCREW, Hex Flange Head	3.7L-610/15	SCREW, Pan Head, M5 x 0.8 x 12.60	45RFE-710/6
SCREW, Hex Flange Head	3.7L-610/16	SCREW, Pan Head, M5 x 0.8 x 12.60	42RLE-710/18
SCREW, Hex Flange Head	3.7L-610/17	SCREW, Pan Head, M5 x 0.8 x 12.60	45RFE-210/13
SCREW, Hex Flange Head	4.7L-610/10	SCREW, Pan Head, M6-1.00x29.00	IAN-210/5
SCREW, Hex Flange Head	4.7L-610/11	SCREW, Pan Head, M6x1x20	019-210/24
SCREW, Hex Flange Head, .190-24X1.875	008-1411/4	SCREW, Pilot Point	017-110/2
SCREW, Hex Flange Head, .25-14x1.00	SAN-610/21	SCREW, Pilot Point	017-120/2
SCREW, Hex Flange Head, M10x1.5x35	019-110/2	SCREW, Pilot Point	002-110/25
SCREW, Hex Flange Head, M10x1.5x35	019-210/30	SCREW, Recliner Handle	IAN-820/6
SCREW, Hex Flange Head, M12X1.75X110.00	002-130/16	SCREW, Round Head, .164-18x.560	IAN-220/8
SCREW, Hex Flange Head, M12x1.75x40.00	002-140/5	SCREW, Round Head, .164-18x.560	IAN-715/5
SCREW, Hex Flange Head, M14x2x110	002-130/15	SCREW, Round Head, .312-18x1.50	SAN-510/15
SCREW, Hex Flange Head, M5x0.80x20.00	007-705/6	SCREW, Self Piercing, .164-15x.625	008-805/15
SCREW, Hex Flange Head, M6.3 x 1.81 x 15.00	3.7L-710/14	SCREW, Self Tapping, M4.2x1.69x19.05	08A-211/2
SCREW, Hex Flange Head, M8x1.25x23	005-110/22	SCREW, Shoulder	017-210/5
SCREW, Hex Flange Head, M8x1.25x25.00	014-315/4	SCREW, Shoulder	IAN-710/6
SCREW, Hex Flange Head, M8x1.25x25.00	025-310/4	SCREW, Shoulder	IAN-715/7
SCREW, Hex Flange Head, M8x1.25x35	024-230/17	SCREW, Shoulder/Truss, M5x.8x12.5	45RFE-710/4
SCREW, Hex Head	005-510/9	SCREW, Tapping	004-110/7
SCREW, Hex Head	005-520/3	SCREW, Tapping	EAN-210/12
SCREW, Hex Head	005-520/7	SCREW, Tapping	IAN-620/14
SCREW, Hex Head	005-530/2	SCREW, Tapping, .164-18x.625	008-1411/5
SCREW, Hex Head	005-530/7	SCREW, Tapping, .164-18x.625	008-1511/8
SCREW, Hex Head	005-520/12	SCREW, Tapping, .19-16x.625	008-1141/6
SCREW, Hex Head	005-540/19	SCREW, Tapping, .25-14x1.85	DAN-130/5
SCREW, Hex Head	4.7L-410/6	SCREW, Tapping, M6x1x20	019-720/4
SCREW, Hex Head	008-1131/15	SCREW, Tapping, M6x1x20	025-410/4
SCREW, Hex Head Header Point, .312-24x.44	4.7L-410/27	SCREW, Tapping, M6x1x20	SAN-910/6
SCREW, Hex Head, .190-16x.625	008-1411/6	SCREW, Tapping, M8x20	007-115/5
SCREW, Hex Head, .312-18x1.80	003-210/29	SCREW, Tapping, M8x20	011-120/8
SCREW, Hex Head, .312-18x1.80	003-220/28	SCREW, Tapping, M8x20	014-110/2
SCREW, Hex Head, .375-16x1.5	006-210/8	SCREW, Tapping, M8x20	013-110/13
SCREW, Hex Head, .375-16x1.5	42RLE-230/8	SCREW, Throttle Position Sensor	014-610/7
SCREW, Hex Head, .375-16x1.5	45RFE-210/23	SEAL	DAN-610/9
SCREW, Hex Head, .50-13x2.38	003-210/15	SEAL	008-1131/4
SCREW, Hex Head, .50-13x2.38	003-220/14	SEAL	008-1141/4
SCREW, Hex Head, .625-11x5.75	002-140/11	SEAL	08A-111/10
SCREW, Hex Head, M10x1.5x115	08A-311/8	SEAL	DAN-610/10
SCREW, Hex Head, M10x1.5x30	017-110/4	SEAL	45RFE-210/12
SCREW, Hex Head, M10x1.5x30	017-120/4	SEALANDGASKETPACKAGE,TransmissionFrontClutch	42RLE-410/1
SCREW, Hex Head, M10x1.5x40	014-110/7	SEALANDGASKETPACKAGE,TransmissionOilPump	42RLE-310/1
SCREW, Hex Head, M6x1x16	DAN-120/6	SEAL KIT, A/C And Heater Unit	024-120/60
SCREW, Hex Head, M6x1x20	SAN-410/5	SEAL, A-Pillar	DAN-610/1
SCREW, Hex Head, M6x1x20	008-1311/2	SEAL, Accumulator	45RFE-710/9
SCREW, Hex Head, M8x1.25x20	42RLE-1210/3	SEAL, Accumulator	42RLE-710/16
SCREW, Hex Head, M8x1.25x20	45RFE-1210/3	SEAL, Adapter	024-120/3
SCREW, Hex Head, M8x1.25x30	004-120/6	SEAL, Adapter	42RLE-220/4
SCREW, Hex Head, M8x1.25x30	SAN-410/4	SEAL, Air Inlet	024-120/22
SCREW, Hex Head, M8x1.25x30	008-1011/11	SEAL, Axle Drive Shaft	002-310/3
SCREW, Hex Head, M8x1.25x50	024-520/3	SEAL, Axle Drive Shaft	003-210/12
SCREW, Hex Head, M8x1.25x50	4.7L-410/3	SEAL, Axle Drive Shaft	003-220/11
SCREW, M4x16	008-615/4	SEAL, B-Pillar	DAN-610/5
SCREW, M6x1.0	001-260/6	SEAL, B-Pillar	DAN-620/5
SCREW, M6x1x25	019-110/8	SEAL, Body Side	DAN-610/2
SCREW, M6x1x25	007-207/10	SEAL, Body Side	DAN-620/9
SCREW, M6x1x25	3.7L-410/11	SEAL, Caliper Piston	005-110/6
SCREW, M6x1x25	4.7L-410/16	SEAL, Caliper Piston	005-210/8
SCREW, M6x1x30	45RFE-720/10	SEAL, Clutch Feed	42RLE-710/9
SCREW, M6x1x40	3.7L-510/1	SEAL, Clutch Feed	45RFE-710/5
SCREW, M6x1x40	4.7L-510/6	SEAL, Cowl Plenum Cover	SAN-610/15
SCREW, M8x1.25x30	SAN-910/3	SEAL, Crankshaft Bearing Oil	3.7L-410/14
SCREW, Oval Head, .164-18x.750 HD #6	008-1141/9	SEAL, Crankshaft Bearing Oil	4.7L-410/17
SCREW, Oval Head, M8x1.25x6	DAN-130/11	SEAL, Crankshaft Oil, Front	007-207/8
		SEAL, Crankshaft Oil, Front	4.7L-610/5

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

SEAL, Crankshaft Oil, Front	3.7L-610/14	SEAL, Torque Converter Hub	42RLE-230/15
SEAL, Demister	024-120/46	SEAL, Transmission	42RLE-220/3
SEAL, Demister	024-120/66	SEAL, Transmission	42RLE-225/4
SEAL, Door	DAN-610/8	SEAL, Transmission Oil Pump	45RFE-310/7
SEAL, Door	DAN-620/2	SEAL, Under Drive	42RLE-410/42
SEAL, Door	DAN-620/8	SEAL, Vacuum Switch	244-210/6
SEAL, Door	DAN-610/14	SEAL, Valve Guide	3.7L-510/16
SEAL, Door Mirror Bezel	DAN-610/12	SEAL, Valve Guide	4.7L-510/10
SEAL, Drain Tube	024-120/49	SEALANT, RTV	002-310/14
SEAL, Drain Tube	024-120/64	SEALANT, RTV	003-210/16
SEAL, Drive Pinion	002-610/3	SEALANT, RTV	003-220/15
SEAL, Drive Pinion	003-210/4	SEAT BACK, Rear, 40%	IAN-620/1
SEAL, Drive Pinion	003-220/4	SEAT BACK, Rear, 60%	IAN-620/3
SEAL, Evaporator To Dash	024-120/47	SEAT BELT, Front Inner	IAN-710/8
SEAL, Evaporator To Dash	024-120/63	SEAT BELT, Front Inner	IAN-715/8
SEAL, Floor Duct	024-120/48	SEAT BELT, Front Outer	IAN-710/1
SEAL, Front Door	DAN-610/3	SEAT BELT, Front Outer	IAN-715/1
SEAL, Front Door	DAN-620/6	SEAT BELT, Rear	IAN-720/1
SEAL, Front Door Glass Run	DAN-610/6	SEAT BELT, Rear Inner	IAN-720/5
SEAL, Fuel Pump and Level Unit	014-510/4	SEAT BELT, Rear Inner	IAN-720/6
SEAL, Glass Run	DAN-610/4	SEAT BELT, Rear Inner	IAN-720/11
SEAL, Glass Run	DAN-610/7	SEAT BELT, Rear Inner	IAN-720/12
SEAL, Glass Run	DAN-610/15	SEAT FRONT, SPLIT BENCH, TRIM CODE [P9]	IAN/510
SEAL, Heater Core Tubes	024-120/44	SEAT, Exhaust Valve	3.7L-510/18
SEAL, Heater Core Tubes	024-120/61	SEAT, FRONT BUCKET, TRIM CODE [LJ]	IAN/540
SEAL, Hood	SAN-510/16	SEAT, FRONT, BUCKET SEATS, TRIM CODE [K5]	IAN/530
SEAL, Hood To Cowl	SAN-510/12	SEAT, Intake Valve	3.7L-510/20
SEAL, Impeller Hub, 57.25mm OD	42RLE-310/10	SEAT, Spring	017-120/6
SEAL, Input	45RFE-220/4	SECTOR, Transfer Case	233-910/9
SEAL, Input	45RFE-410/9	SECTOR, Transfer Case	244-910/2
SEAL, Input Gear	233-410/2	SENSOR	008-620/4
SEAL, Input Gear	244-410/2	SENSOR KIT, Anti-Lock Brakes	008-625/4
SEAL, Input Shaft	3500-210/20	SENSOR KIT, Anti-Lock Brakes	005-110/12
SEAL, Input Shaft	45RFE-410/2	SENSOR KIT, Throttle Position	008-610/3
SEAL, Input Shaft	42RLE-410/36	SENSOR KIT, Throttle Position	008-615/9
SEAL, Instrument Panel	08A-111/9	SENSOR KIT, Throttle Position	014-610/5
SEAL, Intake Manifold	3.7L-810/1	SENSOR, Air Temperature	008-610/1
SEAL, Intake Manifold	4.7L-810/2	SENSOR, Air Temperature	008-615/2
SEAL, Main Shaft	233-410/4	SENSOR, Air Temperature	014-820/7
SEAL, Manual Valve Lever	42RLE-710/3	SENSOR, Ambient Temperature	008-625/3
SEAL, Master Cylinder To Booster	005-410/7	SENSOR, Anti-Lock Brake	005-110/11
SEAL, O-Ring	001-260/5	SENSOR, Anti-Lock Brake	005-520/11
SEAL, O-Ring	244-910/1	SENSOR, Battery Temperature	008-625/1
SEAL, O-Ring	233-910/10	SENSOR, Battery Temperature	008-1011/4
SEAL, Oil	233-210/27	SENSOR, Camshaft	008-615/1
SEAL, Oil	244-210/25	SENSOR, Camshaft	008-610/10
SEAL, Oil Pick Up Tube	3.7L-710/20	SENSOR, Coolant Temperature	008-610/8
SEAL, Oil Pick Up Tube	4.7L-710/20	SENSOR, Coolant Temperature	008-615/7
SEAL, Oil Pump	42RLE-310/8	SENSOR, Crankshaft Position	008-610/4
SEAL, Oil Pump	45RFE-310/10	SENSOR, Crankshaft Position	008-615/5
SEAL, Output Shaft	233-210/13	SENSOR, Manual Valve Lever	42RLE-710/6
SEAL, Output Shaft	233-410/25	SENSOR, Map	008-610/2
SEAL, Output Shaft	244-210/15	SENSOR, Map	008-615/3
SEAL, Output Shaft	244-410/34	SENSOR, Oxygen	008-610/7
SEAL, Output Shaft	3500-210/21	SENSOR, Oxygen	008-610/9
SEAL, Output Shaft	42RLE-225/2	SENSOR, Oxygen	008-615/6
SEAL, Output Shaft	45RFE-220/6	SENSOR, Oxygen	008-615/10
SEAL, Panel	024-120/45	SENSOR, Shock, With Terminals	001-914/3
SEAL, Panel	024-120/62	SENSOR, Transmission Input Speed	42RLE-210/6
SEAL, Panel	024-120/65	SENSOR, Transmission Input Speed	45RFE-210/10
SEAL, Piston Outer, 140mm OD	42RLE-410/34	SENSOR, Transmission Output Speed	008-620/2
SEAL, Plenum Drain	SAN-610/14	SENSOR, Transmission Output Speed	42RLE-210/7
SEAL, Quarter Window	SAN-710/16	SENSOR, Washer Fluid Level	008-625/2
SEAL, Rear Door	DAN-620/1	SENSOR, Washer Fluid Level	23D-210/9
SEAL, Rear Door	DAN-620/3	SENSOR, Washer Fluid Level	007-305/10
SEAL, Rear Door	DAN-620/7	SENSOR, Wheel Speed	008-620/3
SEAL, Recirculation Door	024-120/19	SENSOR, Wheel Speed	008-625/5
SEAL, Recirculation Door	024-120/20	SENSOR, Wheel Speed	005-540/12
SEAL, Reverse Servo Piston	42RLE-410/50	SENSORS - BODY	008/625
SEAL, Reverse Servo Piston	42RLE-410/51	SENSORS 3.7L ENGINE [EK0]	008/610
SEAL, Ring Reaction Support, 2 1/16 O.D.	42RLE-310/3	SENSORS 4.7L ENGINE [EV0]	008/615
SEAL, Shift Lever	3500-210/26	SENSORS DRIVETRAIN	008/620
		SERVO, Speed Control	014-720/2
		SERVO, Speed Control	014-1010/1
		SHACKLE, Spring	013-110/5

SHACKLE, Spring	017-110/10	SHIM, Carrier Bearing, 5.29 - 5.31mm	42RLE-420/ 14
SHACKLE, Spring	017-120/12	SHIM, Carrier Bearing, 5.32 - 5.34mm	42RLE-420/ 15
SHAFT, A/C and Heater Door	024-120/9	SHIM, Carrier Bearing, 5.35 - 5.37mm	42RLE-420/ 16
SHAFT, Axle	002-310/1	SHIM, Carrier Bearing, 5.38 - 5.40mm	42RLE-420/ 17
SHAFT, Axle	003-210/13	SHIM, Carrier Bearing, 5.41 - 5.43mm	42RLE-420/ 18
SHAFT, Axle	003-220/12	SHIM, Carrier Bearing, 5.44 - 5.46mm	42RLE-420/ 19
SHAFT, Axle Half	002-210/1	SHIM, Carrier Bearing, 5.47 - 5.49mm	42RLE-420/ 20
SHAFT, Balance	3.7L-620/3	SHIM, Carrier Bearing, 5.50 - 5.52mm	42RLE-420/ 21
SHAFT, Balance, Driver	3.7L-620/14	SHIM, Carrier Bearing, 5.53 - 5.55mm	42RLE-420/ 22
SHAFT, Blend Air Door	024-120/31	SHIM, Carrier Bearing, 5.56 - 5.58mm	42RLE-420/ 23
SHAFT, Brake Pedal Pivot	005-610/2	SHIM, Carrier Bearing, 5.59 - 5.61mm	42RLE-420/ 24
SHAFT, Counter	3500-410/27	SHIM, Carrier Bearing, 5.62 - 5.64mm	42RLE-420/ 25
SHAFT, Differential	003-220/25	SHIM, Carrier Bearing, 5.65 - 5.67mm	42RLE-420/ 26
SHAFT, Differential Pinion	002-610/20	SHIM, Carrier Bearing, 5.68 - 5.70mm	42RLE-420/ 27
SHAFT, Differential Pinion	003-210/26	SHIM, Carrier Bearing, 5.71 - 5.73mm	42RLE-420/ 28
SHAFT, Drive	016-130/7	SHIM, Carrier Bearing, 5.74 - 5.76mm	42RLE-420/ 29
SHAFT, Drive, Rear 1-Piece	016-110/2	SHIM, Carrier Bearing, 5.77 - 5.79mm	42RLE-420/ 30
SHAFT, Drive, Rear 1-Piece	016-130/3	SHIM, Carrier Bearing, 5.80 - 5.82mm	42RLE-420/ 31
SHAFT, Drive, Rear 2-Piece	016-120/3	SHIM, Carrier Bearing, 5.83 - 5.85mm	42RLE-420/ 32
SHAFT, Idler	4.7L-620/4	SHIM, Carrier Bearing, 5.86 - 5.88mm	42RLE-420/ 33
SHAFT, Idler	3.7L-620/13	SHIM, Carrier Bearing, 5.89 - 5.91mm	42RLE-420/ 34
SHAFT, Input	3500-410/1	SHIM, Carrier Bearing, 5.92 - 5.94mm	42RLE-420/ 35
SHAFT, Input	45RFE-410/3	SHIM, Carrier Bearing, 5.95 - 5.97mm	42RLE-420/ 36
SHAFT, Intermediate	019-210/32	SHIM, Carrier Bearing, 5.98 - 6.00mm	42RLE-420/ 37
SHAFT, Intermediate	019-210/33	SHIM, Carrier Bearing, 6.01 - 6.03mm	42RLE-420/ 38
SHAFT, Intermediate	244-410/15	SHIM, Carrier Bearing, 6.04 - 6.06mm	42RLE-420/ 39
SHAFT, Intermediate	42RLE-420/ 72	SHIM, Drive Pinion Bearing, .020	003-210/32
SHAFT, Output	3500-410/15	SHIM, Drive Pinion Bearing, .020	003-220/30
SHAFT, Output	42RLE-225/9	SHIM, Drive Pinion Bearing, .021	003-210/33
SHAFT, Parking Pawl	45RFE-720/4	SHIM, Drive Pinion Bearing, .021	003-220/31
SHAFT, Parking Sprag	42RLE-730/5	SHIM, Drive Pinion Bearing, .022	003-210/34
SHAFT, Selector	3500-910/1	SHIM, Drive Pinion Bearing, .022	003-220/32
SHAFT,PROPELLER,FRONT AND REAR-AN 5	016/130	SHIM, Drive Pinion Bearing, .023	003-210/35
SHAFT,PROPELLER,REAR,2 PIECE-AN 1	016/120	SHIM, Drive Pinion Bearing, .023	003-220/33
SHAFT,PROPELLER,REAR,1 PIECE-AN 1	016/110	SHIM, Drive Pinion Bearing, .024	003-210/36
SHAFT,FRONT DRIVE AXLE	002/210	SHIM, Drive Pinion Bearing, .024	003-220/34
SHIELD KIT - AIR FRONT	001/530	SHIM, Drive Pinion Bearing, .025	003-210/37
SHIELD KIT, Air - Front	001-530/1	SHIM, Drive Pinion Bearing, .025	003-220/35
SHIELD, Center Bearing	016-120/13	SHIM, Drive Pinion Bearing, .026	003-210/38
SHIELD, Exhaust Manifold	011-210/1	SHIM, Drive Pinion Bearing, .026	003-220/36
SHIELD, Exhaust Manifold	011-210/2	SHIM, Drive Pinion Bearing, .027	003-210/39
SHIELD, Exhaust Manifold	011-210/3	SHIM, Drive Pinion Bearing, .027	003-220/37
SHIELD, Exhaust Manifold	011-210/4	SHIM, Drive Pinion Bearing, .028	003-210/40
SHIELD, Exhaust Manifold	3.7L-810/7	SHIM, Drive Pinion Bearing, .028	003-220/38
SHIELD, Exhaust Manifold	4.7L-810/10	SHIM, Drive Pinion Bearing, .029	003-210/41
SHIELD, Fuel Tank	014-110/8	SHIM, Drive Pinion Bearing, .029	003-220/39
SHIELD, Heat	016-120/4	SHIM, Drive Pinion Bearing, .030	003-210/42
SHIELD, Heat	SAN-210/5	SHIM, Drive Pinion Bearing, .030	003-220/40
SHIELD, Heat	SAN-220/4		
SHIELD, Heat	SAN-225/5		
SHIELD, Heat	SAN-225/6		
SHIELD, Heat	SAN-225/7		
SHIELD, Heat	SAN-225/8		
SHIELD, Heat	008-1211/3		
SHIELD, Heat	013-110/10		
SHIELD, Heat	013-110/15		
SHIELD, Heat	013-110/16		
SHIELD, Heat	SAN-225/12		
SHIELD, Heat	SAN-230/12		
SHIELD, Heat	SAN-610/10		
SHIELD, Heat	SAN-610/11		
SHIELD, Seat Cushion	IAN-810/4		
SHIELD, Splash	005-110/23		
SHIELD, Splash	SAN-910/10		
SHIELD, Splash	SAN-910/11		
SHIM	233-910/5		
SHIM PACKAGE, Differential	002-610/12		
SHIM PACKAGE, Pinion	002-610/7		
SHIM, Carrier Bearing, 5.17 - 5.19mm	42RLE-420/ 10		
SHIM, Carrier Bearing, 5.20 - 5.22mm	42RLE-420/ 11		
SHIM, Carrier Bearing, 5.23 - 5.25mm	42RLE-420/ 12		
SHIM, Carrier Bearing, 5.26 - 5.28mm	42RLE-420/ 13		

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

SHIM, Drive Pinion Bearing, .031	003-210/43	SNAP RING	45RFE-410/5
SHIM, Drive Pinion Bearing, .031	003-220/41	SNAP RING	45RFE-420/5
SHIM, Drive Pinion Bearing, .032	003-210/44	SNAP RING	45RFE-450/2
SHIM, Drive Pinion Bearing, .032	003-220/42	SNAP RING	45RFE-470/3
SHIM, Drive Pinion Bearing, .033	003-210/45	SNAP RING	45RFE-470/6
SHIM, Drive Pinion Bearing, .033	003-220/43	SNAP RING	45RFE-720/7
SHIM, Drive Pinion Bearing, .034	003-210/46	SNAP RING	42RLE-410/ 10
SHIM, Drive Pinion Bearing, .034	003-220/44	SNAP RING	42RLE-410/ 14
SHIM, Drive Pinion Bearing, .035	003-210/47	SNAP RING	42RLE-410/ 19
SHIM, Drive Pinion Bearing, .035	003-220/45	SNAP RING	42RLE-410/ 29
SHIM, Drive Pinion Bearing, .036	003-210/48	SNAP RING	42RLE-410/ 33
SHIM, Drive Pinion Bearing, .036	003-220/46	SNAP RING	42RLE-410/ 43
SHIM, Drive Pinion Bearing, .037	003-210/49	SNAP RING	42RLE-410/ 44
SHIM, Drive Pinion Bearing, .037	003-220/47	SNAP RING	42RLE-420/ 48
SHIM, Drive Pinion Bearing, .038	003-210/50	SNAP RING	42RLE-420/ 55
SHIM, Drive Pinion Bearing, .038	003-220/48	SNAP RING	42RLE-420/ 57
SHOCK ABSORBER PACKAGE, Suspension, Front	002-110/16	SNAP RING	42RLE-420/ 60
SHOCK ABSORBER PACKAGE, Suspension, Front	002-130/24	SNAP RING	42RLE-420/ 61
SHOCK ABSORBER, Suspension, Rear	017-210/14	SNAP RING	42RLE-420/ 69
SHOE AND LINING KIT, Parking Brake	004-130/2	SNAP RING	45RFE-220/ 10
SHOE AND LINING KIT, drum	005-220/24	SNAP RING	45RFE-220/ 11
SHROUD MODULE, Fan	007-305/4	SNAP RING	45RFE-410/ 17
SHROUD MODULE, Fan	23D-210/8	SNAP RING	45RFE-430/ 11
SHROUD MODULE, Fan	007-107/13	SNAP RING	42RLE-225/6
SHROUD, Fan	007-107/15	SNAP RING	244-410/42
SHROUD, Steering Column	019-210/8	SNAP RING, Annulus Gear	233-210/3
SHUTTER, Door, Deck and Liftgate, Bright	23D-110/3	SNAP RING, Annulus Gear	244-410/11
SHUTTER, Lock Cylinder	23D-110/24	SNAP RING, Axle Shaft	002-310/2
SILENCER, Anti-Rattle Disc	SAN-1310/5	SNAP RING, Bearing	233-410/24
SILENCER, Dash Panel	IAN-320/6	SNAP RING, Bearing	244-410/40
SILENCER, Dash Panel	SAN-610/16	SNAP RING, Input Shaft	45RFE-410/ 10
SILENCER, Floor Pan	IAN-320/2	SNAP RING, Output Shaft Bearing	3500-410/4
SILENCER, Floor Pan	IAN-320/4	SNAP RING, Output Shaft Bearing	3500-410/25
SILENCER, Floor Pan Front Tunnel	IAN-320/1	SNAP RING, Overdrive Clutch	45RFE-430/3
SILENCER, Floor Pan Front Tunnel	IAN-320/3	SNAP RING, Reverse Clutch, 1.77-1.83mm	42RLE-410/ 20
SILENCER, Floor Pan Front Tunnel	IAN-320/5	SNAP RING, Reverse Clutch, 2.02-2.07mm	42RLE-410/ 21
SILENCER, Wheelhouse	IAN-320/10	SNAP RING, Reverse Clutch, 2.27-2.32mm	42RLE-410/ 22
SILENCERS	IAN/320	SNAP RING, Rod	42RLE-730/3
SILL, Body Side	SAN-830/4	SNAP RING, Rod	45RFE-720/ 11
SILL, Box	SAN-230/3	SNAP RING, Transmission	45RFE-310/5
SILL, Box	SAN-230/5	SNAP RING, Transmission	45RFE-420/3
SILL, Rear Cross	SAN-230/2	SNAP RING, Transmission	45RFE-430/6
SINGLE BOARD ENGINE CONTROLLERS (JTEC)	008/710	SNAP RING, Transmission	45RFE-440/3
SIREN, Alarm	001-910/2	SNAP RING, Transmission	45RFE-440/6
SIREN, Alarm	001-914/4	SNAP RING, Transmission	45RFE-440/9
SKID PLATE	233/1210	SNAP RING, Transmission	45RFE-720/2
SKID PLATE	244/1210	SNAP RING, Transmission	45RFE-310/ 14
SKID PLATE, Front	002-810/3	SNAP RING, Transmission	45RFE-410/ 11
SKID PLATE, Front	001-1025/2	SNAP RING, Transmission	45RFE-410/ 21
SKID PLATE, Front	233-1210/1	SNAP RING, Transmission	45RFE-410/ 21
SKID PLATE, Front	244-1210/1	SNAP RING, Transmission	45RFE-410/ 21
SKID PLATE, Fuel Tank	014-110/5	SNAP RING, Transmission	45RFE-410/ 21
SKID PLATE, FRONT AXLE	002/810	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE	3.7L-410/13	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE, Disc Brake Caliper	005-210/6	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE, Mode Synchronizer	233-410/12	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE, Mode Synchronizer	244-410/16	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE, Range Fork	233-410/14	SNAP RING, Transmission	45RFE-410/ 21
SLEEVE, Shift Range	244-410/12	SNAP RING, Transmission	45RFE-410/ 21
SLIPPER, Caliper	005-110/8	SNAP RING, Transmission	45RFE-410/ 21
SLIPPER, Caliper	004-130/11	SNAP RING, Transmission	45RFE-410/ 21
SLIPPER, Caliper	005-210/11	SNAP RING, Transmission	45RFE-410/ 21
SMOKERS KIT, Ash Receiver With Lighter	08A-111/36	SNAP RING, Transmission	45RFE-410/ 21
SMOKERS KIT, Ash Receiver With Lighter	08A-420/24	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	233-410/7	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/4	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/6	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	233-410/15	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	233-410/17	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	233-410/31	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/13	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/17	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/25	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	244-410/35	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	3500-410/9	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	42RLE-225/8	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	42RLE-420/3	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	42RLE-720/5	SNAP RING, Transmission	45RFE-410/ 21
SNAP RING	45RFE-220/8	SNAP RING, Transmission	45RFE-410/ 21

SNAP RING, Transmission	45RFE-440/ 13	SPRING, Mode Shift Fork	244-910/8
SNAP RING, Transmission	45RFE-440/ 17	SPRING, Overdrive Piston	42RLE-410/ 45
SNAP RING, Underdrive Clutch, Flat	42RLE-410/6	SPRING, Park Brake Shoe Return	004-130/5
SNAP RING, Underdrive Clutch, Flat	42RLE-410/ 26	SPRING, Park Brake Shoe Return	004-130/9
SNAP RING, Underdrive Clutch, Tapered	42RLE-410/5	SPRING, Parking Brake Strut	005-220/12
SOCKET, Brake Adjusting	005-220/14	SPRING, Parking Sprag Return	42RLE-730/2
SOCKET, Cornering Lamp	008-1141/2	SPRING, Piston Return	45RFE-410/ 12
SOCKET, Park, Turn, and Side Lamp	008-1131/2	SPRING, Poppet Plunger	244-210/7
SOCKET, Park, Turn, and Side Lamp	008-1141/3	SPRING, Poppet Plunger	233-210/14
SOCKET, Park, Turn, and Side Lamp	008-1196/4	SPRING, Rear Leaf	017-110/9
SOCKET, Shift Shaft	3500-910/9	SPRING, Rear Leaf	017-120/8
SOCKET, Side Marker	008-1131/3	SPRING, Shift Detent	3500-210/16
SOCKET, Warning Lamp	08A-211/7	SPRING, Torsion	45RFE-720/6
SOLENOID, Linear IACV	014-610/8	SPRING, Undredrive Piston	45RFE-410/ 19
SOLENOID, Proportional Purge	025-410/1	SPRING, Valve	4.7L-510/9
SOLENOID, Proportional Purge	025-410/7	SPRING, Valve	3.7L-510/14
SOLENOID, Transmission	45RFE-710/1	SPROCKET, Camshaft, Left	3.7L-620/10
SOLENOID, Transmission	42RLE-710/ 14	SPROCKET, Camshaft, Left	4.7L-620/14
SPACER, Air Deflector	001-530/2	SPROCKET, Camshaft, Right	3.7L-620/4
SPACER, Door Handle	DAN-120/8	SPROCKET, Camshaft, Right	4.7L-620/13
SPACER, Door Handle	DAN-220/2	SPROCKET, Crankshaft	3.7L-620/16
SPACER, Door Latch Striker	DAN-130/10	SPROCKET, Crankshaft	4.7L-620/12
SPACER, Door Latch Striker	DAN-230/16	SPROCKET, Differential	244-410/24
SPACER, Drive Pinion Bearing	002-610/6	SPROCKET, Idler	4.7L-620/5
SPACER, Drive Pinion Bearing	003-210/51	SPROCKET, Idler	3.7L-620/15
SPACER, Drive Pinion Bearing	003-220/49	SPROCKET, Transfer Case	233-410/18
SPACER, Windshield	SAN-710/2	SPROCKET, Transfer Case	244-410/22
SPACER, Windshield	SAN-710/3	SPROCKET, Transfer Case	244-410/38
SPARK PLUG	008-1905/2	STABILIZER BAR AND TORSION BAR,FRONT-AN 5	002/140
SPARK PLUGS, CABLES & COILS	008/1905	STABILIZER BAR, Front Suspension	002-120/9
SPEAKER, 5.25"	08A-316/1	STABILIZER BAR,FRONT-AN 1	002/120
SPEAKER, 6.5"	08A-316/3	STABILIZER BAR,REAR WITH SHOCK ABSORBERS .	017/210
SPEAKER, 6.5"	08A-316/6	STARTER	008-110/1
SPEAKER, Front	001-620/3	STARTER & MOUNTING 3.7L [EK0] & 4.7L	008/110
SPEAKER, Front Tweeter	08A-316/8	ENGINES [EVO]	
SPEAKERS	08A/316	STEM, Wheel Valve	022-110/6
SPEED CONTROL	014/1010	STEP PAD, Rear Bumper	013-310/4
SPRAG, Transmission Parking	45RFE-720/1	STOP RING, Synchronizer	3500-410/2
SPRING	233-910/6	STOP RING, Synchronizer	3500-410/18
SPRING	244-910/15	STRAP KIT, Luggage Carrier	001-235/2
SPRING, 2nd And 4th Clutch Piston	45RFE-440/8	STRAP, Battery	008-1011/12
SPRING, 2nd And 4th Clutch Piston	42RLE-420/ 64	STRAP, Cargo Tie Down	001-210/3
SPRING, 2nd And 4th Clutch Piston	45RFE-440/ 12	STRAP, Cargo Tie Down	001-215/3
SPRING, Accumulator	42RLE-720/1	STRAP, Cargo Tie Down	001-230/2
SPRING, Accumulator	42RLE-720/2	STRAP, Cargo Tie Down	001-240/3
SPRING, Accumulator	42RLE-710/ 13	STRAP, Cargo Tie Down	001-245/3
SPRING, Accumulator	42RLE-710/ 21	STRAP, Fuel Tank	014-110/12
SPRING, Accumulator	45RFE-710/ 10	STRAP, Ground	08A-311/7
SPRING, Accumulator	45RFE-710/ 12	STRAP, Ground	024-230/21
SPRING, Adjuster Cable	005-220/22	STRAP, Tie	001-250/2
SPRING, Auto Adjusting	005-220/15	STRAP, Tie	001-255/2
SPRING, Brake Shoe Hold Down	005-220/10	STRAP, Tie	4.7L-310/7
SPRING, Brake Shoe Return	005-220/18	STRIKER, Door	DAN-130/12
SPRING, Brake Shoe Return	005-220/20	STRIKER, Door	DAN-230/17
SPRING, Brake Shoe to Shoe	005-220/29	STRIKER, Door Latch	SAN-910/4
SPRING, Clutch Release	006-310/9	STRIKER, Glove Box Door Latch	08A-111/24
SPRING, Cylinder Return	23D-110/22	STRIKER, Hood Latch	SAN-510/7
SPRING, Door and Deck Tumbler	23D-110/21	STRUT, BOX	001-280/2
SPRING, Drive Lower Case	42RLE-410/ 31	STRUT, Parking Brake	005-220/13
SPRING, Front Coil	002-110/9	STUD	003-210/9
SPRING, Gearshift Lever	019-210/12	STUD	003-220/8
SPRING, Ignition Tumbler, Sidebar	23D-110/11	STUD	014-410/4
SPRING, Lever	3500-910/3	STUD	233-210/2
SPRING, Low/Reverse Clutch Piston	42RLE-420/4	STUD	244-210/2
SPRING, Low/Reverse Clutch Piston	45RFE-470/7	STUD	IAN-620/9
SPRING, Mode Fork	233-910/11	STUD	SAN-410/2
		STUD	SAN-610/3
		STUD	233-210/16
		STUD	244-210/20
		STUD	3.7L-610/6
		STUD	4.7L-410/2
		STUD	4.7L-410/5
		STUD	4.7L-610/8
		STUD	4.7L-810/3
		STUD	SAN-610/19

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

STUD.....	3.7L-210/12
STUD.....	4.7L-210/12
STUD.....	4.7L-310/11
STUD.....	4.7L-710/16
STUD.....	4.7L-710/23
STUD, .312-18x2.00.....	006-310/11
STUD, .437-14/.437-20x2.00.....	008-110/2
STUD, Axle Housing.....	004-120/14
STUD, Axle Housing.....	005-540/11
STUD, Battery Hold Down.....	008-1011/7
STUD, Double Ended.....	4.7L-810/5
STUD, Exhaust Manifold.....	3.7L-810/5
STUD, Exhaust Manifold.....	4.7L-810/9
STUD, Exhaust Manifold.....	4.7L-810/13
STUD, Hub.....	005-110/20
STUD, M10-1.50x82.50.....	014-110/10
STUD, M10x1.5x62.....	45RFE-220/2
STUD, M6x1.00mmx48.80mm.....	019-210/5
STUD, Wheel.....	003-210/14
STUD, Wheel.....	003-220/13
SUPPORT, Reaction Shaft.....	45RFE-310/4
SUPPORT, Segment Idler Shaft.....	3500-410/28
SUPPORT, Steering Column.....	SAN-610/13
SUPPORT, Steering Column, Right.....	019-210/1
SUPPORT, Steering Column, left.....	019-210/37
SUPPORT, Visor.....	IAN-110/5
SUSPENSION,FRONT,CONTROL ARMS,SHOCKS,KNUCKLES-AN 5.....	002/130
SUSPENSION,FRONT,CONTROL ARMS,SPRINGS,SHOCKS,KNUCKLES-AN 1.....	002/110
SUSPENSION,REAR,LEAF SPRINGS-AN 1.....	017/110
SUSPENSION,REAR,LEAF SPRINGS-AN 5.....	017/120
SWEPTLINE BOX, PANEL OUTER BOX AND FUEL FILLER DOOR.....	SAN/910
SWITCH AND LAMP, Glove Box.....	008-1151/3
SWITCH AND LAMP, Glove Box.....	008-805/17
SWITCH AND LAMP, Glove Box.....	08A-111/40
SWITCH AND LAMP, Glove Box.....	08A-420/19
SWITCH KIT, Overdrive Lockout.....	008-805/6
SWITCH KIT, Overdrive Lockout.....	019-210/9
SWITCH PACKAGE, Stop Lamp.....	005-610/10
SWITCH PACKAGE, Stop Lamp.....	008-805/11
SWITCH, Back Up Lamp.....	008-810/2
SWITCH, Back Up Lamp.....	3500-210/10
SWITCH, Brake Fluid Level.....	005-410/4
SWITCH, Central Locking.....	008-815/5
SWITCH, Clutch Starter Interlock.....	008-805/8
SWITCH, Clutch Starter Interlock.....	006-310/12
SWITCH, Door Lock.....	008-815/2
SWITCH, Headlamp.....	008-805/1
SWITCH, Headlamp.....	08A-111/43
SWITCH, Horn.....	008-805/2
SWITCH, Ignition.....	008-805/4
SWITCH, Multifunction.....	008-805/3
SWITCH, Oil Pressure.....	008-615/8
SWITCH, Oil Pressure.....	008-810/1
SWITCH, Oil Pressure.....	3.7L-710/16
SWITCH, Parking Brake.....	004-110/2
SWITCH, Parking Brake.....	008-805/10
SWITCH, Passenger Airbag Disarm.....	008-805/7
SWITCH, Passenger Airbag Disarm.....	08A-111/42
SWITCH, Power Window.....	008-815/1
SWITCH, Power Window.....	008-815/3
SWITCH, Power Window.....	008-815/9
SWITCH, Programing Bypass.....	001-910/7
SWITCH, Reading Lamp.....	008-815/4
SWITCH, Remote Radio.....	008-805/5
SWITCH, Remote Radio.....	019-110/9
SWITCH, Seat.....	008-815/8
SWITCH, Speed Control.....	019-110/5
SWITCH, Speed Control.....	008-805/13
SWITCH, Transfer Case Mode.....	008-805/16
SWITCH, Transfer Case Mode.....	08A-111/44
SWITCH, Window and Door Lock.....	008-815/6
SWITCHES - INSTRUMENT PANEL AND CONSOLE.....	008/805
SWITCHES - BODY.....	008/815
SWIVEL, Torsion Bar.....	002-140/14
SWITCHES - DRIVETRAIN.....	008/810

SYNCHRONIZER, Fifth And Reverse.....	3500-410/19
SYNCHRONIZER, First and Second.....	3500-410/12
SYNCHRONIZER, Third and Fourth.....	3500-410/5

-T-

TAILGATE.....	SAN/1310
TAILGATE.....	SAN-1310/1
TAILPIPE, Exhaust.....	011-120/6
TANK, Fuel.....	014-110/6
TAPE, Radio Connector, Foam.....	008-1605/5
TAPPING PLATE, Sill to Frame.....	SAN-230/9
TENSIONER, Alternator Belt.....	007-407/1
TENSIONER, Alternator Belt.....	008-210/6
TENSIONER, Alternator Belt.....	008-240/6
TENSIONER, Chain.....	3.7L-620/9
TENSIONER, Chain.....	4.7L-620/11
TENSIONER, Chain, Primary.....	3.7L-620/19
TENSIONER, Chain, Primary.....	4.7L-620/16
TENSIONER, Parking Brake Cable.....	004-120/10
TETHER, Fuel Filler Cap.....	014-210/10
THERMOSTAT.....	007-207/7
THERMOSTAT.....	3.7L-610/13
THROTTLE BODY.....	014-610/1
THROTTLE BODY, ALL ENGINES.....	014/610
THROTTLE CONTROL.....	014/720
THRUST BEARING.....	42RLE-410/7
THRUST BEARING.....	42RLE-410/ 37
THRUST BEARING.....	42RLE-420/ 43
THRUST BEARING.....	42RLE-420/ 59
THRUST BEARING, Needle Roller.....	45RFE-410/1
THRUST BEARING, Needle Roller.....	45RFE-420/1
THRUST BEARING, Needle Roller.....	45RFE-430/1
THRUST BEARING, Needle Roller.....	45RFE-430/5
THRUST BEARING, Needle Roller.....	45RFE-440/1
THRUST BEARING, Needle Roller.....	45RFE-450/1
THRUST BEARING, Needle Roller.....	45RFE-450/3
THRUST BEARING, Needle Roller.....	45RFE-450/5
THRUST BEARING, Needle Roller.....	45RFE-460/1
THRUST BEARING, Needle Roller.....	45RFE-460/4
THRUST BEARING, Rear Sun Gear, Front.....	42RLE-420/ 45
THRUST WASHER, Planet Pinion.....	42RLE-420/ 70
THRUST WASHER, Planetary Carrier.....	233-410/11
THRUST WASHER, Planetary Carrier.....	244-410/19
THRUST WASHER, Planetary Carrier.....	45RFE-460/2
THRUST WASHER, Reverse Idler.....	3500-410/31
THRUST WASHER, Second And Third Gear.....	3500-410/10
THRUST WASHER, Second and Fourth Clutch.....	42RLE-420/ 65
TIE ROD, Steering.....	019-310/6
TIE ROD, Steering.....	019-320/1
TIMING CHAIN & GUIDES,[EVA].....	4.7L/620
TIMING CHAIN AND GUIDES, 3.7L [EKG].....	3.7L/620
TIMING COVER AND RELATED PARTS, 3.7L [EKG].....	3.7L/610
TIMING DRIVE PACKAGE, Engine.....	3.7L-620/1
TIMING DRIVE PACKAGE, Engine.....	4.7L-620/1
TOE RING, Sensor.....	003-210/28
TOE RING, Sensor.....	003-220/27
TOE RING, Sensor.....	4.7L-410/15
TONNEAU COVER.....	SAN/1710
TONNEAU COVER AND BED LINER.....	LBLS/410
TOOL, Crimping.....	008-1605/7
TOOL, Wrench.....	022-320/5
TORQUE CONVERTER.....	3.7L-410/19
TORQUE CONVERTER.....	4.7L-410/26
TRANMISSION ASEMBLY [42RLE] [DG6].....	42RLE/110
TRANSDUCER KIT, A/C Pressure.....	024-230/14
TRANSDUCER, Pressure Sensor.....	008-620/1
TRANSDUCER, Pressure Sensor.....	45RFE-210/8
TRANSFER CASE ADAPTER [42RLE] [DG6].....	42RLE/220
TRANSFER CASE [DHV].....	244/110
TRANSFER CASE, NV233.....	233-110/1
TRANSFER CASE, NV233 [DHT].....	233/110
TRANSFER CASE, NV244.....	244-110/1

TRANSMISSION ASSEMBLY [DDC]	3500/110
TRANSMISSION KIT, Automatic	45RFE-110/1
TRANSMISSION PACKAGE	42RLE-110/1
TRANSMISSION [45RFE] [DGQ]	45RFE/110
TRANSMISSION, 5 Speed	3500-110/1
TRANSMITTER, Alarm or Keyless	001-910/3
TRANSMITTER, Keyless Entry	23D-110/4
TRAY, Battery	008-1011/6
TRAY, Molded Cargo	001-510/1
TUBE	42RLE-220/2
TUBE	42RLE-225/3
TUBE AND HOSE, Oil Cooler	007-610/1
TUBE AND HOSE, Oil Cooler	007-610/2
TUBE AND HOSE, Supply	024-230/29
TUBE, Brake	005-510/1
TUBE, Brake	005-510/2
TUBE, Brake	005-510/3
TUBE, Brake	005-520/1
TUBE, Brake	005-520/2
TUBE, Brake	005-520/5
TUBE, Brake	005-530/3
TUBE, Brake	005-530/4
TUBE, Brake	005-530/6
TUBE, Brake	005-540/1
TUBE, Brake	005-540/7
TUBE, Brake	005-510/14
TUBE, Brake	005-510/17
TUBE, Brake	005-510/18
TUBE, Brake	005-520/14
TUBE, Brake	005-520/16
TUBE, Brake	005-540/14
TUBE, Brake	005-540/18
TUBE, Crankcase Vent To Air Cleaner	3.7L-910/1
TUBE, Crankcase Vent To Intake Manifold	4.7L-910/1
TUBE, Engine Oil Indicator	4.7L-710/1
TUBE, Fuel Filler	014-210/9
TUBE, Fuel Supply	014-310/7
TUBE, Fuel Supply	014-315/1
TUBE, Fuel Vapor	014-110/13
TUBE, Oil Cooler	001-260/3
TUBE, Oil Cooler	001-260/4
TUBE, Oil Cooler	007-107/5
TUBE, Oil Gauge	3.7L-710/12
TUBE, Oil Pickup	233-210/20
TUBE, Oil Pickup	244-210/26
TUBE, Oil Pickup	3.7L-710/21
TUBE, Oil Pickup	4.7L-710/18
TUBE, Roll Stock, .25 I.D.	025-410/9
TUBE, Spare Tire Winch	022-310/7
TUBE, Spare Tire Winch	022-320/6
TUBE, Transmission Oil Filler	45RFE-210/6
TUBE, Transmission Oil Filler	42RLE-230/11
TUBE, Vapor	014-315/2
TUBE, Vent	45RFE-210/4
TUBE, Vent	42RLE-230/13
TUMBLER, Door and Deck Number 1, Wide	23D-110/17
TUMBLER, Door and Deck Number 2, Wide	23D-110/18
TUMBLER, Door and Deck Number 3, Wide	23D-110/19
TUMBLER, Door and Deck Number 4, Wide	23D-110/20
TUMBLER, Ignition Number 1, Sidebar	23D-110/7
TUMBLER, Ignition Number 2, Sidebar	23D-110/8
TUMBLER, Ignition Number 3, Sidebar	23D-110/9
TUMBLER, Ignition Number 4, Sidebar	23D-110/10

-U-

U JOINT	016-110/3
U JOINT	016-120/2
U JOINT	016-130/2
U JOINT	016-130/9
U-NUT, M10-1.50	002-810/1
U-NUT, M10-1.50	002-810/5
U-NUT, M10-1.50	014-110/4
U-NUT, M10-1.50	001-1020/2
U-NUT, M10-1.50	001-1025/3
U-NUT, M10-1.50	233-1210/2
U-NUT, M10-1.50	244-1210/2

U-NUT, M6 x 1.00, M6x1.00	SAN-810/17
U-NUT, M6 x 1.00, M6x1.00	SAN-820/17
U-NUT, M6 x 1.00, M6x1.00	SAN-830/14
U-NUT, M6 x 1.00, M6x1.00	SAN-830/17
U-NUT, M6x1.00	001-260/7
U-NUT, M8x1.25	014-110/9
U-NUT, M8x1.25	IAN-810/3
U-NUT, M8x1.25	SAN-410/7
U-NUT, M8x1.25	SAN-610/22
UNDERDRIVE [45RFE] [DGQ]	45RFE/420

-V-

VACUUM CANISTER	025/310
VALVE BODY	42RLE-710/2
VALVE BODY [45RFE] [DGQ]	45RFE/710
VALVE BODY [42RLE] [DG6]	42RLE/710
VALVE BODY, Transfer Plate and Valve	45RFE-710/2
VALVE, A/C Discharge Line Check	024-230/12
VALVE, Brake Booster Check	005-310/3
VALVE, Charging	024-230/4
VALVE, Charging	024-230/11
VALVE, Cooler Bypass	42RLE-210/9
VALVE, Crankcase Vent	3.7L-710/6
VALVE, Crankcase Vent	3.7L-910/2
VALVE, Crankcase Vent	4.7L-910/2
VALVE, Exhaust, Standard	3.7L-510/17
VALVE, Exhaust, Standard	4.7L-510/15
VALVE, Flow Control	45RFE-210/15
VALVE, Intake, Standard	3.7L-510/19
VALVE, Intake, Standard	4.7L-510/14
VALVE, Transmission Regulator	42RLE-710/23
VENT, Axle	002-310/8
VENT, Axle	003-210/8
VENT, Axle	003-220/7
VENT, Axle	003-310/5
VENT, Headlamp	008-1131/14
VENT, Transfer Case	233-210/11
VENT, Transfer Case	233-210/22
VENT, Transfer Case	244-210/13
VENT, Transfer Case	244-210/22
VENT, Transmission	3500-210/11
VENT, Transmission	3500-210/24
VENT, Transmission	45RFE-210/3
VENT, AXLE	003/310
VISOR, W/Mirror	IAN-110/6
VISOR, W/Mirror	IAN-110/7

-W-

WASHER	008-110/4
WASHER	3.7L-310/5
WASHER	3.7L-510/3
WASHER PACKAGE, Side Gear Thrust	002-610/17
WASHER PACKAGE, Side Gear Thrust	003-210/54
WASHER PACKAGE, Side Gear Thrust	003-220/52
WASHER PACKAGE, Washer	3.7L-410/9
WASHER PACKAGE, Washer	4.7L-410/14
WASHER, A/C Unit Mounting Stud	024-120/67
WASHER, Battery Terminal	008-1011/3
WASHER, Brake Hose	005-540/4
WASHER, Brake Hose	005-520/10
WASHER, Coned, .480x.885x.121	006-210/3
WASHER, Control Arm Shaft	002-110/5
WASHER, Differential Gear	244-410/30
WASHER, Flat	244-910/9
WASHER, Flat	233-210/17
WASHER, Flat	233-410/27
WASHER, Flat	244-210/17
WASHER, Flat	SAN-410/14
WASHER, Flat	3500-410/29
WASHER, Flat, M23x43x4	002-210/4
WASHER, Flat, M23x43x4	005-110/15
WASHER, Idler Gear	3500-410/30
WASHER, Intermediate Sleeve	244-410/14
WASHER, Parking Brake Lever	005-220/26
WASHER, Pinion Gear	002-610/18
WASHER, Pinion Gear	003-210/57

**2004 DODGE DAKOTA PICK-UP (AN)
PARTS CATALOG**

WASHER, Pinion Gear	003-220/55
WASHER, Pinion Yoke	003-210/2
WASHER, Pinion Yoke	003-220/2
WASHER, Rear Brake Adjuster	005-220/30
WASHER, Transfer Case Yoke	244-410/32
WASHER, Upper Pivot	IAN-510/18
WATER PUMP AND RELATED PARTS	007/207
WATERSHIELD, Front Door	DAN-610/11
WATERSHIELD, Rear Door	DAN-620/4
WEIGHT, Balance, Perf Part	022-110/7
WELT, Headlamp To Grille	008-1131/8
WHEEL	024-120/35
WHEEL, Aluminum	022-110/3
WHEEL, SPARE UNDERSLUNG MOUNTING	022/410
WHEEL, Steel	022-110/1
WHEEL, Steel	022-110/2
WHEEL, Steering	019-110/1
WHEEL, STEERING	019/110
WHEELHOUSE, Rear Inner	SAN-910/13
WHEELS AND HARDWARE	022/110
WINCH, Spare Tire Carrier	022-410/3
WINDSHIELD	SAN-710/1
WINDSHIELD AND MIRROR, REAR WINDOW	SAN/710
WINDSHIELD WIPER & WASHER	23D/210
WIRING	019-210/13
WIRING	008-1511/13
WIRING - BODY & ACCESSORY	008/1511
WIRING - ENGINE	008/1211
WIRING - HEADLAMP / DASH	008/1311
WIRING - INSTRUMENT PANEL	008/1411
WIRING KIT - TRAILER TOW - 4 WAY	001/250
WIRING KIT - TRAILER TOW - 7 WAY	001/255
WIRING KIT, 22 Way, Female	008-1605/10
WIRING KIT, Electric Repair	008-1605/8
WIRING KIT, Trailer Tow	001-250/1
WIRING KIT, Trailer Tow - 7 Way	001-255/1
WIRING PACKAGE, Underhood Connector Repair	008-1605/1
WIRING PACKAGE, Underhood Connector Repair	008-1605/6
WIRING REPAIR PACKAGES	008/1605
WIRING, A/C	008-1411/8
WIRING, Body	008-1511/2
WIRING, Chassis	008-1511/1
WIRING, Console	08A-420/21
WIRING, Door	008-1511/3
WIRING, Engine	008-1211/1
WIRING, Engine	008-1905/1
WIRING, Front Door	008-1511/4
WIRING, Headlamp to Dash	008-1311/1
WIRING, High Mounted Stop Lamp	008-1511/6
WIRING, High Mounted Stop Lamp	008-1141/10
WIRING, Instrument Panel	008-1411/1
WIRING, License Lamp	008-1511/12
WIRING, Overhead Console	08A-430/2
WIRING, Power Seat	008-1511/11
WIRING, Rcvr to Radio	001-125/3
WIRING, Rear Door	008-1511/15
WIRING, Steering Wheel	019-110/10
WIRING, Steering Wheel	008-1511/14
WIRING, Trailer Tow	001-250/3
WIRING, Trailer Tow	008-1511/5
-Y-	
YOKE, Drive Shaft	016-110/1
YOKE, Drive Shaft	016-120/1
YOKE, Drive Shaft	016-120/9
YOKE, Drive Shaft	016-130/1