2004 CHRYSLER, DODGE MINIVAN (RS)

PARTS CATALOG

ILLUSTRATION AND TEXT (CHASSIS - BODY - TRIM)

December 2004

SUPERSEDES November 2004 ENGLISH









Jeep

CHRYSLER • PLYMOUTH • DODGE • JEEP

THE MOPAR DIFFERENCE

INDEX TO INFORMATION PAGES

The use of this Parts Catalog and the arrangement of information herein is explained in the General Information Section as indexed below.

Abbreviations	INF-13
Alphabetic Index	INF-10
Body Code Plate Interpretation	INF-12
Catalog Groups - Titles & Contents	INF-2
How to Use This Catalog and Locate Parts	INF-8
Illustration Index	INF-10
Illustration Numbering Index	
Index	
Logical Illustration Index	
Logical Illustrations	
Numerical Index	INF-10
Page Numbering	
Part Packages	
Standard Parts	
Symbols Used in this Catalog	
VIN Plate Decoding Information	

CATALOG GROUPS - TITLES & CONTENT

Group	Content
-------	---------

001	Component Parts for Mopar Accessories						
002	Front Suspension & Drive						
003	Rear Axle						
004	Parking Brake						
005	Service Brakes						
007	Cooling						
800	Electrical						
009	Engine Mounting						
011	Exhaust						
013	Frames and Bumpers						
014	Fuel						
016	Propeller Shafts and U-Joints						
017	Rear Suspension						
019	Steering						
022	Wheels, Covers and Jacks						
024	Air Conditioning & Heater						
025	Emission Systems						
088	Power Transfer Unit AWD						
08A	Instrument Panel and Radios and Consoles						
2.4L	Engine 2.4L Four Cylinder						
23D	Wiper/Lock Cylinder and Keys						
3.3L6T	Engine 3.3L Six Cylinder						
3.8L	Engine 3.8L Six Cylinder						
40TE-AE	Automatic Transaxle 4 Speed						
41TE-AE	Automatic Transaxle 4 Speed						
DRS	Doors and Related Parts						
ERS	Exterior Ornamentation						
IRS	Interior Trim						
LBLS	Labels All Vehicle Locations						
SRS	Body Sheet Metal Except Doors						

LOGICAL ILLUSTRATION INDEX

Group	Logical Illustration	Logical Illustration Name
001	100	Audio & Electronics
001	200	Carriers & Cargo Hauling
001	300	Driver Convenience
001	400	Exterior Appearance
001	500	Exterior Protection
001	900	Security
002	100	Front Suspension
002	200	Front Axle Drive Shafts
003	100	Rear Axle
003	400	Rear Axle Shafts
004	100	Parking Brake Lever and Cables
005	100	Front Brakes
005	200	Rear Brakes
005	300	Power Brake Booster
005	400	Brake Master Cylinder
005	500	Brake Lines and Hoses
005	600	Brake Pedals
007	100	Radiator and Related Parts
007	200	Water Pump and Related Parts
007	300	Tank, Coolant Engine
007	400	Pulleys and Related Parts
007	500	Drive Belts
007	600	Lines, Transmission Oil Cooler
008	100	Starters
008	1000	Battery Tray and Cables
008	1100	Lamps - Front, Rear and Courtesy
008	1200	Wiring-Engine & Related Parts
008	1300	Wiring-Headlamp to Dash
008	1400	Wiring-Instrument Panel
008	1500	Wiring-Body & Accessories
008	1600	Wiring Repair
008	1700	Air Bag System
008	1900	Spark Plugs-Cables-Coils

008	200	Alternators
008	400	Modules
008	500	Relays
008	600	Sensors
008	700	Single Board Engine Controllers
008	800	Switches
008	900	Horns
009	100	Engine Mounting
011	100	Exhaust System
011	200	Heat Shields
013	100	Frames
013	200	Front Bumper and Fascia
013	300	Rear Bumper and Fascia
014	100	Tank, Fuel
014	1000	Speed Control
014	1100	Accelerator Pedal
014	200	Fuel Tank Filler Tube
014	300	Fuel Lines
014	400	Fuel Rail
014	500	Fuel Pump and Sending Unit
014	600	Throttle Body
014	700	Throttle Controls
014	800	Air Cleaner
016	100	Propeller Shaft
017	100	Rear Suspension
019	100	Steering Wheel
019	200	Steering Column
019	300	Steering Gear
019	500	Power Steering Pump
019	700	Power Steering Hoses
022	100	Wheels and Hardware
022	200	Wheel Covers and Center Caps
022	300	Jack Stowage
022	400	Spare Tire Stowage
024	100	Air Conditioner and Heater Units
024	200	Air Conditioner and Heater Plumbing

024	300	Air Conditioner and Heater Controls
024	400	Air Conditioning Compressor
024	600	Air Ducts and Outlets
025	200	EGR System
025	300	Vacuum Canister
025	400	Emission Harness
088	100	Power Transfer Assembly and Mounting
08A	100	Instrument Panel
08A	200	Instrument Panel Cluster
08A	300	Radio, Antenna, and Speakers
08A	400	Consoles
2.4L	100	Engine Identification
2.4L	200	Cylinder Head
2.4L	300	Cylinder Block
2.4L	400	Crankshaft, Piston, and Drive Plate
2.4L	500	Camshafts and Valves
2.4L	600	Timing Belt and Cover
2.4L	700	Engine Oiling
2.4L	800	Manifolds
2.4L	900	Crankcase Ventilation
23D	100	Lock Cylinders and Keys
23D	200	Windshield Wiper and Washer Systems
23D	300	Rear Wiper and Washer System
3.3L6T	100	Engine Identification
3.3L6T	200	Cylinder Head
3.3L6T	300	Cylinder Block
3.3L6T	400	Crankshaft, Pistion and Torque Converter
3.3L6T	500	Camshafts & Valves
3.3L6T	600	Timing Chain and Cover
3.3L6T	700	Engine Oiling
3.3L6T	800	Manifolds
3.3L6T	900	Crankcase Ventilation
3.8L	100	Engine Identification
3.8L	200	Cylinder Head
3.8L	300	Cylinder Block
3.8L	400	Crankshaft, Piston and Torque Converter

3.8L	500	Camshafts & Valves
3.8L	600	Timing Chain and Cover
3.8L	700	Engine Oiling
3.8L	800	Manifolds
3.8L	900	Crankcase Ventilation
40TE-AE	100	Transaxle Assembly
40TE-AE	1200	Gearshift Controls
40TE-AE	200	Case and Extension
40TE-AE	300	Oil Pump
40TE-AE	400	Gear Train
40TE-AE	700	Valve Body
40TE-AE	800	Differential
41TE-AE	100	Transaxle Assembly
41TE-AE	1200	Gearshift Controls
41TE-AE	200	Case and Extension
41TE-AE	300	Oil Pump
41TE-AE	400	Gear Train
41TE-AE	700	Valve Body
41TE-AE	800	Differential
DRS	100	Front Door
DRS	300	Door, Sliding Cargo
DRS	500	Exterior Mirror
DRS	600	Weatherstrips and Seals
ERS	100	Nameplates
ERS	200	Moldings and Ornamentation
IRS	100	Headliner and Visor
IRS	1000	Lift Gate Trim
IRS	200	Panel-Mouldings, Scuff Plates
IRS	300	Carpet and Tonneau Cover
IRS	400	Door Trim Panels, Front and Sliding
IRS	500	Front Seats and Attaching Parts
IRS	600	Rear Seats-Folding and Quads
IRS	700	Seat Belts-Front and Rear
IRS	800	Adjusters, Covers, Shields and Risers
LBLS	100	Interior
LBLS	200	Under Hood

LBLS	300	Doors
LBLS	400	Exterior
SRS	1000	Seals and Weatherstrip
SRS	1100	Roof Panels
SRS	1300	Liftgate Panel
SRS	1600	Luggage Rack
SRS	200	Floor Pans
SRS	300	Plugs
SRS	400	Front Fenders
SRS	500	Hood and Hood Release
SRS	600	Cowl and Dash Panel
SRS	700	Glass and Rear View Mirror
SRS	800	Aperture Panel
SRS	900	Quarter Panel and Pillars

HOW TO USE THIS CATALOG AND LOCATE PARTS

This Catalog is divided into Part Groups in which illustrations for parts of a similar function and/or location are published. The Group contents listing on the next page shows the type of parts contained in each group. Tabs are provided or available to separate each group.

Several methods may be used to locate a specific part:

- Option 1: From the Group Contents listing. Select the group which would most logically contain the part to be found. Open the catalog to the beginning of that group. The first page of the group will contain the part. Turn to the selected illustration and locate the part by reviewing the illustration item numbers and associated text information following the illustration.
- Option 2: If the "noun" name of the part you seek is known, an alphabetical index of Nouns and illustration titles is provided to assist in finding the part. Several keys may be found in this index.

- Option 3: If the part number is known but the applications need to be determined, refer to the numerical index. This index shows the group, illustration number and each part listed in the catalog. Multiple references mean the part is listed more than once.
- Option 4: Other options such as group identifiers exist in these catalogs. For Example, Group 23 Body has been broken in sections, i.e. 23A Sheet Metal now is S(model code). Example: SGS for model GS. Group 23C Doors now is D(model code) ex. DGS. Group 23 Exterior Ornamentation now is E(model code). This same logic applies to the Interior Trim Section (ex. IGS).

The Group 9 Engine sections in prior parts catalogs had been numbered 9A, 9B, 9C, etc. There was no real meaning to this numbering scheme. In this new MACS produced catalog the group numbering scheme is as follows: 2.5LD means 2.5 Liter Diesel Engine; 2.0L means 2.0 Liter Four Cylinder Gas Engine; 3.3L6T means 3.3 Liter Six Cylinder Transverse Mounted Engine; and 3.8L means 3.8 Liter Six Cylinder Engine. Also note that Engine Mounting parts are located in Group 9.

PAGE NUMBERING

Two-part page numbers are used throughout this catalog. The first part of the page designation indicates one major group or section. The second part indicates the actual page number in the group. For example:

- 2-1 indicates Group 2, Front Suspension, Page 1
- 3-4 indicates Group 3, Axle Rear, Page 4

In the maintenance of the Loose Leaf Parts Catalog Revision Service, it may become necessary to add information beyond the capacity of the page. In this event, an "A" page will be used. For example, if it becomes necessary, because of change, to add several part numbers to page 2-1 and space does not permit the addition, you will be given Page 2-1A. Page 2-1A should be filed immediately following Page 2-1.

Figure and Item Numbers are also commonly used to identify locations in the Catalog, ie., 14-910/8 refers to Group 14, illustration 910, Item Number 8. Illustration Numbers are always ascending sequential within the Groups.

SYMBOLS USED IN THIS CATALOG

The Following symbols are commonly used with Part Number and Quantity information in this Catalog:

AR - Indicates the quantity required may vary or is to be determined by the user.

PAR - Indicates "Paint As Required"

BLANK - Indicates "All Condition

-= "Not Illustrated"

LOGICAL ILLUSTRATIONS

Refer to Illustration in front of each group. This will give assistance to as how each group is broken down and what Specific Illustration should be referenced.

ILLUSTRATION NUMBERING INDEX

Illustration numbers in this Catalog are Group standards. This indicates group and consistent content. EXAMPLE: 8-100 is a Logical Illustration for Starters. 8-101 to 8-199 are Specific Illustrations used for Starters for all Catalogs. 8-200 will contain Alternators for all Catalogs and so on. Always refer to group index in front of each group.

ILLUSTRATION INDEX

This index is a compilation of catalog parts description data with reference to illustrations, figures and key numbers as shown:

Fender ie; Model......Group: S(Model)Illustration 410 (Fender is located in Sheet Metal Section (S) in Illustration 410)

The first page of each group contains a listing of all illustrations and group breakdown within that group. Also refer to illustrations alphabetically listed in information section.

ALPHABETIC INDEX

This index is a compilation of catalog parts description data with a reference to the location of the item by Group, Figure, and Key Number as shown in the following example:

Housing, w/Pump......Group 7 Illustration 210 Item 10 (Housing, w/Pump......7-210/10)

The index will be expanded progressively as data is added to computer files. To locate a part by name refer to the Alphabetical Index. This index indicates the group and illustration and item number where the part is located. Alphabetical Index can be found in INF section of this Catalog.

NUMERICAL INDEX

A listing of Part Numbers contained in the catalog. The numbers are in numerical sequence with reference to the group and Illustration and item number where the part is located.

PARTS PACKAGES

Service Parts Packages, containing all parts needed for specific service operation, are listed in their respective groups with related parts. The listing will show adapability and model application.

STANDARD PARTS

Important attaching standard parts such as bolts, nuts, etc, are generally listed in the text of the respective major parts groups.

VIN PLATE DECODING INFORMATION

1 5 6 8 9 10 11 12 thru 17 2 Sequence No. Country Make Vehicle Other Line Series **Body Engine Check** Model Assy. Type Style Digit Year

The following table interprets the VIN Plate positions shown above.

Position	Interpretation	Codes = Description									
1	Country of Origin	1 = Built in U.S. by DaimlerChrysler Corporation 2 = Built in Canada by DaimlerChrysler Canada Inc									
2	Make	D = Dodge C = Chrysler									
3	Vehicle type	4 = Multipurpose Passenger Vehicle With Side Air Bags									
4	GVWR & Pass. Safety	D=0-1360 kg (0-3000 lbs) E=1361-1814 kg (3001-4000 lbs) F=1815-2267 kg (4001-5000 lbs) G=2268-2721 kg (5001-6000 lbs) H=2722-3175 kg (6001-7000 lbs) J=3176-3628 kg (7001-8000 lbs) K=3629-4082 kg (8001-9000 lbs)									
5	Vehicle Line	J = Voyager/Grand Voyager(FWD) P = Caravan/Grand Caravan; Town & Country(FWD) T = Grand Caravan/Town & Country (AWD) 1 = Caravan (FWD)									
6	Series	2 = Voyager (FWD) 2 = Caravan/Grand Caravan SE, LX, C/V (FWD) 3 = Grand Caravan/Town & Country EL (FWD) 4 = Caravan/Grand Caravan Sport (FWD/AWD) 4 = Grand Voyager LX; Town & Country LX(FWD) 5 = Grand Caravan ES (FWD/AWD) 7 = Grand Caravan EX (FWD)									
7	Body Style	4= NS - 53 5 = NS - 52									
8	Engine	B = 2.4L 4 Cyl.,16V DOHC (EDZ) L = 3,8 6 Cyl. MPI (EGH) R = 3.3L 6 Cyl (SMPI) (EGA) 3 = 3.3L 6 Cyl (FFV) (EGM)									
9	Check Digit										
10	Model Year	4 = 2004									
11	Assembly Plant	B = St. Louis Assembly South R = Windsor Assembly									
12 thru 17	Vehicle Build Sequence	Model Year Assembly Sequence									

BODY CODE PLATE INTERPRETATION

The Body Code Plate is located on the Left Front Side Shield or Wheel Housing or the Upper Radiator Support. The Plate contains 7 rows of data. The bottom 3 rows are reserved for the specific information as depicted below. Starting at the fourth row (following the reserved portion), other Sales Codes used to build a specific vehicle are listed in the ascending order by ALPHA sequence.

1	2	3 4	5	6	7	8	9	10	11	12		13	14	15		16	17	18	19	20	21
22	23	24	25	26	27	28		29	30	31	32		33	34	35	36		37	38	39	
40	41	42	43		44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

1-12	VEHICLE ORDER NUMBER
13-15	VINYL ROOF CODE/DOOR COMBO CODES
16-18	VEHICLE SHELL CAR LINE
19	PRICE CLASS
20-21	BODY TYPE
22-24	PAINT PROCEDURE
25-28	PRIMARY PAINT
29-32	SECONDARY PAINT
33-36	INTERIOR TRIM CODE
37-39	ENGINE CODES
40-42	TRANSMISSION CODES
43	MARKET CODES
44-46	VEHICLE IDENTIFICATION NUMBER (VIN) For definition of the Elements and the individual position see Vin Plate Defined.

ABBREVIATIONS

A/C Air Conditioner

ABS Anti-Lock Brakes System

AR As Required

ATC Automatic Temperature Control

AWD All Wheel Drive
BUX Built Up Export
CV Constant Velocity

DOHC Dual (or Double) OverHead Cam

EFI Electronic Fuel Injection
EGR Exhaust Gas Recirculation
ECU Electronic Control Unit
FWD Front Wheel Drive

HEX HEXagon

HCU Hydraulic Control Unit

I/D Inside Diameter

L Liter

LED Light Emitting Diode
MAP Manifold Absolute Pressure

MPH Miles Per Hour

O/D Outside Diameter
P/S Power Steering

PSI Pounds per Square Inch PSF Pounds per Square Foot

PRNODL Park, Reverse, Neutral, Overdrive, Drive, Low

PRNDL Park, Reverse, Neutral, Drive, Low

PTO Power Take Off

RFI Radio Frequency Interference

RPM Revolutions Per Minute

RTV Room Temperature Vulcanizer (sealant)

T/BODY Throttle BODY U/BODY Under BODY

SOHC Single OverHead Cam PAR Paint As Required