

# 2005 CHRYSLER PT CRUISER (PT)

## PARTS CATALOG

ILLUSTRATION AND TEXT  
(CHASSIS - BODY - TRIM)

February 2004

**SUPERSEDES**  
January 2004  
ENGLISH



**Jeep**

---

CHRYSLER • PLYMOUTH • DODGE • JEEP

**THE MOPAR DIFFERENCE**



## INDEX TO INFORMATION PAGES

The use of this Parts Catalog and the arrangement of information herein is explained in the General Information Section as indexed below.

<b>Abbreviations .....</b>	<b>INF-13</b>
<b>Alphabetic Index .....</b>	<b>INF-10</b>
<b>Body Code Plate Interpretation .....</b>	<b>INF-12</b>
<b>Catalog Groups - Titles &amp; Contents .....</b>	<b>INF-2</b>
<b>How to Use This Catalog and Locate Parts .....</b>	<b>INF-8</b>
<b>Illustration Index .....</b>	<b>INF-10</b>
<b>Illustration Numbering Index .....</b>	<b>INF-9</b>
<b>Index.....</b>	<b>INF-1</b>
<b>Logical Illustration Index.....</b>	<b>INF-3</b>
<b>Logical Illustrations .....</b>	<b>INF-9</b>
<b>Numerical Index .....</b>	<b>INF-10</b>
<b>Page Numbering.....</b>	<b>INF-9</b>
<b>Part Packages .....</b>	<b>INF-10</b>
<b>Standard Parts.....</b>	<b>INF-10</b>
<b>Symbols Used in this Catalog.....</b>	<b>INF-9</b>
<b>VIN Plate Decoding Information .....</b>	<b>INF-11</b>

## CATALOG GROUPS - TITLES & CONTENT

Group	Content
002	Front Suspension & Drive
004	Parking Brake
005	Service Brakes
006	Clutch
007	Cooling
008	Electrical
009	Engine Mounting
011	Exhaust
013	Frames and Bumpers
014	Fuel
017	Rear Suspension
019	Steering
022	Wheels, Covers and Jacks
024	Air Conditioning & Heater
025	Emission Systems
08A	Instrument Panel and Radios and Consoles
2.4L	Engine 2.4L Four Cylinder
2.4LT	Engine 2.4L Four Cylinder (Turbo)
21M5	Manual Transaxle 5 Speed
21P	Speedometer Pinions
23D	Wiper/Lock Cylinder and Keys
40TE-AE	Automatic Transaxle 4 Speed
41TE	Automatic Transaxle 4 Speed
A578	Manual Transaxle 5 Speed
DPT	Doors and Related Parts
EPT	Exterior Ornamentation
IPT	Interior Trim
LBLS	Labels All Vehicle Locations
SPT	Body Sheet Metal Except Doors

## LOGICAL ILLUSTRATION INDEX

Group	Logical Illustration	Logical Illustration Name
002	100	Front Suspension
002	200	Front Axle Drive Shafts
004	100	Parking Brake Lever and Cables
005	100	Front Brakes
005	200	Rear Brakes
005	300	Power Brake Booster
005	400	Brake Master Cylinder
005	500	Brake Lines and Hoses
005	600	Brake Pedals
006	100	Clutch
006	200	Clutch Housing
006	300	Clutch Controls
006	400	Clutch Pedals
007	100	Radiator and Related Parts
007	200	Water Pump and Related Parts
007	300	Tank, Coolant Engine
007	400	Pulleys and Related Parts
007	500	Drive Belts
007	600	Lines, Transmission Oil Cooler
007	700	Grilles
008	100	Starters
008	1000	Battery Tray and Cables
008	1100	Lamps - Front, Rear and Courtesy
008	1200	Wiring-Engine & Related Parts
008	1300	Wiring-Headlamp to Dash
008	1400	Wiring-Instrument Panel
008	1500	Wiring-Body & Accessories
008	1600	Wiring Repair
008	1700	Air Bag System
008	1900	Spark Plugs-Cables-Coils
008	200	Alternators
008	400	Modules
008	500	Relays

**2005 CHRYSLER PT CRUISER (PT)  
PARTS CATALOG**

---

008	600	Sensors
008	700	Single Board Engine Controllers
008	800	Switches
008	900	Horns
009	100	Engine Mounting
011	100	Exhaust System
011	200	Heat Shields
013	100	Frames
013	200	Front Bumper and Fascia
013	300	Rear Bumper and Fascia
014	100	Tank, Fuel
014	1000	Speed Control
014	1100	Accelerator Pedal
014	200	Fuel Tank Filler Tube
014	300	Fuel Lines
014	400	Fuel Rail
014	500	Fuel Pump and Sending Unit
014	600	Throttle Body
014	700	Throttle Controls
014	800	Air Cleaner
017	100	Rear Suspension
017	200	Rear Stabilizer
019	100	Steering Wheel
019	200	Steering Column
019	300	Steering Gear
019	500	Power Steering Pump
019	700	Power Steering Hoses
022	100	Wheels and Hardware
022	200	Wheel Covers and Center Caps
022	300	Jack Stowage
024	100	Air Conditioner and Heater Units
024	200	Air Conditioner and Heater Plumbing
024	300	Air Conditioner and Heater Controls
024	400	Air Conditioning Compressor
024	500	Air Conditioning Compressor Mounting
024	600	Air Ducts and Outlets

025	200	EGR System
025	300	Vacuum Canister
025	400	Emission Harness
08A	100	Instrument Panel
08A	200	Instrument Panel Cluster
08A	300	Radio, Antenna, and Speakers
08A	400	Consoles
2.4L	100	Engine Identification
2.4L	200	Cylinder Head
2.4L	300	Cylinder Block
2.4L	400	Crankshaft, Piston, and Drive Plate
2.4L	500	Camshafts and Valves
2.4L	600	Timing Belt and Cover
2.4L	700	Engine Oiling
2.4L	800	Manifolds
2.4L	900	Crankcase Ventilation
2.4LT	100	Engine Identification
2.4LT	200	Cylinder Head
2.4LT	300	Cylinder Block
2.4LT	400	Crankshaft, Piston, and Drive Plate
2.4LT	500	Camshafts and Valves
2.4LT	600	Timing Belt and Cover
2.4LT	700	Engine Oiling
2.4LT	800	Manifolds
2.4LT	900	Crankcase Ventilation
21M5	100	Transaxle Assembly
21M5	1200	Gearshift Controls
21M5	200	Case and Extension
21M5	400	Gear Train
21M5	800	Differential
21M5	900	Fork and Rails
21P	100	Speedometer Pinions
23D	100	Lock Cylinders and Keys
23D	200	Windshield Wiper and Washer Systems
23D	300	Rear Wiper and Washer System
40TE-AE	100	Transaxle Assembly

**2005 CHRYSLER PT CRUISER (PT)  
PARTS CATALOG**

40TE-AE	1200	Gearshift Controls
40TE-AE	200	Case and Extension
40TE-AE	300	Oil Pump
40TE-AE	400	Gear Train
40TE-AE	700	Valve Body
40TE-AE	800	Differential
41TE	100	Transaxle Assembly
41TE	1200	Gearshift Controls
41TE	200	Case and Extension
41TE	300	Oil Pump
41TE	400	Gear Train
41TE	700	Valve Body
41TE	800	Differential
A578	100	Transaxle Assembly
A578	1200	Gearshift Controls
A578	200	Case and Extension
A578	400	Gear Train
A578	800	Differential
A578	900	Fork and Rails
DPT	100	Front Door
DPT	200	Rear Door
DPT	500	Exterior Mirror
DPT	600	Weatherstrips and Seals
EPT	100	Nameplates
EPT	200	Moldings and Ornamentation
IPT	100	Headliner and Visor
IPT	1000	Lift Gate Trim
IPT	200	Panel, Moldings, Scuff Plates
IPT	300	Carpet
IPT	400	Door Trim Panels
IPT	500	Front Seats and Attaching Parts
IPT	600	Rear Seats-Folding
IPT	700	Seat Belts-Front and Rear
IPT	800	Adjusters, Covers, Shields, and Risers
LBLS	100	Interior
LBLS	200	Under Hood



LBS	300	Doors
LBS	400	Exterior
LBS	500	Rear Cargo & Storage
SPT	1100	Roof Panels
SPT	1200	Sunroof
SPT	1300	Liftgate Panel
SPT	1600	Luggage Rack
SPT	200	Floor Pans
SPT	300	Plugs
SPT	400	Front Fenders
SPT	500	Hood & Hood Release
SPT	600	Cowl and Dash Panel
SPT	700	Glass and Rear View Mirror
SPT	800	Aperture Panel
SPT	900	Quarter Panel and Pillars

## HOW TO USE THIS CATALOG AND LOCATE PARTS

**This Catalog is divided into Part Groups in which illustrations for parts of a similar function and/or location are published. The Group contents listing on the next page shows the type of parts contained in each group. Tabs are provided or available to separate each group.**

Several methods may be used to locate a specific part:

- Option 1: From the Group Contents listing. Select the group which would most logically contain the part to be found. Open the catalog to the beginning of that group. The first page of the group will contain the part. Turn to the selected illustration and locate the part by reviewing the illustration item numbers and associated text information following the illustration.
- Option 2: If the “noun” name of the part you seek is known, an alphabetical index of Nouns and illustration titles is provided to assist in finding the part. Several keys may be found in this index.

RESERVOIR, Power Steering Oil Pump Group	19	Group Reference
ALTERNATOR All Engines	8-210	Illustration Reference
BELT, Front Seat	Imdl/710/3	Illustration/Item Reference
Group by Model	_____	}
Illustration Number	_____	
Item	_____	

- Option 3: If the part number is known but the applications need to be determined, refer to the numerical index. This index shows the group, illustration number and each part listed in the catalog. Multiple references mean the part is listed more than once.
- Option 4: Other options such as group identifiers exist in these catalogs. For Example, Group 23 Body has been broken in sections, i.e. 23A Sheet Metal now is S(model code). Example: SGS for model GS. Group 23C Doors now is D(model code) ex. DGS. Group 23 Exterior Ornamentation now is E(model code). This same logic applies to the Interior Trim Section (ex. IGS).

The Group 9 Engine sections in prior parts catalogs had been numbered 9A, 9B, 9C, etc. There was no real meaning to this numbering scheme. In this new MACS produced catalog the group numbering scheme is as follows: 2.5LD means 2.5 Liter Diesel Engine; 2.0L means 2.0 Liter Four Cylinder Gas Engine; 3.3L6T means 3.3 Liter Six Cylinder Transverse Mounted Engine; and 3.8L means 3.8 Liter Six Cylinder Engine. Also note that Engine Mounting parts are located in Group 9.

## PAGE NUMBERING

Two-part page numbers are used throughout this catalog. The first part of the page designation indicates one major group or section. The second part indicates the actual page number in the group. For example:

2-1 indicates Group 2, Front Suspension, Page 1

3-4 indicates Group 3, Axle Rear, Page 4

In the maintenance of the Loose Leaf Parts Catalog Revision Service, it may become necessary to add information beyond the capacity of the page. In this event, an "A" page will be used. For example, if it becomes necessary, because of change, to add several part numbers to page 2-1 and space does not permit the addition, you will be given Page 2-1A. Page 2-1A should be filed immediately following Page 2-1.

Figure and Item Numbers are also commonly used to identify locations in the Catalog, ie., 14-910/8 refers to Group 14, illustration 910, Item Number 8. Illustration Numbers are always ascending sequential within the Groups.

## SYMBOLS USED IN THIS CATALOG

The Following symbols are commonly used with Part Number and Quantity information in this Catalog:

AR - Indicates the quantity required may vary or is to be determined by the user.

PAR - Indicates "Paint As Required"

BLANK - Indicates "All Condition

- = "Not Illustrated"

## LOGICAL ILLUSTRATIONS

Refer to Illustration in front of each group. This will give assistance to as how each group is broken down and what Specific Illustration should be referenced.

## ILLUSTRATION NUMBERING INDEX

Illustration numbers in this Catalog are Group standards. This indicates group and consistent content. EXAMPLE: 8-100 is a Logical Illustration for Starters. 8-101 to 8-199 are Specific Illustrations used for Starters for all Catalogs. 8-200 will contain Alternators for all Catalogs and so on. Always refer to group index in front of each group.

## ILLUSTRATION INDEX

This index is a compilation of catalog parts description data with reference to illustrations, figures and key numbers as shown:

Fender ie; Model.....Group: S(Model) .....Illustration 410  
(Fender is located in Sheet Metal Section (S) in Illustration 410)

The first page of each group contains a listing of all illustrations and group breakdown within that group. Also refer to illustrations alphabetically listed in information section.

## ALPHABETIC INDEX

This index is a compilation of catalog parts description data with a reference to the location of the item by Group, Figure, and Key Number as shown in the following example:

Housing, w/Pump.....Group 7 Illustration 210 Item 10  
(Housing, w/Pump.....7-210/10)

The index will be expanded progressively as data is added to computer files. To locate a part by name refer to the Alphabetical Index. This index indicates the group and illustration and item number where the part is located. Alphabetical Index can be found in INF section of this Catalog.

## NUMERICAL INDEX

A listing of Part Numbers contained in the catalog. The numbers are in numerical sequence with reference to the group and Illustration and item number where the part is located.

## PARTS PACKAGES

Service Parts Packages, containing all parts needed for specific service operation, are listed in their respective groups with related parts. The listing will show adaptability and model application.

## STANDARD PARTS

Important attaching standard parts such as bolts, nuts, etc, are generally listed in the text of the respective major parts groups.

## VIN PLATE DECODING INFORMATION

<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12 thru 17</b>
<b>Country</b>	<b>Make</b>	<b>Vehicle Type</b>	<b>Other</b>	<b>Line</b>	<b>Series</b>	<b>Body Style</b>	<b>Engine</b>	<b>Check Digit</b>	<b>Model Year</b>	<b>Assy. Plant</b>	<b>Sequence No.</b>

The following table interprets the VIN Plate positions shown above.

Position	Interpretation	Codes = Description
1	Country of Origin	3 = Built in Mexico by DaimlerChrysler de Mexico
2	Make	C = Chrysler
3	Vehicle type	8 = Multipurpose Passenger Vehicle With Side Air Bags
4	GVWR & Pass. Safety	D=0-1360 kg (0-3000 lbs) E=1361-1814 kg (3001-4000 lbs) F=1815-2267 kg (4001-5000 lbs) G=2268-2721 kg (5001-6000 lbs) H=2722-3175 kg (6001-7000 lbs) J=3176-3628 kg (7001-8000 lbs) K=3629-4082 kg (8001-9000 lbs) L=4083-4535 kg (9001-10000 lbs) M=4536-6350 kg (10001-14000 lbs)
5	Vehicle Line	Y = Cruiser (LHD)                      4 = Cruiser (RHD)
6	Series	4 = Cruiser Classic                      5 = Cruiser Touring Edition 6 = Cruiser Limited Edition/Street Cruiser 7 = Cruiser GT/Dream Cruiser
7	Body Style	8 = PT - 44
8	Engine	F = 1.6L 4Cyl. (EJD)                      9 = 2.0L 4 Cyl. (ECC) G = 2.4L 4Cyl. (EDV)                      B = 2.4L 4 Cyl. (EDZ) U = 2.2L 4 Cyl. Turbo Diesel (EDJ)
9	Check Digit	
10	Model Year	5 = 2005
11	Assembly Plant	T = Toluca
12 thru 17	Vehicle Build Sequence	Model Year Assembly Sequence

## BODY CODE PLATE INTERPRETATION

The Body Code Plate is located on the Left Front Side Shield or Wheel Housing or the Upper Radiator Support. The Plate contains 7 rows of data. The bottom 3 rows are reserved for the specific information as depicted below. Starting at the fourth row (following the reserved portion), other Sales Codes used to build a specific vehicle are listed in the ascending order by ALPHA sequence.

1	2	3	4	5	6	7	8	9	10	11	12		13	14	15		16	17	18	19	20	21
22	23	24		25	26	27	28		29	30	31	32		33	34	35	36		37	38	39	
40	41	42		43		44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

1-12	VEHICLE ORDER NUMBER
13-15	VINYL ROOF CODE/DOOR COMBO CODES
16-18	VEHICLE SHELL CAR LINE
19	PRICE CLASS
20-21	BODY TYPE
22-24	PAINT PROCEDURE
25-28	PRIMARY PAINT
29-32	SECONDARY PAINT
33-36	INTERIOR TRIM CODE
37-39	ENGINE CODES
40-42	TRANSMISSION CODES
43	MARKET CODES
44-46	VEHICLE IDENTIFICATION NUMBER (VIN) For definition of the Elements and the individual position see Vin Plate Defined.

## ABBREVIATIONS

A/C	Air Conditioner
ABS	Anti-Lock Brakes System
AR	As Required
ATC	Automatic Temperature Control
AWD	All Wheel Drive
BUX	Built Up Export
CV	Constant Velocity
DOHC	Dual (or Double) OverHead Cam
EFI	Electronic Fuel Injection
EGR	Exhaust Gas Recirculation
ECU	Electronic Control Unit
FWD	Front Wheel Drive
HEX	HEXagon
HCU	Hydraulic Control Unit
I/D	Inside Diameter
L	Liter
LED	Light Emitting Diode
MAP	Manifold Absolute Pressure
MPH	Miles Per Hour
O/D	Outside Diameter
P/S	Power Steering
PSI	Pounds per Square Inch
PSF	Pounds per Square Foot
PRNODL	Park, Reverse, Neutral, Overdrive, Drive, Low
PRNDL	Park, Reverse, Neutral, Drive, Low
PTO	Power Take Off
RFI	Radio Frequency Interference
RPM	Revolutions Per Minute
RTV	Room Temperature Vulcanizer (sealant)
T/BODY	Throttle BODY
U/BODY	Under BODY
SOHC	Single OverHead Cam
PAR	Paint As Required

