





STAB PANEL

Dodge Charger

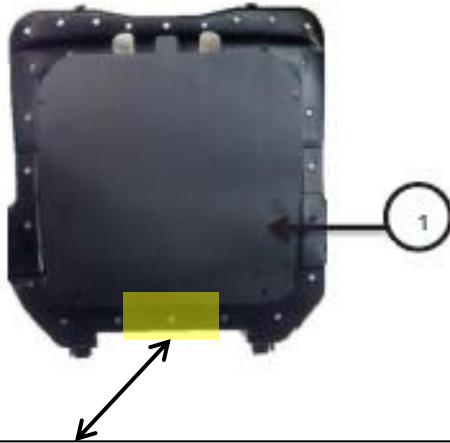

Left Hand Stab Panel has molded-in code: L0278793 at this location.

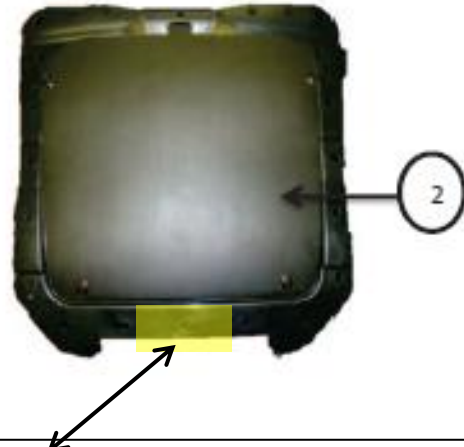

Right Hand Stab Panel has molded-in code: L0282303 at this location.

Item	Quantity	Description
1	1	Stab Panel Assembly LH
2	1	Stab Panel Assembly RH

1. Remove the headrest and polythene cover



2. Unhook the bottom two hooks and unzip the two sides



3. Take stab panel and seat back retainer assembly
(ITEM 1 : Driver side)
(ITEM 2 : Passenger side)
Engage two tabs at the top, bottom and center of the seat



4. Make sure to move the seat fabric to the middle of the seat which is at the bottom



5. Put the seat back panel in its place and engage zippers
On both side



6. Re-hook the bottom of seat back panel



7. Re-hook the bottom seat panel and place the head rest
Back to its original position

